



3243 North California Avenue, Chicago, IL 60618

DIPLOMAT SHOWCASE™ WARMER MANUAL

**120 Volt,
Single Phase, 60 Hz**



**READ and UNDERSTAND these operating and safety
instructions before operating this machine.**

**CRETORS CUSTOMER SERVICE - 800-228-1885
773-588-1690**

SAFETY FIRST



The information in this manual is essential for the safe installation and maintenance of your Diplomat Showcase™ machine. The manual must be read and understood before installing, operating or maintaining this equipment or equivalent training must be provided.



"The employer shall instruct each employee in the recognition and avoidance of unsafe conditions and the regulations applicable to his work environment to control or eliminate any hazards or other exposure to illness or injury. Ref.: 29 CFR 1926.20 (b)(4)(a)(2)



It is understood that safety rules within individual companies vary. If a conflict exists between the safety procedures contained in this manual and the rules of a using company, the more stringent rule should take precedence.

This manual is filled with timesaving and money-saving information regarding your Diplomat Showcase™ Warmer. There is nothing, however, more important than the safety aids and warnings found throughout this document.

If you have any questions, feel free to contact our Customer Service Department at 800-228-1885.

Additional copies of this manual can be obtained from Customer Service.

Cretors warranties this machine to be free of defects in parts, materials and workmanship for one year. Please complete and return the registration card to activate your warranty. If you have questions concerning the warranty, please contact Customer Service at 800-228-1885.

I INTRODUCTION

This manual contains information regarding your Diplomat Showcase™ Warmer. There is nothing, however, more important than the safety aids and warnings that are found throughout this document. The Safety Alert Symbol is used to identify topics of primary safety concern wherever they appear. Furthermore, a separate section has been included which deals exclusively with operation and accident prevention.

If, after reviewing this manual, anything is unclear or technical problems are encountered, contact the dealer from whom you purchased your machine for assistance; and, if there are any additional questions, feel free to contact our Customer Service Department at 800-228-1885. Always have the serial number of your machine available to assist in obtaining the correct information.

II SAFETY ALERT SYMBOL

The symbol shown below is used to call your attention to instructions concerning your personal safety and the safety of others. Watch this symbol. It points out important safety precautions. It means "ATTENTION! Become Alert! Your personal safety is involved!" Read the message that follows and be alert to the risk of personal injury or death.



III PURPOSE OF MANUAL



This instruction manual is intended to familiarize owners with the operation and safety procedures associated with your Diplomat Showcase™ Warmer.



This manual should be kept available to operating and maintenance personnel.



A person who has not read and understood all operating and safety instructions is not qualified to operate the machine.

IV PRODUCT IDENTIFICATION

CRETORS DIPLOMAT SHOWCASE™ WARMER

MODEL	DSWA__-__- DIPLOMAT SHOWCASE™ WARMER
Electrical:	120Volt, 60 Cycle 2000 Watts
Dimensions:	28in x 36in x 43.25in
Net Weight:	225 Lbs. (102 Kgs)

V THEORY AND OBSERVATIONS OF WARMER OPERATION

The Diplomat Showcase™ Warmer is designed for any concession application that requires extra warmer storage for freshly popped corn or nacho chips.

VI CONTROL SWITCH

LIGHT SWITCH	-Turns lights and sign(s) ON/OFF
CORNDITIONER SWITCH	-Turns cabinet heat ON/OFF

VII INSTALLATION INSTRUCTIONS

1. Location

Choose a location for your Diplomat Showcase™ Warmer to maximize the ease of operation and maintenance procedures. Check your local building and fire codes for location restrictions.

2. Power Supply

Check the nameplate to determine the required power supply.



Connect your warmer only to the correct power source.



Make certain the Rocker Switches on the warmer are in the 'OFF' position when plugging into power source.

VIII OPERATING INSTRUCTIONS



1. The lighted sign and cabinet lights are turned ON/OFF by pressing the switch marked "Lights".



2. The cabinet heat is turned ON/OFF by pressing the switch marked "Cornditioner".

Both switches are located on the operator's lower left-hand side.

3. This warmer is designed to warm popcorn or nacho chips. Do not use warmer to heat or hold any other products.



4. Operate your warmer only under sanitary condition (SEE SANITATION INSTRUCTIONS).

For service technician: Make sure the machine is unplugged. To replace the halogen bulb, remove the hardware, bracket and sign. Remove the bulb from the mounting bracket and pull out old bulb from the socket. Install new bulb by pushing bulb pins into socket, and inserting bulb back into the mounting bracket.

For service technician: Make sure the machine is unplugged. To replace the fluorescent bulb, remove the hardware, bracket and sign. Remove the bulb from the sockets by rotating and pull. Install new bulb by pushing bulb pins into socket and rotating.

IX SANITATION INSTRUCTIONS



Be certain the machine is turned 'OFF' and power is unplugged before sanitizing this machine. Failure to do so could result in injury.



CAUTION: HOT. Do not clean **appliances** until they have been given sufficient time to cool. Failure to do so may result in serious burns.

The cabinet is **to** be cleaned **with a damp cloth** and any good grade glass or household cleaner suitable for stainless steel surfaces. A cleaning agent that is acceptable for food contact surfaces is recommended. **Do not soak unit with water. Avoid wetting of inside of electrical enclosure.**

This appliance(s) shall not be cleaned with a water jet.