

Deluxe Servalot

Part No. 40111
Revised June 1996

Instruction Manual


Models #2185, #2186, #2187, #2188 and #2189



 **GOLD MEDAL[®]**
FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

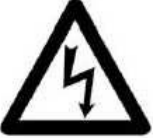	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION

This instruction manual and parts listing covers the following Deluxe Servalot warmer models: #2185, #2186, #2187, #2188 and #2189.

Clean your Deluxe Servalot thoroughly upon arrival to remove any debris left from manufacture (see "CARE AND CLEANING" instructions).

CHECKING SHIPMENT

Your new Deluxe Servalot is shipped completely assembled, ready to operate. After removing the corrugated carton from the machine, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

Model No.	Voltage	Hertz	Wattage
#2186 & #2188	120	60	90
#2189	120	60	111

A switch on the bottom pan controls both the heater and light bulb. The strip heater on the underside of the bottom pan keeps popcorn/nachos warm and fresh in the cabinet. A yellow shatterproof light bulb also serves as to warm popcorn/nachos while illuminating the top portion of the cabinet.

CAUTION: When replacing the 11 WATT yellow light bulb, do not use a larger watt bulb or a bulb that is not shatterproof.

OPERATION

LOADING PRODUCT

To load your Deluxe Servalot, remove the lid and pour in product. For the best display, fill your warmer $\frac{3}{4}$ full.

LOCATION

Always pick a good location for your warmer, so that the public can see the attractive display. A front counter location is usually best.


CARE AND CLEANING

The aluminum frame of the Deluxe Servalot is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. NEVER use abrasives on aluminum framework. The plexiglass should also be kept clean. Clean the inside and outside of the plexiglass with a soft cloth and a non-abrasive cleanser. **CAUTION:** Do NOT immerse the machine in water! The heating element and wiring were not designed for immersion, water will ruin the heater and cause short circuits in the wiring.

INSTALLING DECAL

Decals have been shipped with your warmer and are to be installed at the top of the customer side. Install only one decal. The decal you choose should be the food type you will warm. Before installation, clean the area with a mild soap and water. Thoroughly dry the area with a soft cloth. Put the decal in place and remove backing a bit at a time, squeegee as you go. If air bubbles occur, puncture and smooth down with a squeegee.

SUCTION FEET KIT INSTALLATION

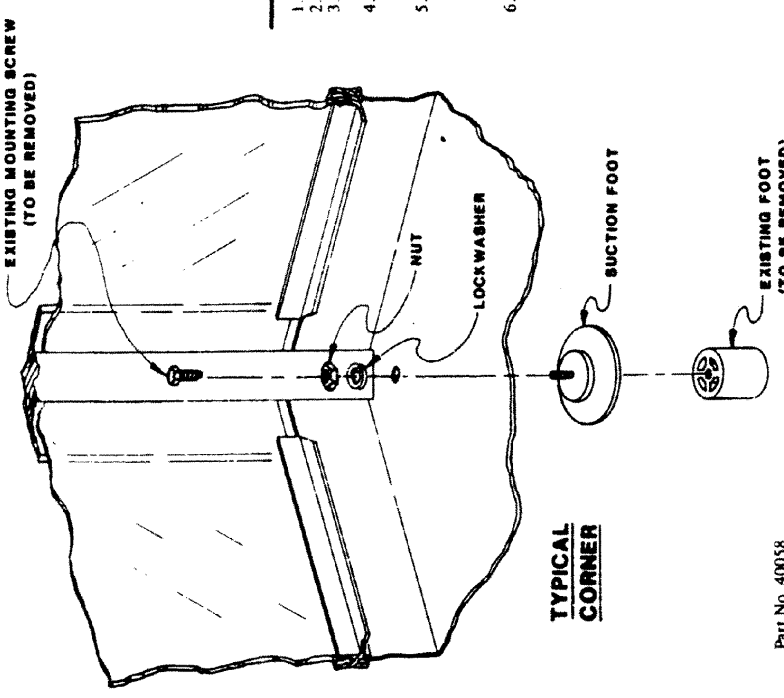

TYPICAL CORNER

INSTALLATION INSTRUCTIONS			
SUCTION FEET KIT			
INSTALLATION ON P-60 POPCORN MACHINES	INSTALLATION ON DELUXE SERVALOT WARMERS	DO NOT SCALE DRAWING	SCALE ~~~~~
1. Unplug your machine. 2. Remove drop panel. 3. Remove corn pan from P-60. 4. Remove the 4 feet by removing the 4 mounting screws with a 1/4" wrench. 5. Install suction cups in place of feet. Put on lockwashers & nuts and tighten with a 11/32" wrench. (Caution: Do not overtighten.) 6. Reassemble your machine.	1. Unplug your machine. 2. Remove drop panel. 3. Remove mounting screws from warmer pan on Dix Servalot using a small screwdriver. Lift the warmer pan up, but do not take out. (Caution: Wiring is connected to the warmer pan, lift carefully as to not pull the wires loose.) 4. Remove the 4 feet by removing the mounting screws with a 1/4" wrench. 5. Install suction cups in place of feet. Put on lockwashers & nuts and tighten with a 11/32" wrench. (Caution: Do not overtighten.) 6. Reassemble your machine.	TOLERANCES: ALL DIMENSIONS ± .015 UNLESS OTHERWISE SPECIFIED	PART NO. 40058 D.W.
 GOLD MEDAL PRODUCTS CO. 1828 FREEMAN AVE. - CINCINNATI, OHIO 45214			

Part No. 40058
 Kit Includes:
 4) Suction Feet
 4) No. 8 - 32 Hex Nuts
 4) No. 8 Lockwashers

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

ORDERING SPARE PARTS

1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:


Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

DELUXE SERVALOT WARMER ASSEMBLY

Models #2185, #2187 and #2189

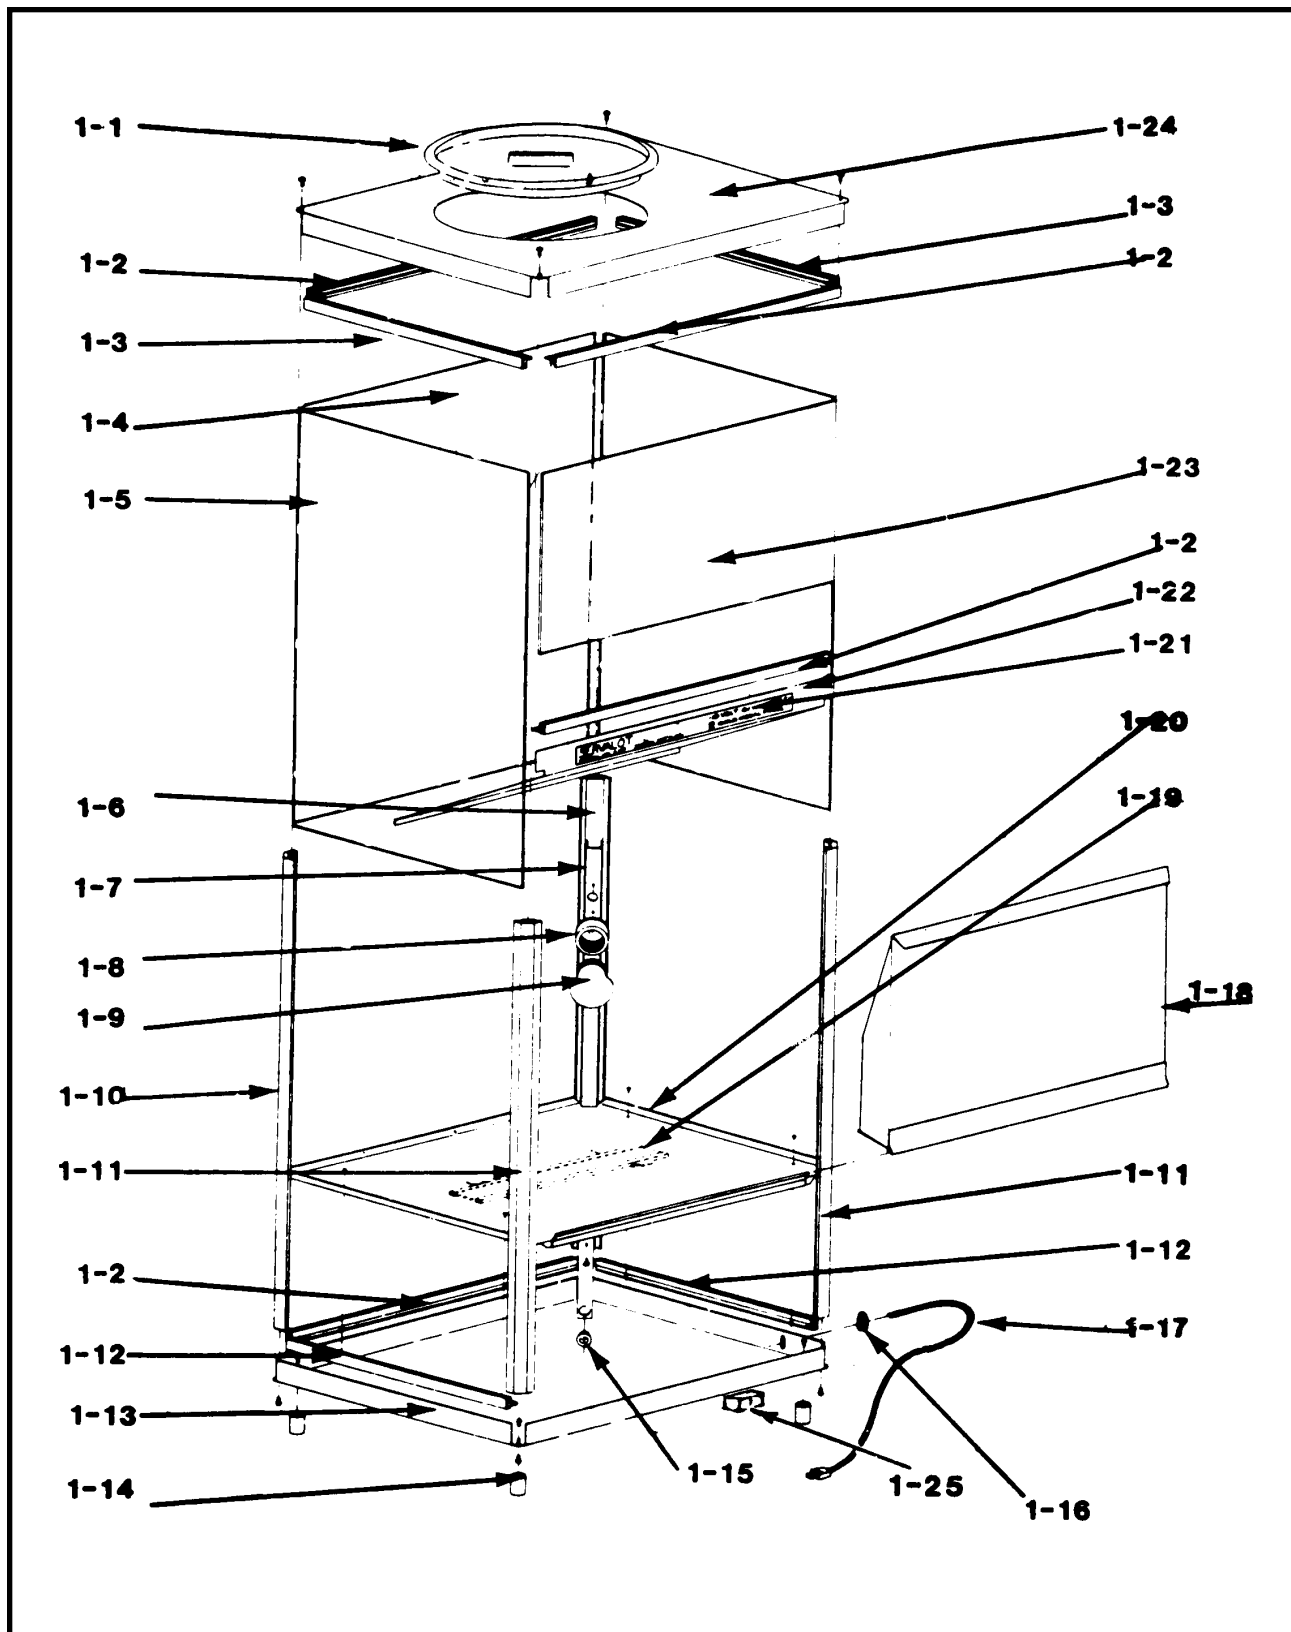


PARTS LIST – DELUXE SERVALOT WARMER ASSEMBLY

Models #2185, #2187 and #2189

Item No.	Model #2185 Part No.	Model #2187 Part No.	Model #2189 Part No.	Description
1-1	40002	40002	40002	Lid
1-2	40039	40039	49004	Top Retaining Extrusion
1-3	40039	40039	49004	Top Retaining Extrusion
1-4	40013	40013	49018	Plexiglas Front
1-5	40014	40014	49018	Plexiglas Side
1-6	40006	40006	40062	Left Front Corner Post
1-7	40011	40011	40064	Light Support Channel
1-8	40012	40012	40012	Light Receptacle
1-9	11035	11035	11035	Light Bulb, 11 Watt
1-10	40005	40005	49006	Right Front Corner Post
1-11	40007	40007	40063	Rear Corner Post
1-12	40021	40021	40068	Bottom Retaining Extrusion
1-13	40323	40323	40057	Bottom Pan
1-14	47328	47328	47328	Glide
1-15	75328	75328	75328	Bushing, $\frac{5}{16}$ " I.D. Plastic
1-16	76026	76026	76026	Strain Relief SR-6P3-4
1-17	22038	22038	22038	Power Supply Cord
	40110	40110	40110	Black Wire Nut
1-18	40118	40118	40123	Drop Panel Assembly
1-19	40031	44026	40031	Heat Element
1-20	40117	40117	40124	Warmer Pan
1-21	40041	40054	40070	Dataplate
1-22	40009	40009	40065	Baffle
1-23	40015	40015	n/a	Plexiglas Rear
1-24	40003	40003	40060	Top Pan
1-25	40324	40324	40324	Rocker Switch
	40043	n/a	40060	Nachos Decal
	40053	40052	n/a	Popcorn Bowl Decal
	49123	49123	n/a	Crutch Tip
	40050	40050	40050	Protective Angle Light Bulb
	47561	47561	47561	Magnetic Catch

DELUXE SERVALOT WARMER ASSEMBLY

Models #2186 and #2188

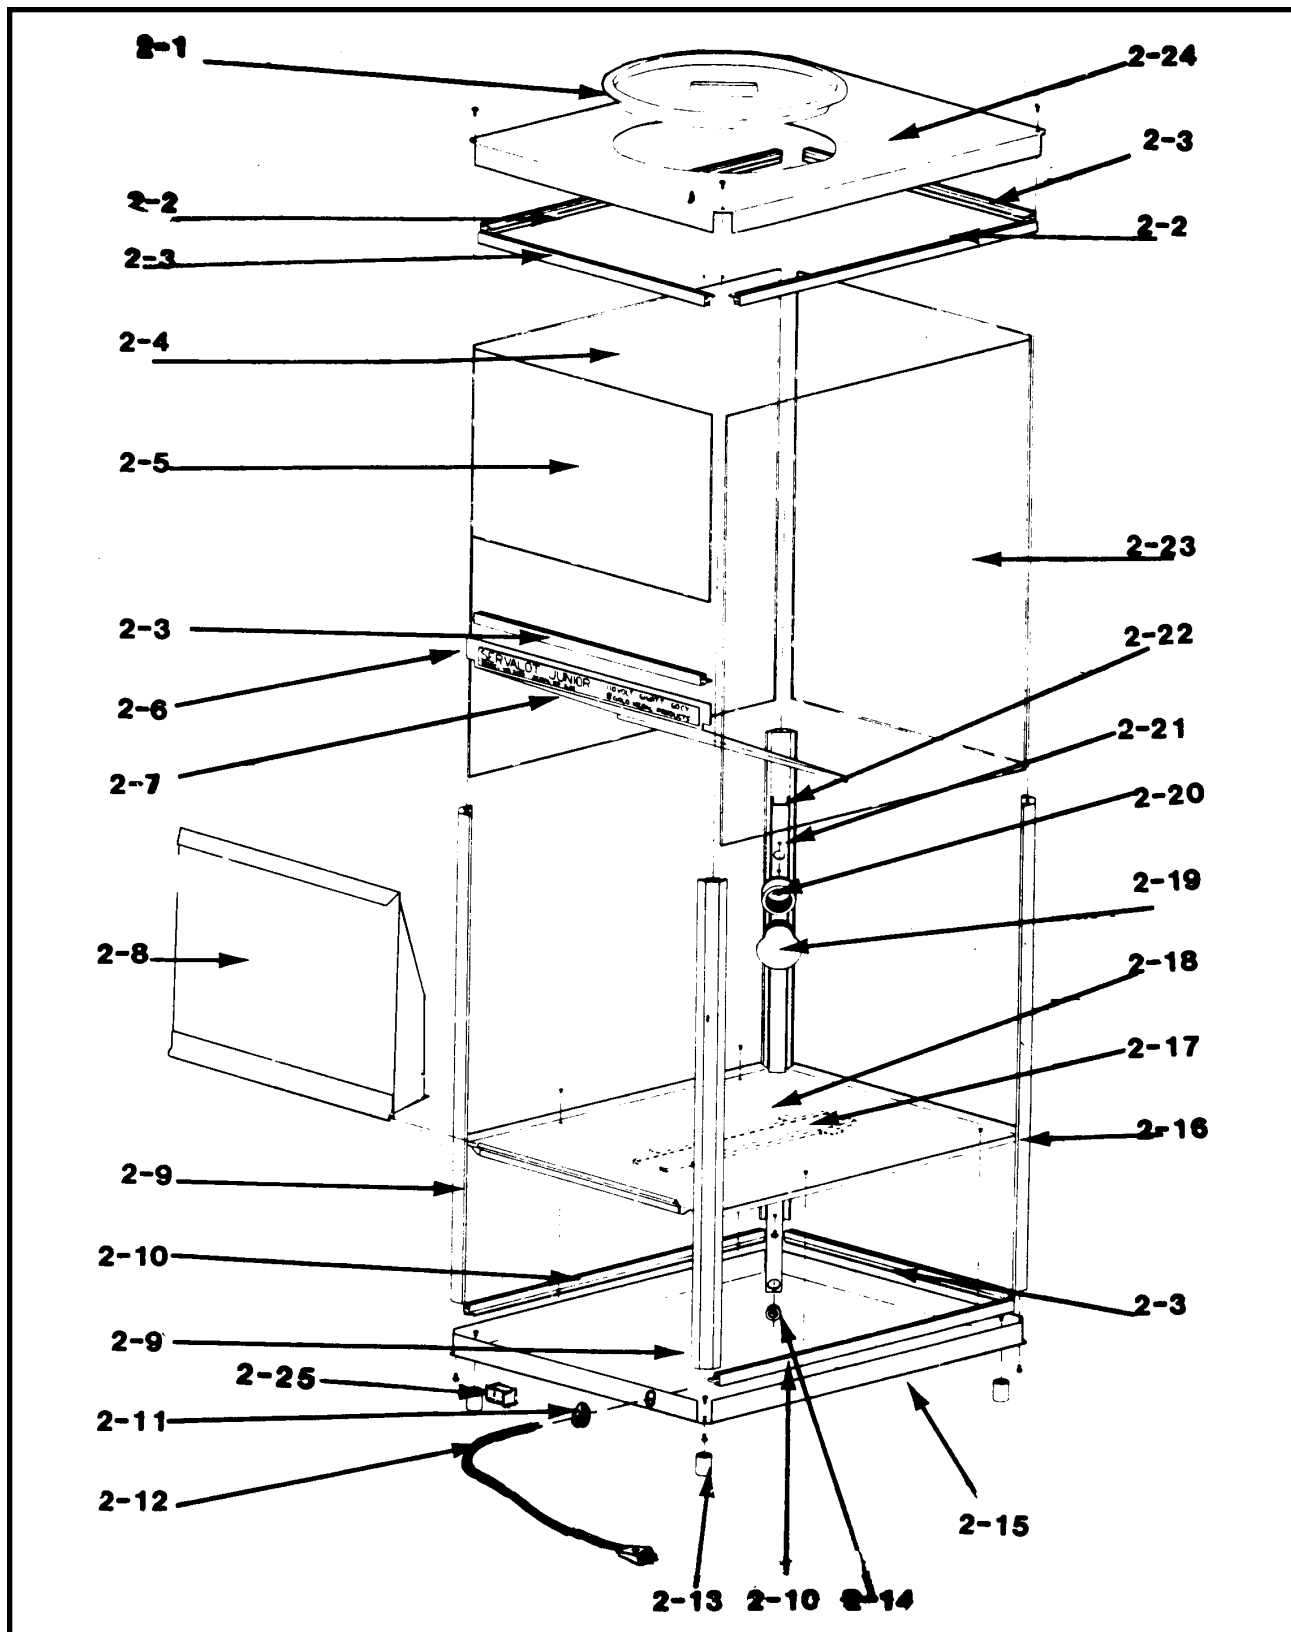


PARTS LIST – DELUXE SERVALOT WARMER ASSEMBLY

Models #2186 and #2188

Item No.	Model #2186 Part No.	Model #2188 Part No.	Description
2-1	40008	40008	Lid
2-2	40039	40039	Top Retaining Extrusion
2-3	40039	40039	Top Retaining Extrusion
2-4	40013	40013	Plexiglas Side
2-5	40016	40016	Plexiglas Rear
2-6	40010	40010	Baffle
2-7	40042	40055	Dataplate
2-8	40107	40107	Drop Panel Assembly
2-9	40007	40007	Rear Corner Post
2-10	40039	40039	Bottom Side Extrusion
2-11	76026	76026	Strain Relief
2-12	22038	22038	Power Supply Cord
2-13	47328	47328	Glide
2-14	75328	75328	Bushing, $\frac{5}{16}$ " I.D. Plastic
2-15	40322	40322	Bottom Pan
	40110	40110	Black Wire Nut
2-16	40005	40005	Right Front Corner Post
2-17	40031	44026	Heat Element
2-18	40109	40109	Warmer Pan Assembly
2-19	11035	11035	Light Bulb, 11 Watt
2-20	40012	40012	Light Receptacle
2-21	40011	40011	Light Support Channel
2-22	40006	40006	Left Font Corner Post
2-23	40014	40014	Plexiglas Front
2-24	40174	40174	Top Pan
2-25	40324	40324	Rocker Switch
	40044	n/a	Nachos Decal
	n/a	40053	Popcorn Bowl Decal
	49123	49123	Crutch Tip
	40050	40050	Protective Angle Light Bulb
	47561	47561	Magnetic Catch

WIRING SCHEMATIC

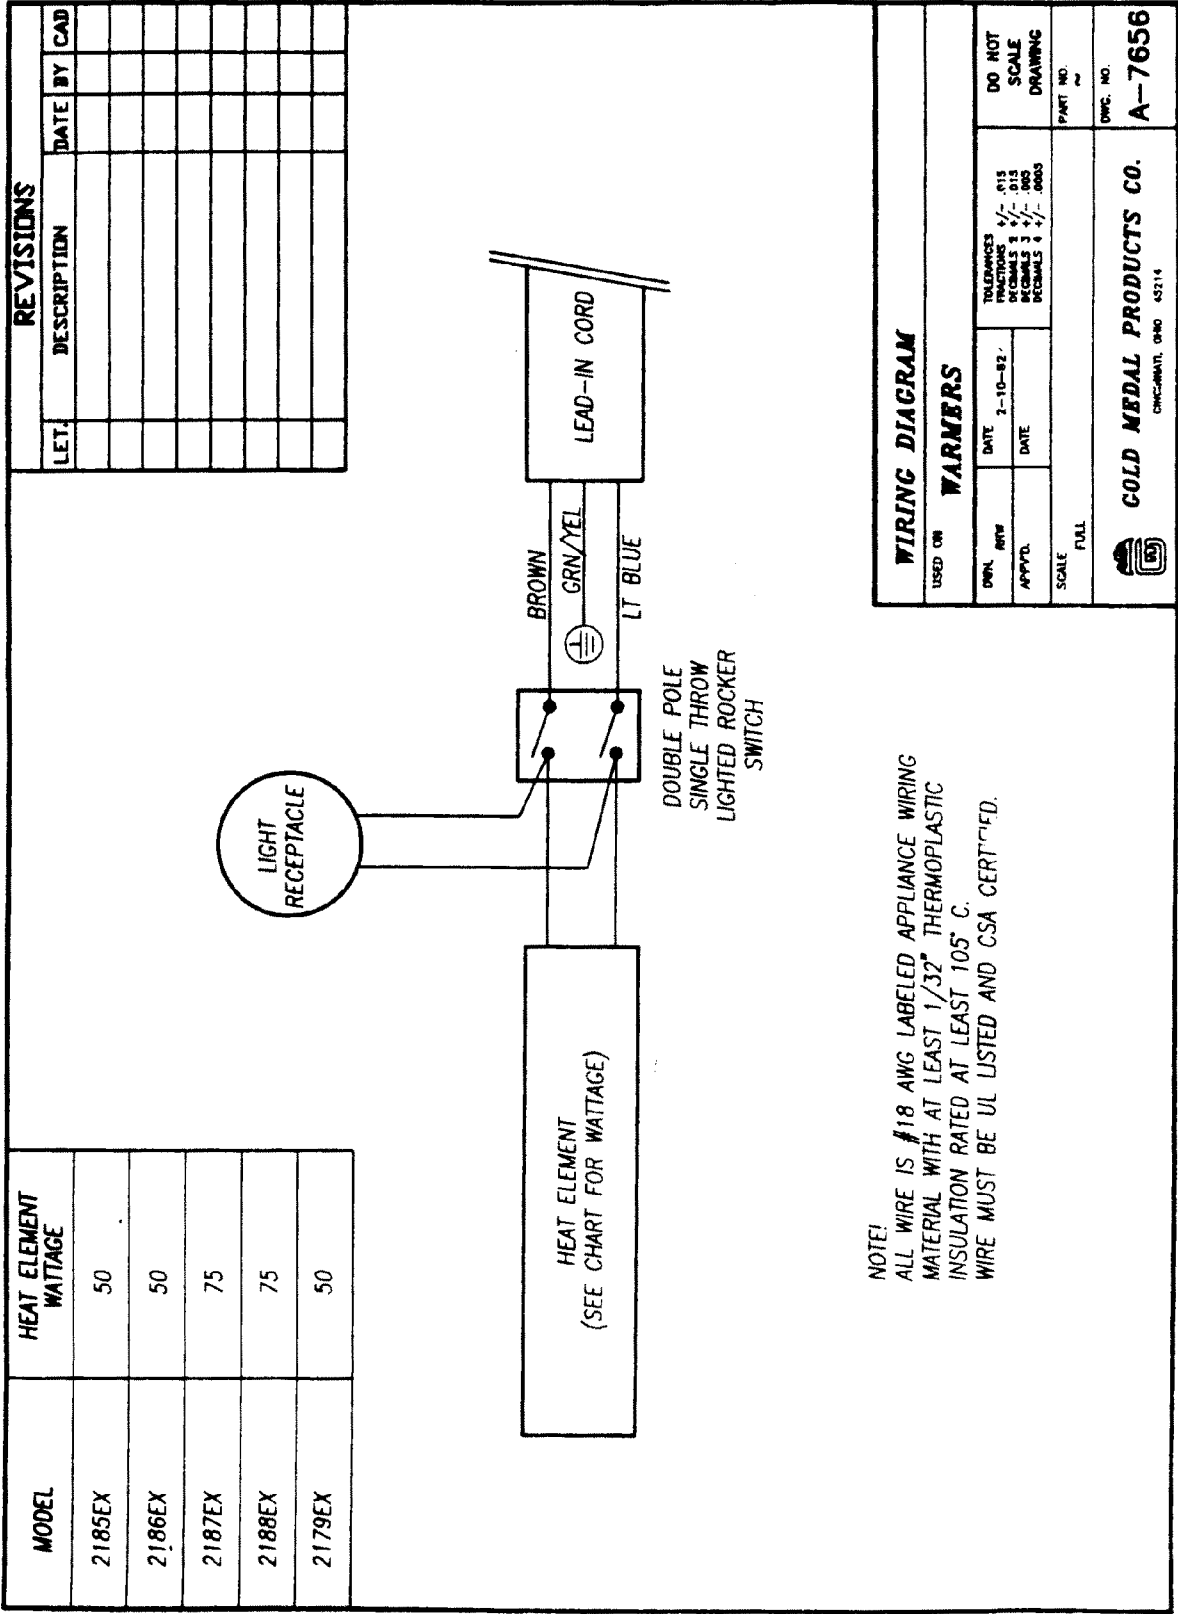


WIRING SCHEMATIC

Machines manufactured after 11/91

[illegible]

WARMER MODEL No.	HEAT ELEMENT WATTAGE
2185	50
2186	50
2187	75
2188	75
2179	50

NOTE: MODEL 2179 IS NOT U.L. LISTED

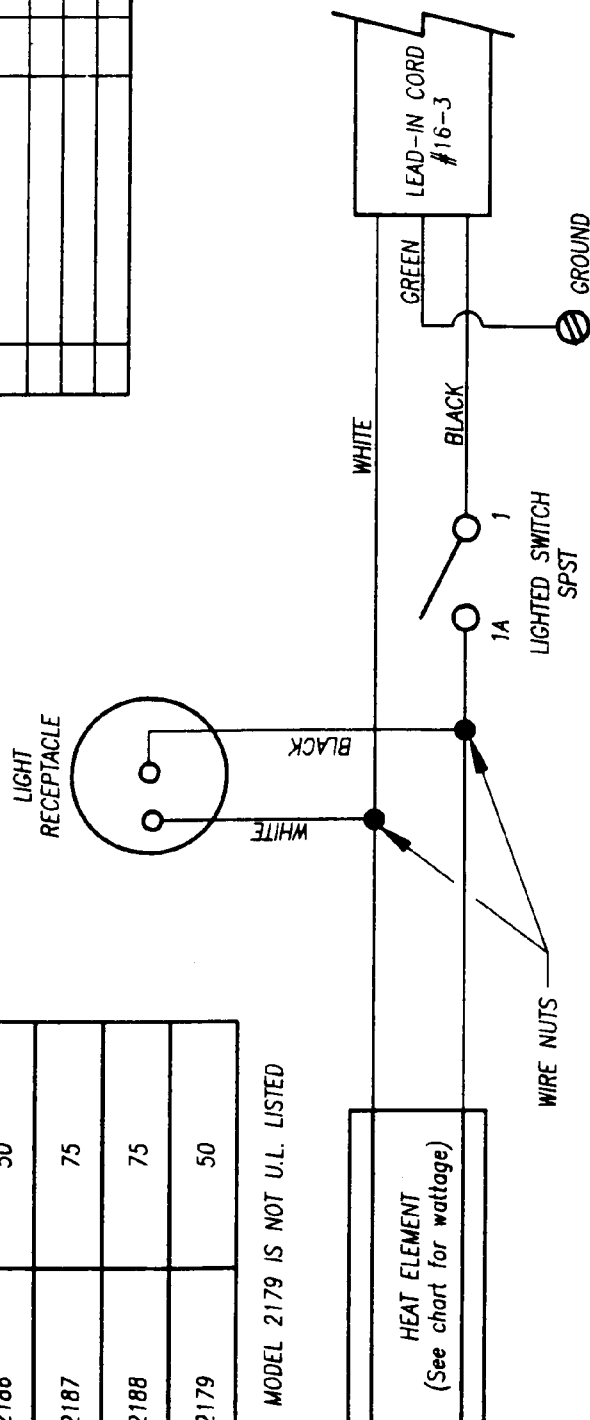

NOTE: ALL WIRE IS # 18 GA. LABELED APPLIANCE
WIRING WITH AT LEAST 1/32" THERMOPLASTIC
INSULATION RATED 105°C EXCEPT AS NOTED
WIRE MUST BE U.L. LISTED AND C.S.A. CERTIFIED

[illegible]

FOR MACHINES MFG'D. BEFORE 11/91 SEE
WIRING DIAGRAM DWG. # A-4398

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, OH 45241-4807 USA