

Mini-Condiment Warmer

Part No. 38123
Revised June 1996

Instruction Manual


Models #2192, #2202, #2203 and #2204



 **GOLD MEDAL**®
FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

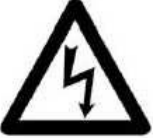	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE


The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

OPERATING INSTRUCTIONS


These dispensers are designed to use a standard No. 5 Tin that your product came in as the insert bowl (an optional stainless steel insert bowl is available from your nearest Gold Medal dealer. Order No. 2199, see Price List).



1. Place bowl spring in water tank.
2. Fill water tank to the top of the bowl spring with hot water.
3. Place No. 5 Tin or insert bowl into the unit. (Bowl spring should be centered under the container).
4. Place lock ring over container, press down and turn until it locks into unit.
5. Turn switch in Lead-in Cord "ON".
6. Turn heat control to the extreme hot position for quick buildup of heat; after contents are heated, turn the heat control back to desired position.

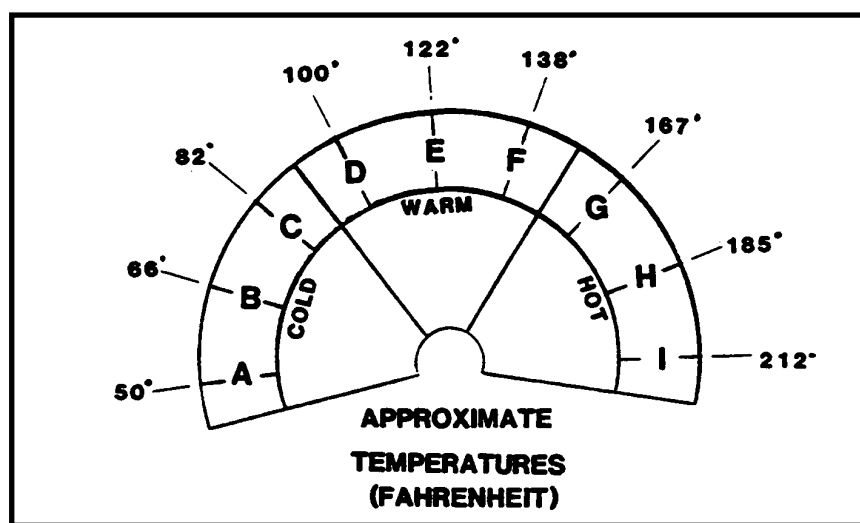

CARE AND CLEANING

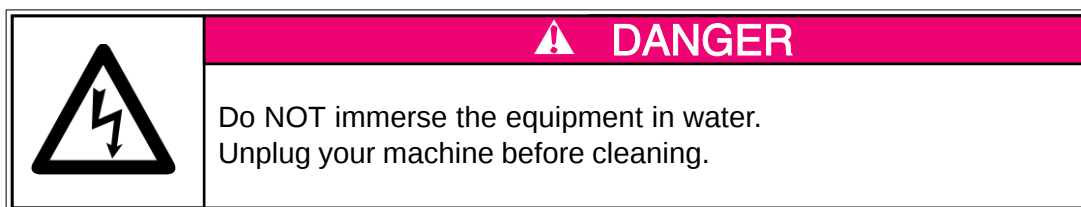

Clean your machine daily. A clean looking well-kept machine is one of the best ways of advertising your product.

Use a mild soap and damp cloth to clean the exterior of the unit. All utensils and insert bowls should be cleaned with a chlorine or iodine type sanitizer to help prevent contamination by microorganisms.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

HEAT ELEMENT and THERMOSTAT REPLACEMENT

1. Remove the knob from the thermostat (Item 26 in Parts List).
2. Remove the back panel (Item 10 in Parts List).
3. Disconnect the wires from the thermostat and/or heating element.
4. Replace worn or broken parts, rewire per wiring diagram and reassemble.

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

MINI-CONDIMENT WARMER ASSEMBLY

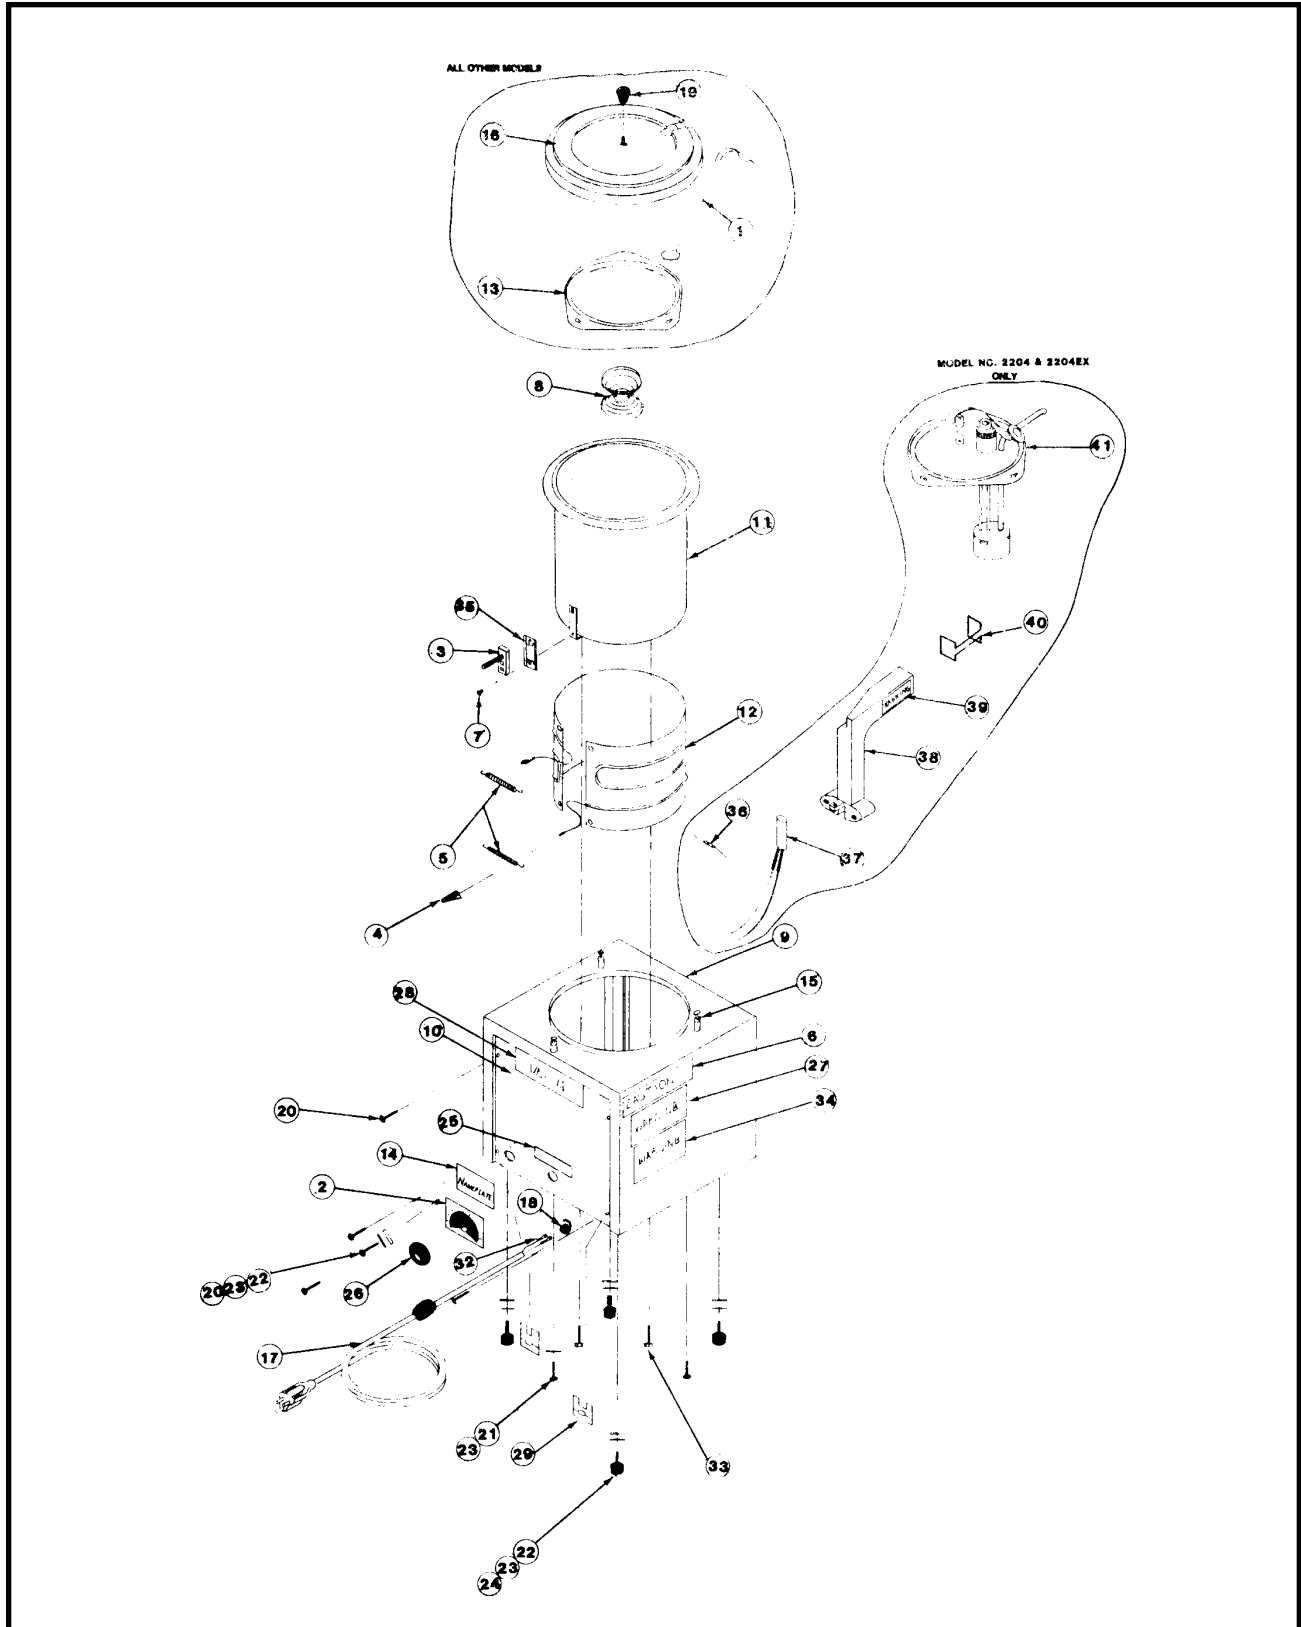


PARTS LIST – MINI-CONDIMENT WARMER


Item No.	Part No.	Description	Quantity
1	38015	2 Oz. Dipper	1
2	38019	Thermostat Cover Label	1
3	38023	Thermostat	1
4	40110	Wire Nut	1
5	38033	Element Spring	2
6	38034	Caution Label (Water Level)	1
7	38087	Screw, #6-32 x $\frac{3}{8}$ " RD. HD. PH.	1
8	38022	Bowl Spring	1
9	38101	Cabinet Assembly	1
10	38104	Back Panel	1
11	38107	Baine Marie Assembly	1
12	38110	Foil Heater 120 Volt, 175 Watt	1
13	38114	Key Lock Ring	1
14	38116	Name Label	1
15	38117	Mount Stud Lock Ring	3
16	38118	Lid Assembly	1
17	40022	Lead-In Cord with Switch	1
18	44073	Strain Relief #SR-6P-4	1
19	47120	Knob Lid Lift	1
20	74142	Screw, #8-32 x $\frac{1}{4}$ " RD. HD. PH.	5
21	74147	Screw, #8-32 x $\frac{1}{2}$ " RD. HD. PH.	3
22	74149	Hex Nut, #8-32	5
23	74150	Washer, #8 Internal Tooth	8
24	87247	Bumper, Rub. Headed Screw	4
25	75212	Insulator	1
26	87049	Knob Heat Control	1
27	47010	Label, Safe Operating Instruction	1
28	76097	Label, Unplug To Clean	1
29	47300	Tinnerman Fastener	4
32	47655	Ring, Terminal	1
33	49177	Screw, #8-32 x $\frac{3}{4}$ " Hex HD.	2
34	74119	Label, Warning Disc. Power	1
35	38127	Thermostat Retainer	1
36	38075	Diode	1
37	38073	Heat Element	1
38	38130	Heater Bracket	1
39	87087	Warning	1
40	38078	Heater Clip	1
41	38140	Pump Assembly	1

PARTS NOT SHOWN

38115	Carton Mini Condiment Warmer
38123	Parts Manual
38121	Decal, Nachos
38122	Decal, Chili
38128	Decal, Bar-B-Que

 

WIRING SCHEMATIC MINI-CONDIMENT WARMER with HEATED SPOUT

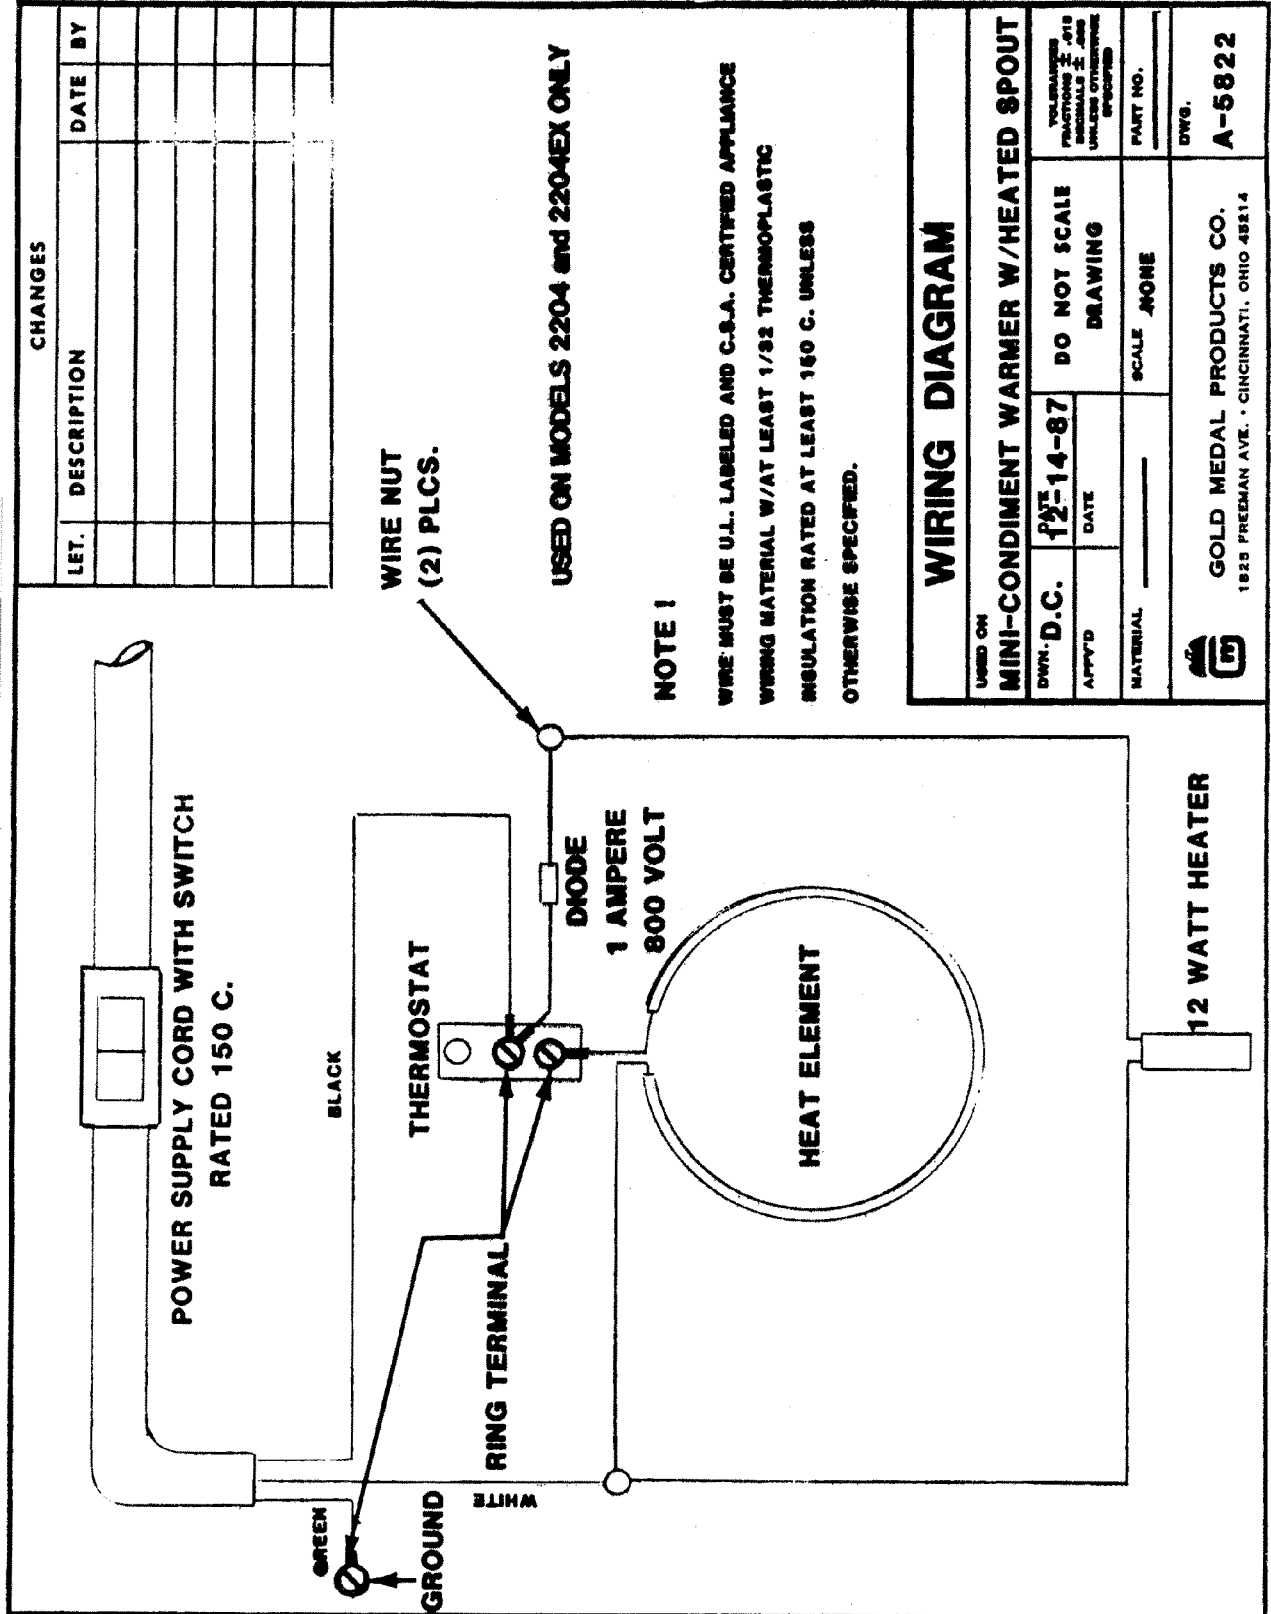

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, OH 45241-4807 USA