



Instruction Manual

Sun Pop[®] Select and SunnyPop[™]

Model No. 2387-00-010, 2389-00-010
2387-00-012, 2389-00-012



Sun Pop Select
Model 2387-00-010



SunnyPop
Model 2387-00-012



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 008_051514
	 DANGER Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. 014_051514
	 WARNING To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces. 013_092414
	 WARNING ALWAYS wear safety glasses when servicing this equipment. 010_010914
	 WARNING No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514
	 WARNING Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862 022_060215

SAFETY PRECAUTIONS (continued)

	 WARNING DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012_010914
---	--

	 WARNING This machine is NOT to be operated by minors. 007_010914
---	---

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

Sun Pop Select Models:

2387-00-010: 6 oz. Popper with a Sun Pop Select LED lighted sign, and equipped with a PowerOff™ Control feature.


2389-00-010: 8 oz. Popper with a Sun Pop Select LED lighted sign, and equipped with a PowerOff™ Control feature.

SunnyPop Models:

2387-00-012: 6 oz. Popper with a SunnyPop LED lighted sign, and equipped with a PowerOff™ Control feature.

2389-00-012: 8 oz. Popper with a SunnyPop LED lighted sign, and equipped with a PowerOff™ Control feature.

Items Included with this Unit

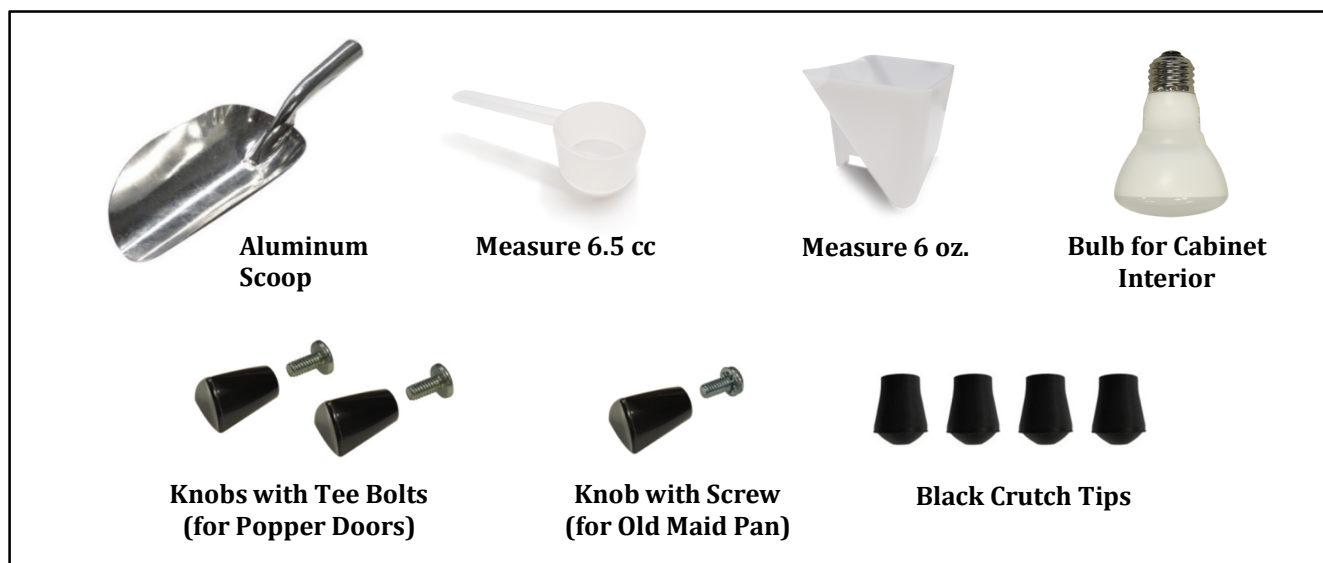

Setup

This unit has been tested at the factory.

1. Remove all packaging and tape prior to operation.
2. Place the unit on a sturdy, level base.
3. The Popper must be installed with a minimum 6" clearance
4. The popper unit has 4 glide feet preinstalled at the factory (reference image shown). Install a Black Crutch Tip on each of the 4 glide feet. Firmly push the crutch tip over the glide until it covers the glide entirely.
5. Door knobs are shipped in the accessories pack located inside the machine. Install a door knob with tee bolt on each popper door (insert tee bolt from interior side of door, then fasten knob on exterior side).
6. Install the knob with screw on the old maid pan.
7. Carefully install the light bulb (do not over-tighten) into the lamp holder located in the cabinet interior. Ensure the unit is OFF and unplugged before installing or changing the bulb (reference the Electrical Requirements section).



General image shown for reference.

Electrical Requirements

The following power supply must be provided:

2387-00-010, 2387-00-012: 120 V~, 925 W, 60 Hz

2389-00-010, 2389-00-012: 120 V~, 1270 W, 60 Hz

	 DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 008_051514

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. DO NOT use a grounded to un-grounded receptacle adapter (where applicable).
5. Install the unit in a level position.

	 CAUTION
	If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard. 039_080614

OPERATING INSTRUCTIONS

Controls and Their Functions

KETTLE HEAT SWITCH


Two position, ON/OFF lighted rocker switch - supplies power to the heating elements in the popping kettle. The green switch light ON indicates there is power to the kettle heating element.

KETTLE MOTOR SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the kettle agitator motor. The Kettle Motor Switch **MUST** be ON at all times when there is popcorn (popped or unpopped) in the kettle. The green switch light ON indicates there is power to the agitator motor.

LIGHTS/WARMER SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the popcorn sign, interior cabinet light, and heat element for the corn pan.

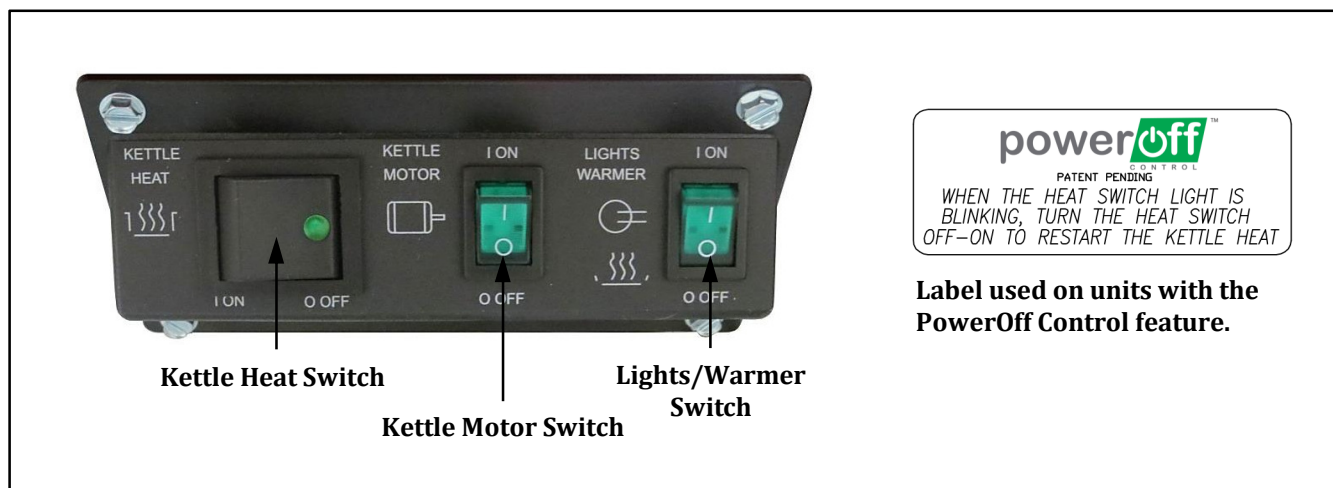

POWEROFF CONTROL

The PowerOff Control feature will automatically turn the kettle heat off after 15 minutes of idle time (no popcorn popped). The PowerOff Control will prevent the heat element and thermostat from cycling OFF-ON if the Kettle Heat Switch is left on. This feature saves electrical power and extends the life of the kettle heating element and thermostat.

- When the Kettle Heat Switch is turned ON, and the kettle thermostat switches OFF, the PowerOff Control's 15 minute timer starts; the 15 minute timer resets each time a batch of popcorn is popped.
- The small green neon light in the Kettle Heat Switch will blink OFF-ON to indicate the kettle has been automatically turned OFF.
- To restart the kettle heating, cycle the Kettle Heat Switch OFF-ON.

Popping Corn

This section describes instructions for popping Standard (salted popcorn).

Amount of Popcorn and Oil

Your new popper is equipped with a corn, salt, and oil measure. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer and does not leave black deposits in your kettle like other oils. Use only top quality, fresh popcorn from reputable suppliers.

Ingredient amounts for popping Standard Popcorn:

Kettle Size	Popcorn Charge	Oil Charge	Flavacol (Salt)
6 oz.	6 oz. (177 ml)	2 oz. (59 ml)	1/2 Tblsp. (7.5cc)
8 oz.	8 oz. (237 ml)	1/3 cup (79 ml)	3/4 Tblsp. (10cc)

For best results use Mega-Pop® 6 oz. premeasured pouches (Item# 2836).

For best results use Mega-Pop® 8 oz. premeasured pouches (Item# 2838).

Popping Standard (Salted) Popcorn

1. Turn the Lights/Warmer, Kettle Heat and Kettle Motor Switches ON.
2. To determine when the kettle is ready to pop corn (about 4 minutes), test pop three kernels of corn and one ounce (30 ml) of popping oil. When the kernels pop, the kettle is ready for use.
3. Lift the kettle lid and load the Mega-Pop® premeasured popcorn and oil pouch into kettle, or pour in the popcorn and Flavacol, then add oil in the premeasured amounts specified above. Close lid.
4. When the corn has finished popping, gently dump the popcorn.
5. On the final kettle of corn, turn the Kettle Heat Switch OFF just as the lids are forced open by the popping corn. This procedure saves electricity, since the kettle has plenty of heat, and helps eliminate smoke/odor from any oil residue that remains after popping has stopped.
6. When finished popping, make sure KETTLE HEAT and KETTLE MOTOR switches are turned OFF.

NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING CORN!

If Auto Shut-OFF is enabled, unit will automatically shut kettle heat OFF after 15 minutes of idle time (no popcorn popped). To restart kettle heating, cycle the Heat Switch OFF-ON.

Care and Cleaning

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. Always unplug the equipment before cleaning or servicing. 025_020314
---	--

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners). A clean looking, well-kept machine is one of the best ways of advertising your product.

Note: It is extremely important to follow all of the cleaning procedures, otherwise parts damage and equipment failure will result. The warranty does not cover parts that are damaged due to improper cleaning.

Daily Kettle Cleaning Instructions

1. In between batches of popping corn, wipe the kettle with a clean, soft cloth. It is easy to keep the outside of the kettle clean when it is warm and the oil is not baked on.

CAUTION: The hot kettle will cause burns if you touch it with your hand. Allow kettle to cool at least 1 hour before attempting to clean. **DO NOT** use ice or water to cool down a hot kettle! Severe kettle damage will result!

	 WARNING To avoid serious burns, DO NOT touch the kettle while it is hot! 028_020314
---	---

2. Every night, mix Gold Medal's Heat'n Kleen solution (Item No. 2095), 2 tablespoons per gallon of water. It is not necessary to use the entire gallon at once; only use enough to fill the kettle 1/2 inch deep.
3. Turn the kettle heat ON. When the water starts to boil, turn the kettle heat OFF.
4. Allow to cool for 30 minutes, then dump the solution into a bucket and wipe the inside of the kettle with a clean cloth. Make sure all of the solution goes into the bucket; do not spill any in the interior of the machine.

If the kettle is very dirty, this step may be repeated more than once or allow solution to work overnight. The next morning, dump the solution into a bucket and wipe the inside of the kettle with a clean cloth.

5. With the unit OFF and unplugged, wipe the kettle lead cord with a clean **SLIGHTLY** damp cloth. **DO NOT** get moisture into the kettle lead-in cord, severe damage will result.



Daily Unit Cleaning Instructions

1. With the machine OFF, unplug the unit and allow it to cool before attempting to clean.
2. Make sure to clean all pans/accessories in order to sanitize them before each use.
3. Take a clean, SLIGHTLY damp cloth and wipe excess grease from the glass and cabinet.
4. Wipe the stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).

DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.

5. Clean the glass panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.

Ammonia cleaners will damage the plastic doors. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).


Filter Cleaning Instructions

Your popcorn machine is equipped with an efficient and durable filtration system. The filter should be cleaned every 1-2 weeks to maintain maximum efficiency.

Follow the steps below for proper filter cleaning:


Step 1:

The filter is located on the inside of the popcorn machine directly above the popping kettle.

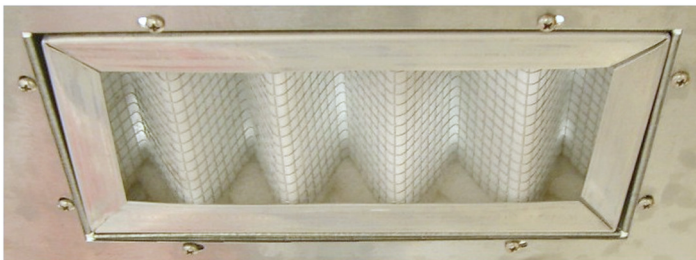


Step 2:

Remove the filter by gripping the filter itself and pulling straight down.

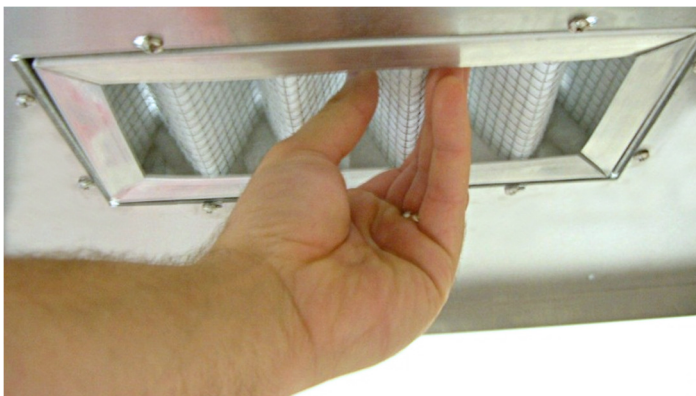

Step 3:

Clean the filter in warm soapy water and allow to dry overnight. Replace the filter by putting it into the slot and pushing upward. Make sure the filter frame is flush with the roof of the machine (as shown above).

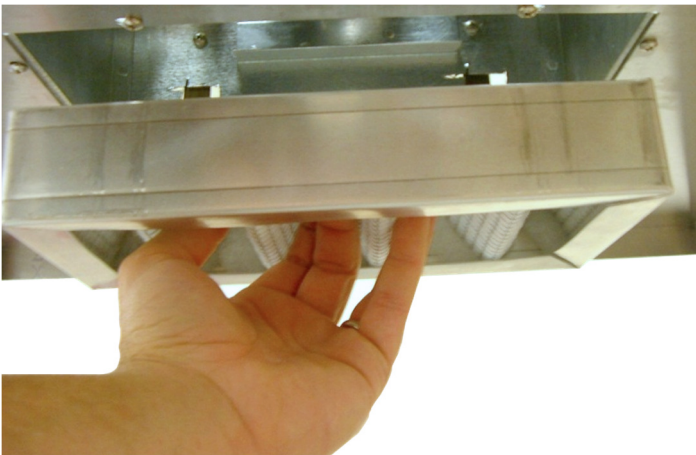



Troubleshooting

Issue	Possible Cause	Solution
Kettle Does Not Heat	A. Power to Unit B. Power to the Kettle C. Kettle Heat Switch D. PowerOff Control E. Heating Element	A. Make sure the lead-in cord is plugged in. B. Make sure the kettle lead-in cord is plugged in. C. Have a qualified service person check the voltage to and from the Kettle Heat Switch; if switch is defective, replace it. D. Units with the PowerOff Control feature, kettle heat will automatically shut OFF after 15 minutes of idle time (no popcorn popped). The small green neon light in the Kettle Heat Switch will blink OFF-ON to indicate the kettle has been automatically turned OFF. To restart kettle heating, cycle the Heat Switch OFF-ON. Reference the Controls and Their Functions section of this manual. E. Heating element in the kettle may be burned out. Check with a qualified service person for inspection/repair.
Long Popping Cycles (Longer than 4 minutes for Salt Popcorn)	A. Low Voltage B. Inadequate Supply Lines C. Inferior Corn	A. If the machine is operated on low voltage, this could cause the kettle not to reach the proper operating temperature. Voltage with kettle turned on, should be at least 112 V. Check with a qualified electrician. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. If the use of an extension cord cannot be avoided then be sure it is no longer than 10 to 12 ft., and is at least 14 AWG wire. B. Inadequately sized electrical supply lines, in addition to being a fire hazard, would also prevent the kettle from reaching the proper operating temperature. Check with a qualified electrician. C. Inferior quality corn would result in longer popping cycles. Use only top quality hybrid popcorn from reputable suppliers. Even then, if you let your corn pick up moisture or dry out, your popping cycles will be slow.



Issue	Possible Cause	Solution
Kettle Agitator Shaft not Rotating	A. Kettle Motor Switch B. Kettle Agitator Shaft/Stir Blade	A. If the kettle agitator shaft is not rotating, DO NOT pop corn. Make sure the Kettle Motor Switch is ON. If the switch is ON, and the shaft is not rotating, the switch or motor may be faulty, contact qualified service personnel for inspection/repair. B. If the kettle agitator shaft is not rotating, DO NOT pop corn. Check the clearance between the kettle bottom and the stir blade; it should be 1/32" (use a dime). To adjust, loosen the set screw in the collars above and below the crossbar and adjust the agitator shaft as necessary. Then re-tighten the set screws in the collars.

MAINTENANCE INSTRUCTIONS

	 DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 008_051514

	 DANGER
	Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. 014_051514

	 WARNING
	No user serviceable parts inside. Refer servicing to qualified service personnel. 011_051514

	 CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR. 027_010914



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


Or, place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676
Fax: (800) 542-1496
(513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com


Replacing Broken Glass

Broken glass panels can be easily replaced. Gold Medal Products Co. does not ship glass. It can be obtained from a local glass shop and always purchase tempered glass.

1. Remove all loose pieces of glass.
2. Pull out magnetic clip to remove (clip located above glass panel in cabinet interior).
3. Remove all rigid glass channels from around the glass to be replaced. Set it aside as it must be reused.
4. Carefully remove the rest of the broken glass.
5. Apply decals (if desired) to the new glass panel.
6. Slide rigid glass channels over the exposed sides and bottom of new glass panel.
7. Carefully slide glass panel up under top ridge, then lower into the bottom channel.
8. Reinstall magnetic clip above the new panel in cabinet interior.

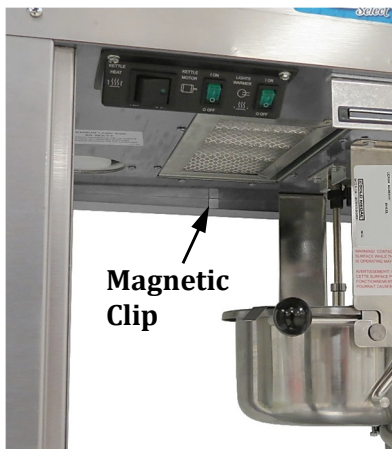

**Remove magnetic clip
located above glass panel.**

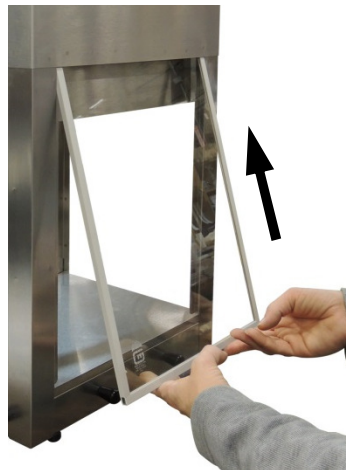

**Slide glass panel up
under top ridge.**



**Lower glass panel into
bottom channel.**


General images shown for glass installation reference only.

GLASS DIMENSIONS (Height X Width X Thickness)

Front and Side Glass: 21 1/4" X 16 7/8" X 1/8" (3 Pieces)



Kettle Assembly Parts Breakdown – 56000 (6 oz.), 58000M (8 oz.)

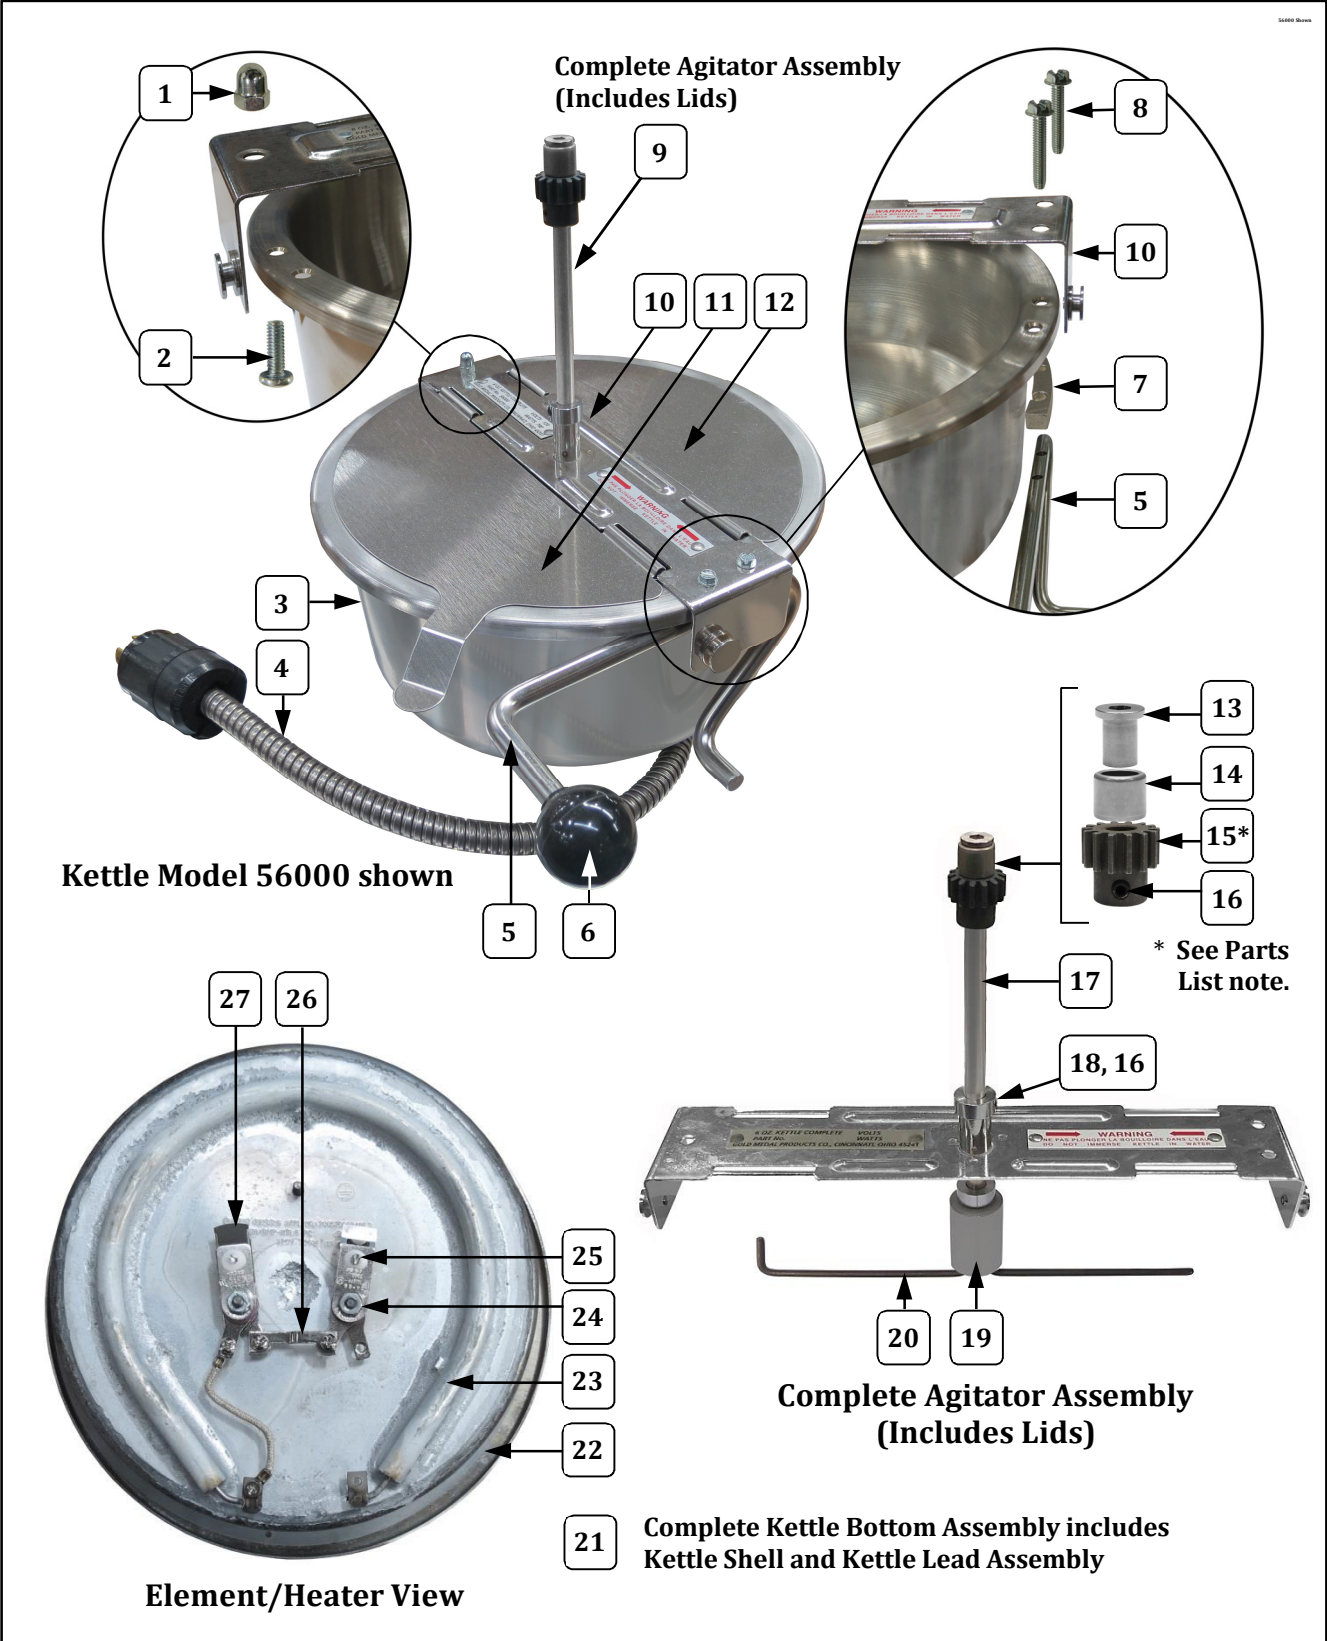




Kettle Assembly Parts List – 56000 (6 oz.), 58000M (8 oz.)


Item	Part Description	Part Number	
		56000	58000M
1	ACORN NUT	47702	47702
2	8-32 X 1/2 PHIL PAN M/S	47141	47141
3	KETTLE SHELL	49431	49431
4	KETTLE LEAD ASSY	49328	49328
5	DUMP HANDLE RH	49314	49314
6	DUMP HANDLE KNOB	47110	47110
7	SPACER (for Dump Handle)	49362	49362
8	#8-32 X 1 SLOT HEX HD	38207	38207
9	LID & AGITATOR ASSY (Complete Assembly)	59103	59908M
10	KETTLE CROSSBAR ASSEMBLY	59102	59907M
11	FRONT LID W/FORMED LIFTER	49017	49017
12	REAR KETTLE LID	49016	49016
13	AGITATOR BEARING HUB	43434	43434
14	NEEDLE BEARING	47106	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear <u>and</u> Kettle Drive Motor Gear as a set.)	47059K	47059K
16	SET SCREW #10-32 X 3/16	41742	41742
17	AGITATOR SHAFT	69710	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649	46649
19	AGITATOR WEIGHT	69715	69715
20	STIR ROD	69714	69714
Kettle Bottom Assembly – Element/Heater View			
21	KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	56000W	58000W
22	KETTLE GASKET	49368	49368
23	KETTLE/HEATER	56006	58008
24	8-32 TOP LOCK NUT (used to hold Thermostats and ground – replace lock nut if removed)	67943	67943
25	450°F THERMOSTAT (includes two 6-32 X 3/16 Screws)	76089	76089
26	THERMOSTAT SHUNT BAR	47193	47193
27	525°F THERMOSTAT (includes two 6-32 X 3/16 Screws)	76702	76702

Cabinet Exterior – Front View

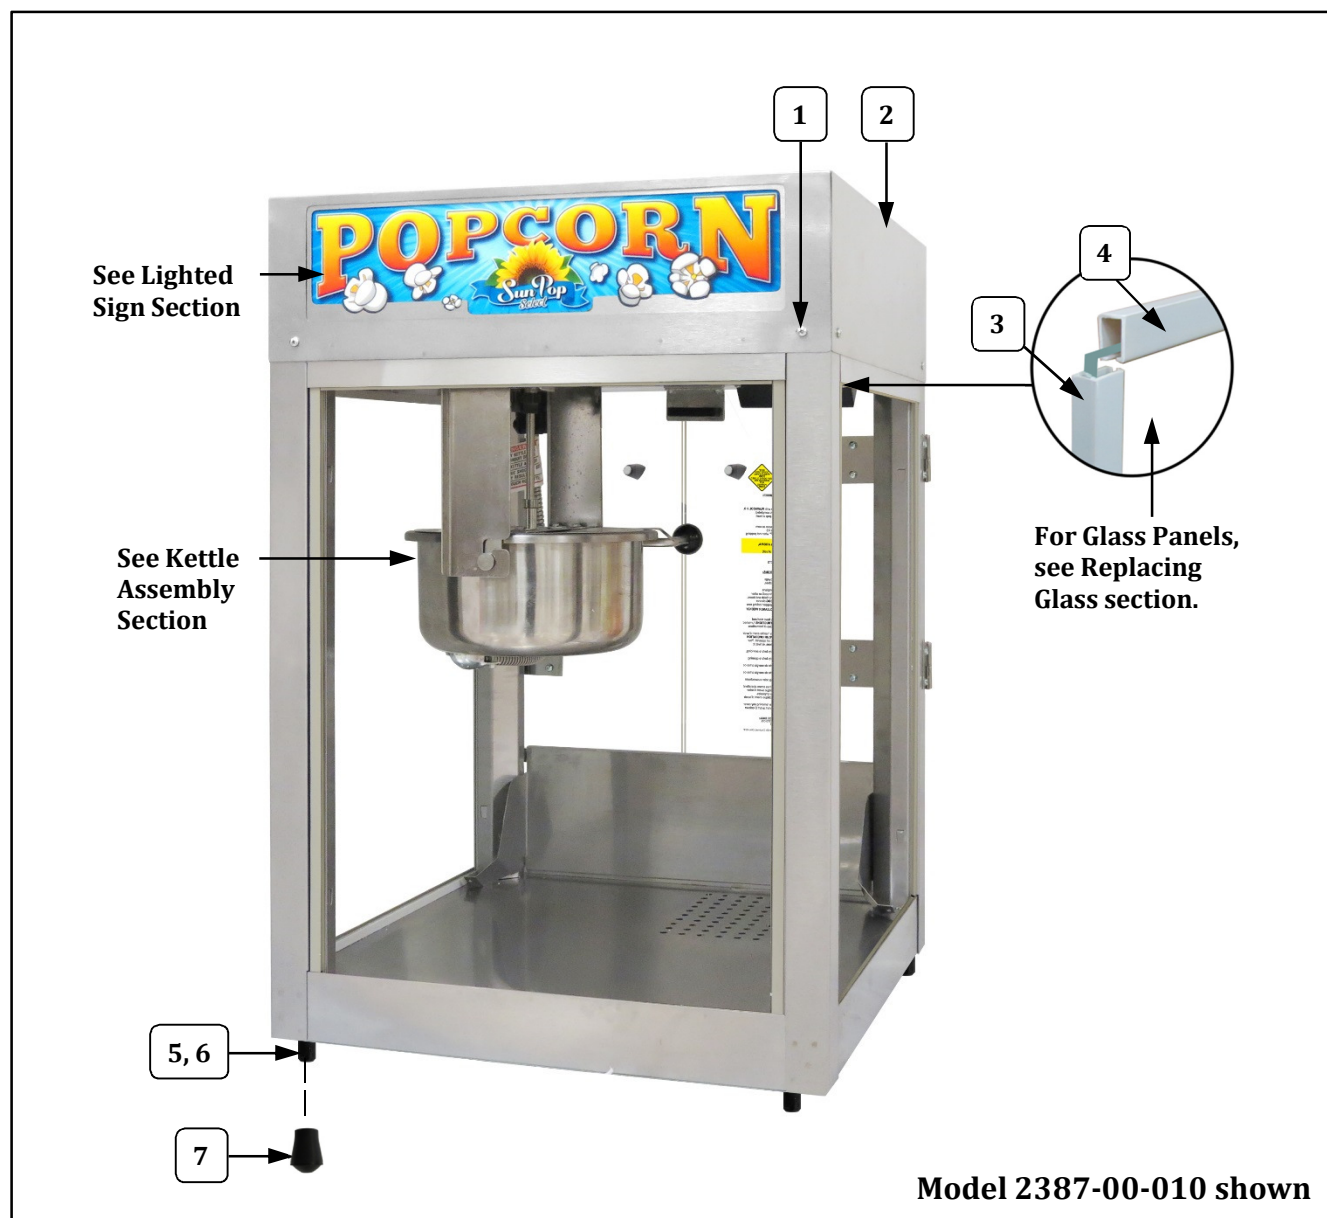


Item	Part Description	Part No.
1	8-32 X 3/8 SLT. HWH M/S	42044
2	DOME WELDMENT	111417
4	21 5/16" GLASS CHANNNEL (used on the side edges of the glass panels)	49844
3	16 1/4" GLASS CHANNEL (used on the top and bottom edges of the glass panels)	74172
5	GLIDE	47328
6	10-24 X 3/4" HEX HEAD	41314
7	CRUTCH TIP BLACK 70 DURO	49123

Cabinet Exterior – Rear View

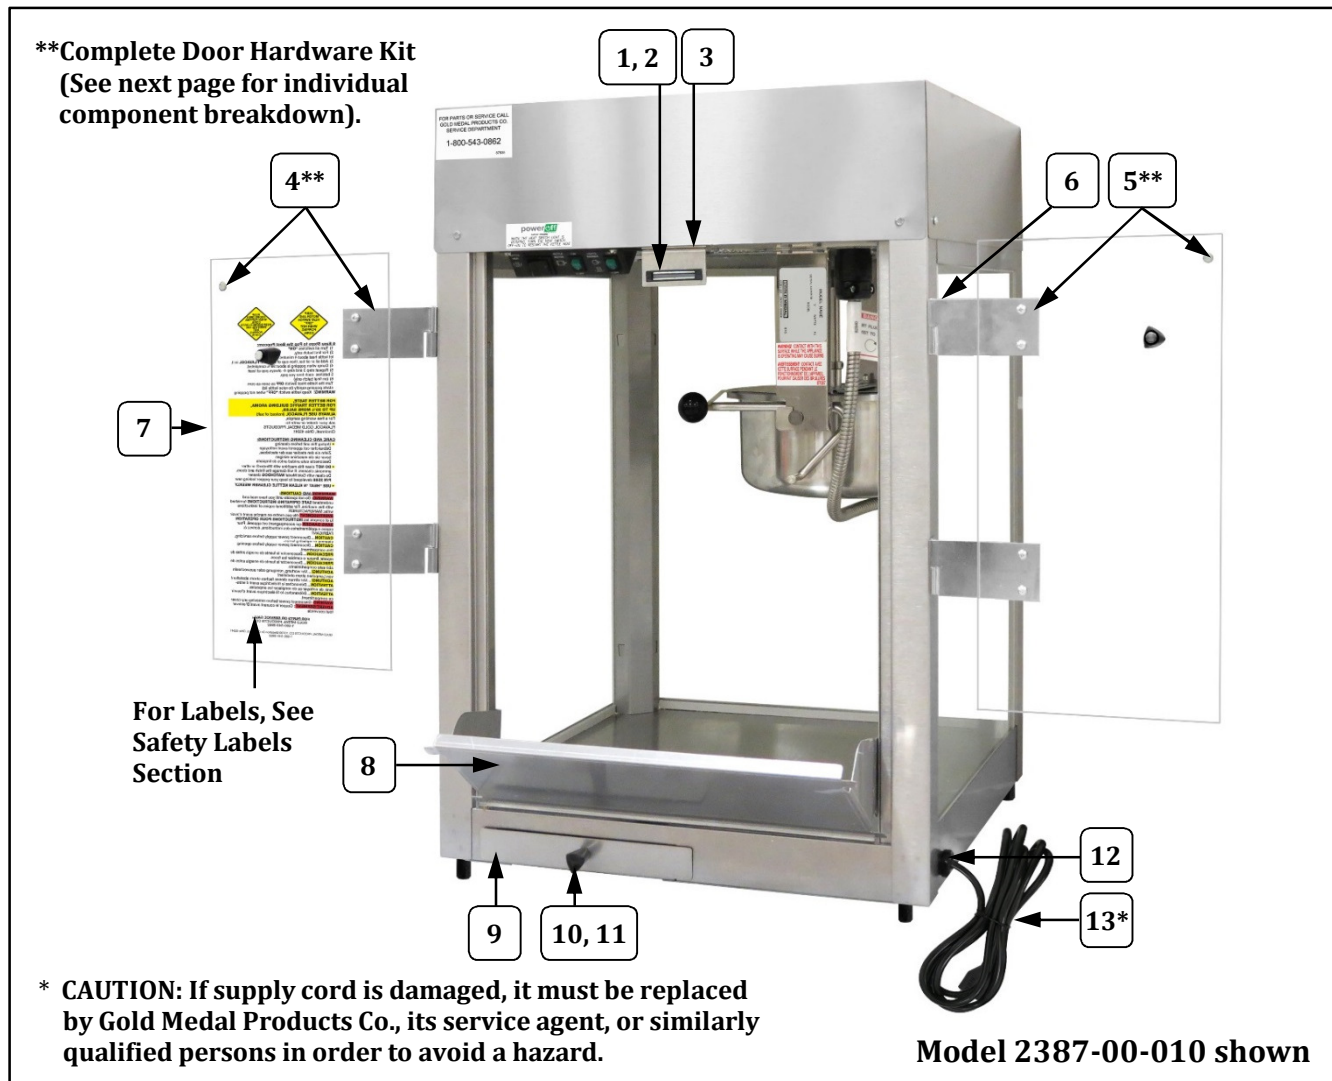


Item	Part Description	Part No.
1	MAGNETIC CATCH	47561
2	MAGNETIC CATCH BRACKET	41340
3	MAGNETIC BRACKET SHIM	38527
4**	COMPLETE LH DOOR HARDWARE KIT	47054
5**	COMPLETE RH DOOR HARDWARE KIT	47055
6	8-32 X 1/2 PHIL PAN M/S (fastens male hinges to the corner posts)	47141
7	DOOR	77774
8	DROP PANEL	77730
9	OLD MAID PAN	49100
10	LID LIFT KNOB	47120
11	8-32" X 3/8" PH PAN W/SEMS	42227
13	STRAIN RELIEF SR-7W-2	67060
12*	LEAD IN CORD 15 AMP PLUG	22038

Door Hardware Kits – Individual Component Breakdown

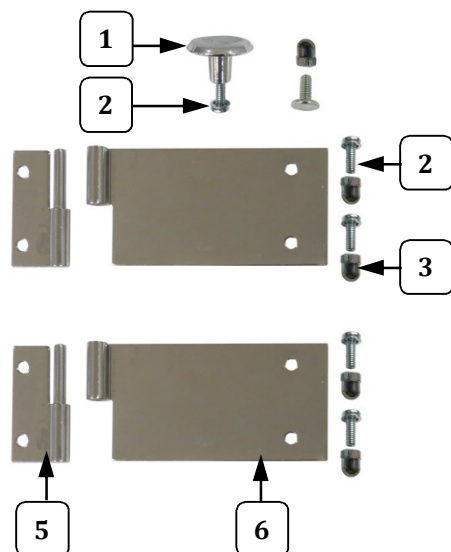


**Complete Left Hand Door
Hardware Kit (P/N 47054)**
(contains all parts shown above)

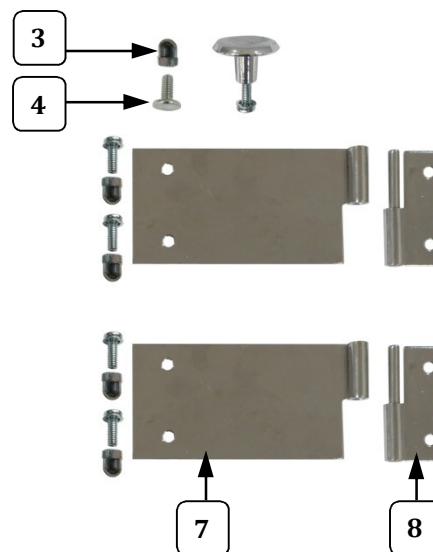

**Complete Right Hand Door
Hardware Kit (P/N 47055)**
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350

Cabinet Interior – Controls View

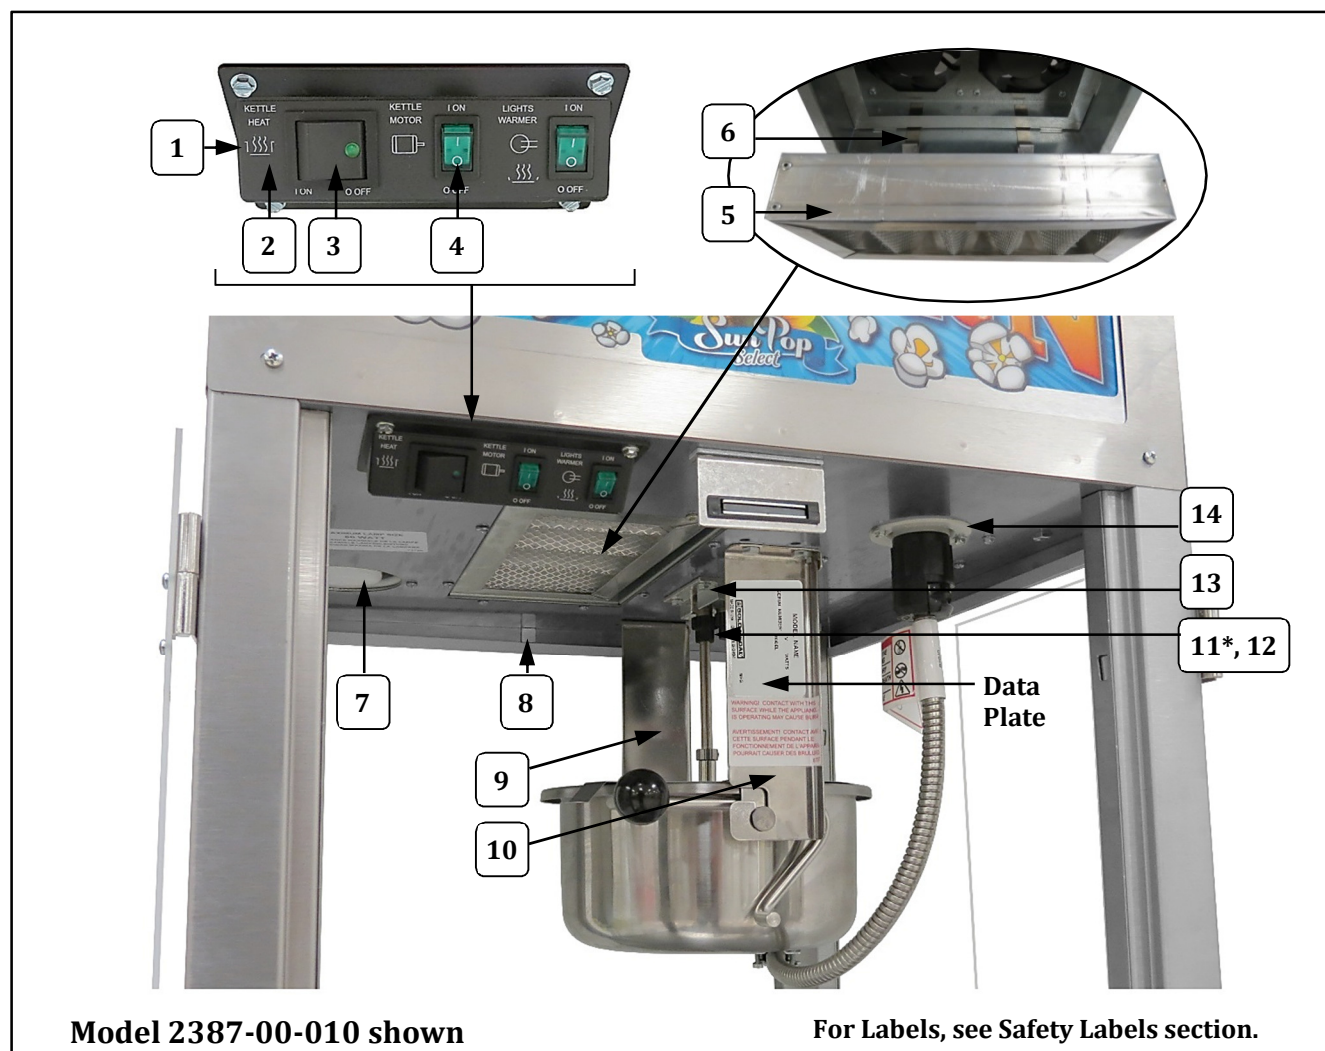


Model 2387-00-010 shown

For Labels, see Safety Labels section.

Item	Part Description	Part No.
1	SMALL SWITCH BOX	48501
2	SMALL SWITCH LABEL	48502
3	GREEN LIGHTED ROCKER SWITCH	42798
4	DPST ROCKER SWITCH	42532
5	5 X 10 X 2 FILTER	69850
6	FILTER SPRING CLIP	62666
7	LED R20 LAMP 120V	111493
8	.5x.5x.1 MAGNET GLASS LOCK	51113
9	REAR HANGER ARM	49009
10	FRONT HANGER ARM	49010
11*	SPUR GEAR KIT (includes 2 gears with set screws. Always replace Agitator Spur Gear <u>and</u> Kettle Drive Motor Gear as a set.)	47059K
12	SET SCREW #10-32 X 3/16	41742
13	GEAR BLOCK	67194
14	L5-15R 15A RECEPTACLE	49330




Cabinet Bottom – Corn Pan Element View

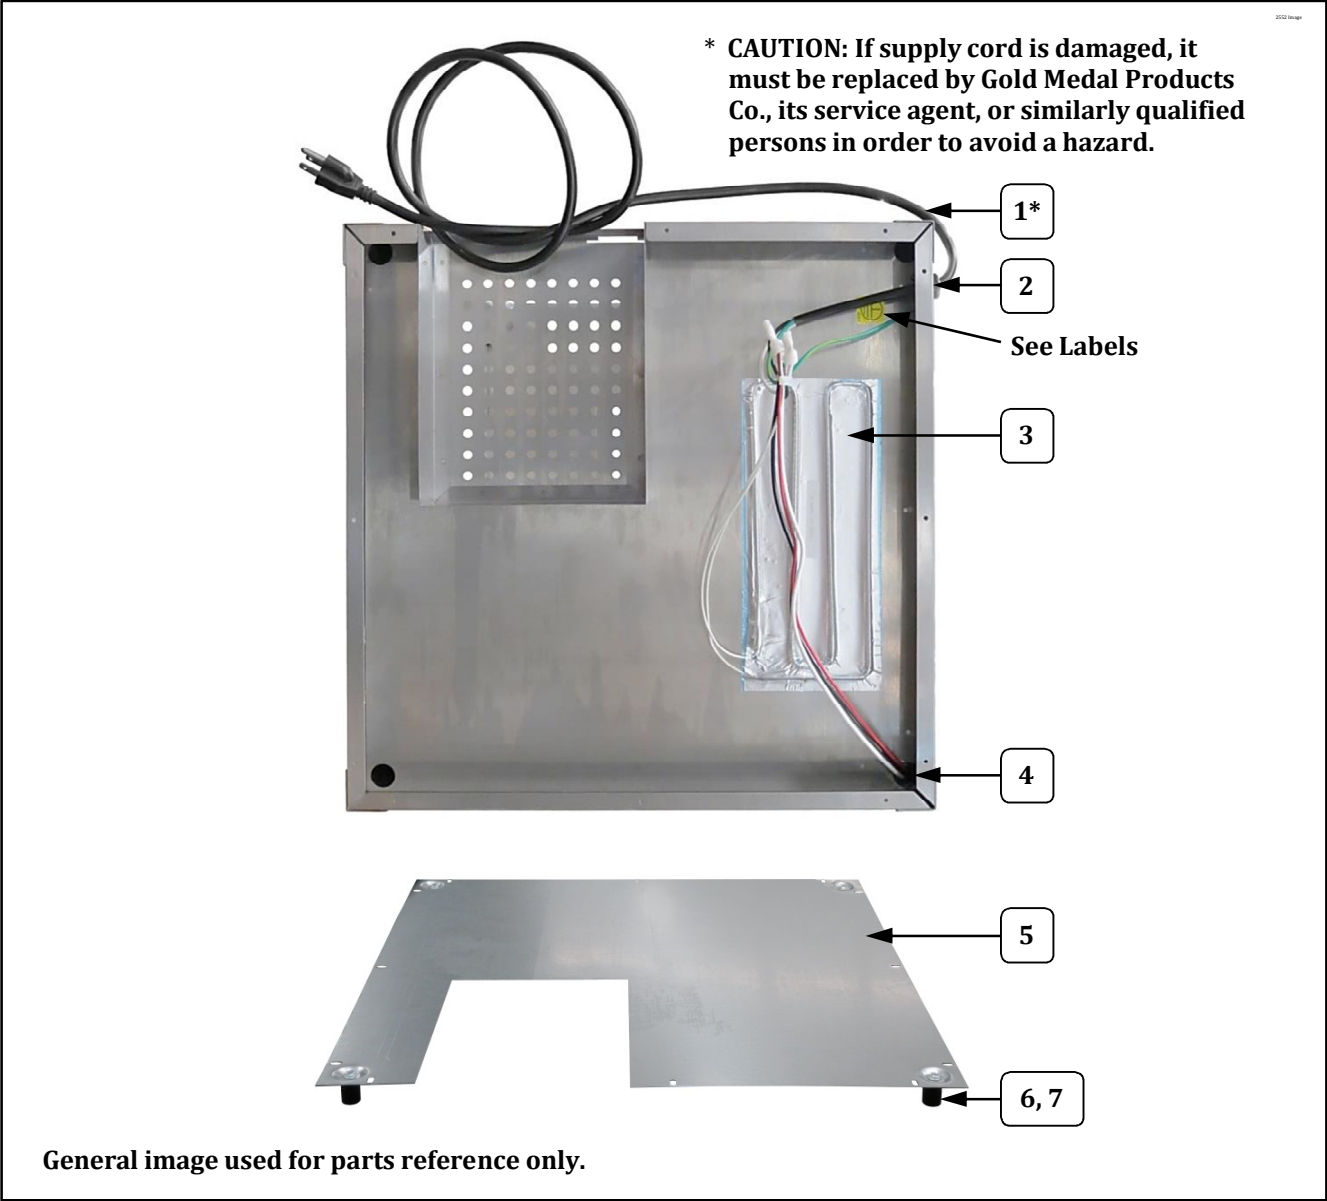

Item	Part Description	Part No.
1	LEAD IN CORD 15 AMP PLUG	22038
2	STRAIN RELIEF	67060
3	120 VOLT FOIL HEATER	40557
4	.875 SNAP BUSHING	45396
5	BOTTOM COVER	49838
6	GLIDE	47328
7	10-24 X 3/4 HEX HD	41314



Motor Plate Assembly

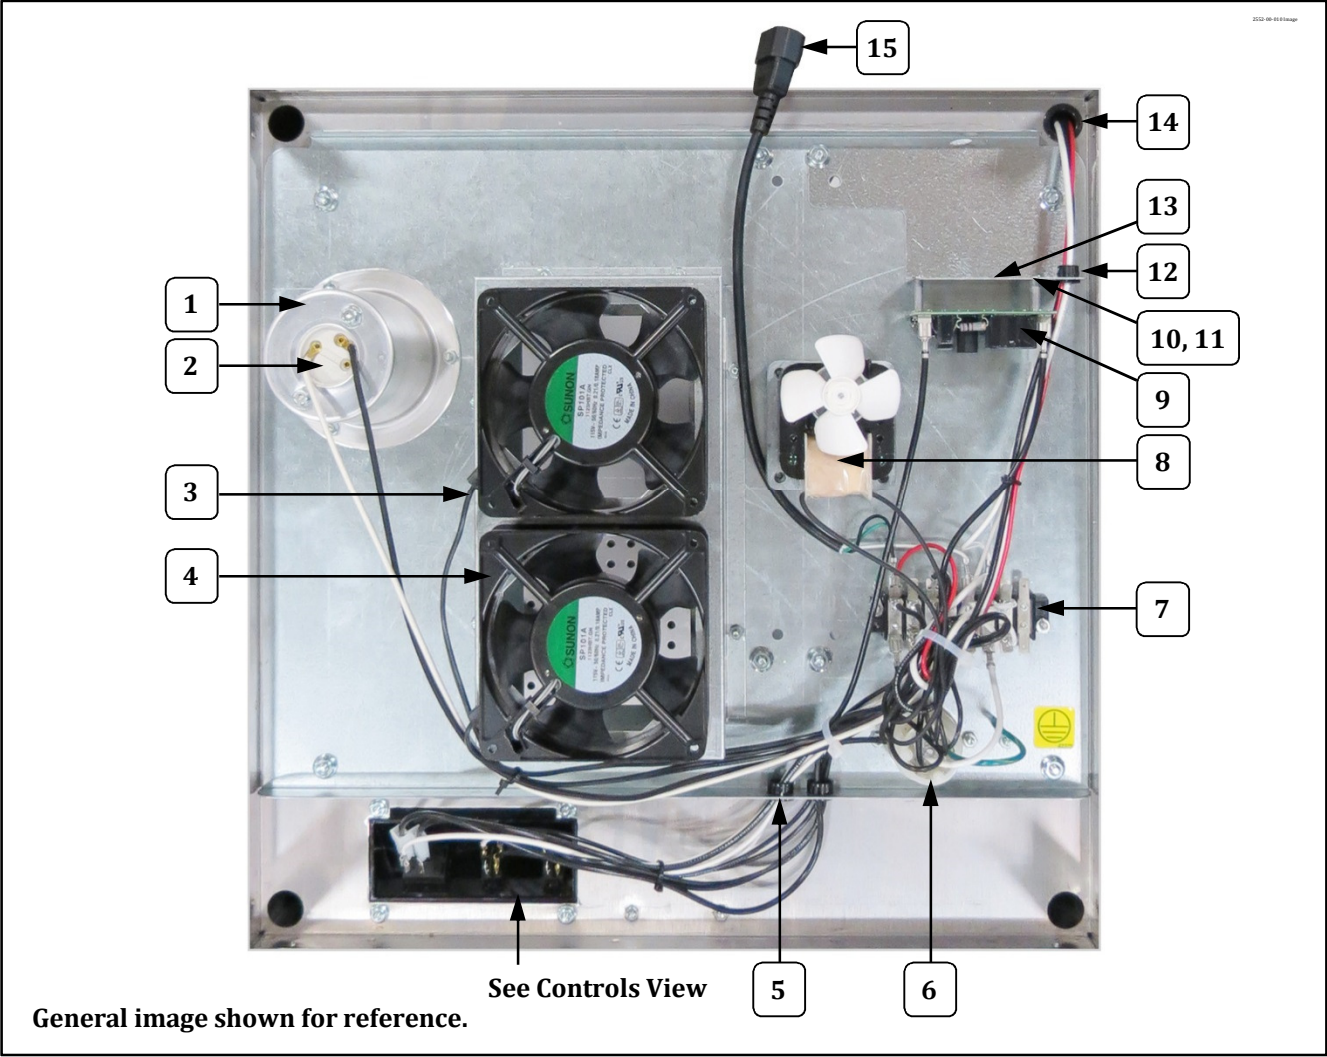

Item	Part Description	Part No.
1	LIGHT SHIELD CONICAL	40589
2	LAMP HOLDER	47047
3	BLOWER PLUG AND CORD	47199
4	EXHAUST BLOWER	48018
5	BUSHING, SNAP .625 IN	47282
6	KETTLE RECEPTACLE	49330
7	TERMINAL BLOCK	47208
8	120 VOLT KETTLE DRIVE MOTOR	47038
9	SHUT OFF CONTROL PCB	55402
10	6-32 X 3/8 PHIL PAN M/S	39000
11	#6 INTERNAL TOOTH L/W 410SS	39001
12	BUSHING, SNAP .500 IN	47236
13	SHUT OFF BRACKET	111435
14	BUSHING, SNAP .875 IN	45396
15	MALE CORDSET	61020




Lighted Sign Assembly



SunPop Select Light Box Assembly
(111422) – Front View



SunnyPop Light Box Assembly (111503) – Front View

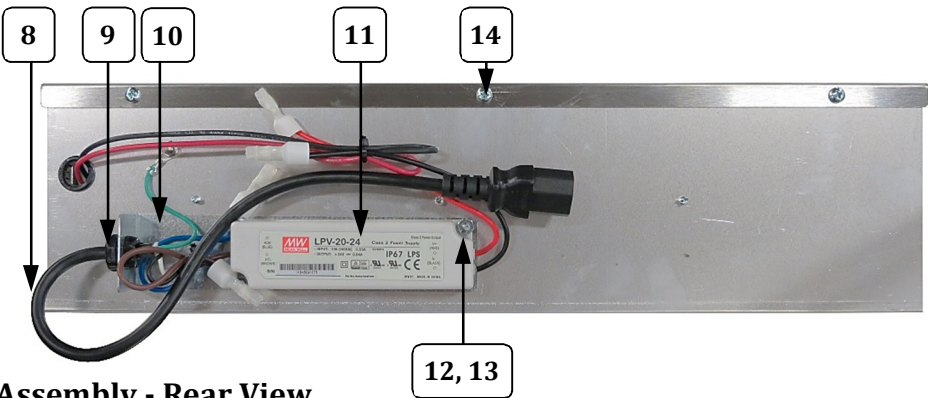

Light Box Assembly - Rear View

Item	Part Description	Part Number	
		111422	111503
1	SUN POP SIGN	111420	
2	SUNNY POP SIGN		111483
3	LIGHT BOX FACE	111453	111453
4	LIGHT REFLECTOR	111451	111451
5	6-32 X 5/8 PAN PHILLIPS	77069	77069
6	LED STRIP COOL WHITE	55379	55379
7	BUSHING, SNAP .625 IN	47282	47282
8	FEMALE CORDSET	61021	61021
9	STRAIN RELIEF SR-6P3-4	76026	76026
10	CORD BRACKET	111454	111454
11	POWER SUPPLY	55394	55394
12	6-32 X 1/2 PHIL PAN (Mounts Power Supply)	42237	42237
13	6-32 NUT (Mounts Power Supply)	47517	47517
14	8-32 PAN HD (Mounts the LED and Light Face)	74141	74141

Safety Labels

1 → **BULB REPLACEMENT MUST BE WITH CORRECT WATTAGE BULB W/ TUFF-SKIN COATING 42948**

2 → **UNIVERSAL POPPER DECAL**

3 → **MAIN GROUND LABEL 42375**

4 → **WARNING! CONTACT WITH THIS SURFACE WHILE THE APPLIANCE IS OPERATING MAY CAUSE BURNS**

5 → **POWER OFF LABEL 55436**

6 → **CONDUIT WARNING LABEL 82840**


7 → **CORD WARNING LABEL 68720**

8 → **POWER CORD TAG 76135**

Item	Part Description	Part No.
1	COATED BULB LABEL	42948
2	UNIVERSAL POPPER DECAL	41019
3	MAIN GROUND LABEL	42375
4	SURFACE CONTACT WARNING	87087
5	POWER OFF LABEL	55436
6	CONDUIT WARNING LABEL	82840
7	CORD WARNING LABEL	68720
8	POWER CORD TAG	76135



Accessories

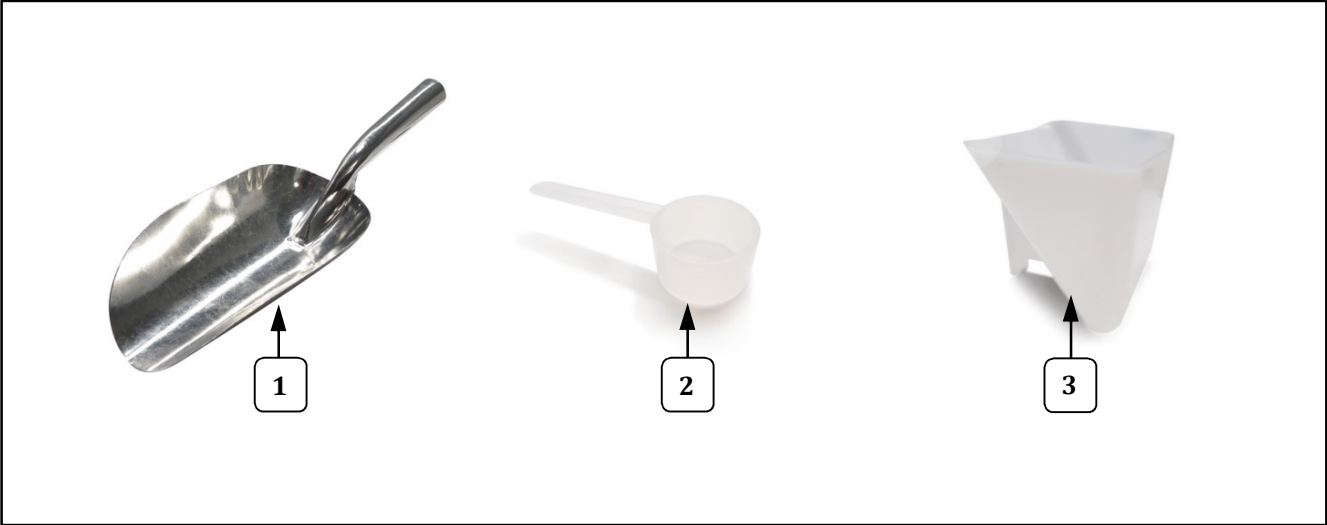


Item	Part Description	Part No.
1	STAMPED ALUMINUM SCOOP	2071
2	6.5 CC MEASURE	47678
3	6 OZ MEASURE	49049



Wiring Diagram

Models 2387 Series, 2389 Series

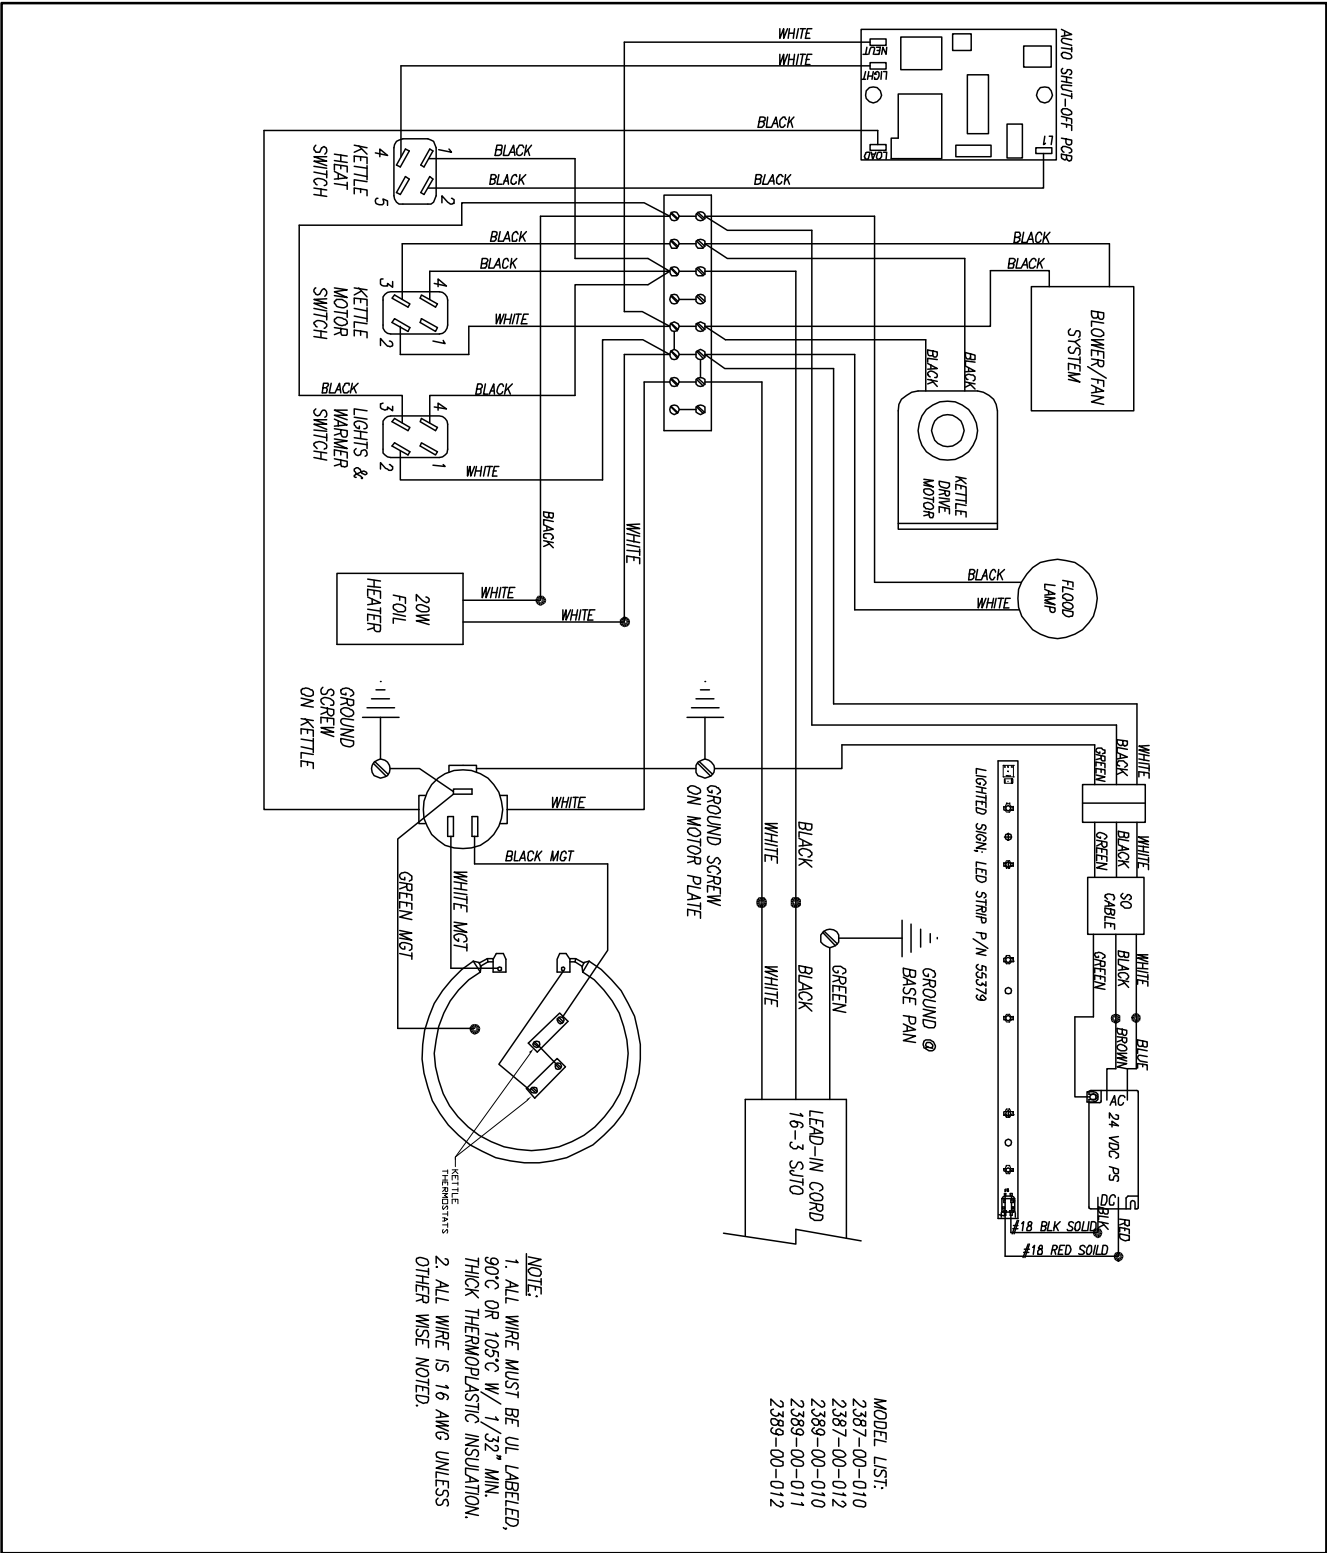



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500