

Apple Cooker

Instruction Manual


Model #4416



FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

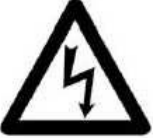	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

CHECKING SHIPMENT

The popcorn machine is shipped in a corrugated carton. If you purchased a floor model machine, the base is shipped in another carton. If you purchased a bucket seasoning pump, it too is in a separate carton.

Unpack all cartons and check thoroughly for any damage which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

<u>Model No.</u>	<u>Voltage</u>	<u>Amperage</u>	<u>Cycles</u>
4416	120	13.0	60

OPERATING INSTRUCTIONS

1. Plug unit into an appropriate 120 or 230 Volt outlet.
2. Mix two packages of Gold Medal REDDY APPLE MIX (Catalog #4146) and 12 ounces of water into the apple cooker pot. Stir the mix until it is completely saturated with water. Or use Gold Medal's APPL-EZ, following instruction on the bag.
3. Turn the knob clockwise to the setting marked "HIGH". It should fall into position when engaged.
4. Insert a Gold Medal Thermometer (Catalog #4300) into the mixture.
5. Stir the mixture occasionally until the mix begins to boil rapidly. Once the candy boils rapidly no mixing will be necessary until candy reaches 290 degrees F. Now you can begin to prepare your apples using Gold Medal candy apple sticks by inserting the sticks into the top of the apple. **NOTE:** Apples must be dry and room temperature for candy to stick properly.
6. In about 20 minutes the candy mixture will reach 290 degrees F, turn the unit "OFF" once this temperature is reached.
7. Holding the prepared apples by the stick, dip into candy mixture twisting until completely covered. Place coated apples onto a clean flat surface. Do not let apples touch one another or they will stick together. Once you are finished dipping your apples, pour the remainder of mix onto a flat cookie sheet so it can hardened and broken into pieces.
8. Using oven mitts or pot holders return the Apple Cooker pot into the well.
9. Pour approximately 2 cups of water in the Apple Cooker pot. Cover the pot with the Steam-n-clean lid and turn the unit to "HI". Allow the water to boil so the steam will clean the inside of the pot.
10. Turn unit "OFF". Using oven mitts or pot holders empty the pot.



MAINTENANCE INSTRUCTIONS



CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



DANGER

Do NOT immerse the equipment in water.
Unplug your machine before servicing.

ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include you model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


or, place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com

PARTS LIST

Item No	Part No	Description
1	38236	Pot, Apple Cooker
2	43208	High Limit Thermostat
3	87085	Lead-in Cord, 120 Volt
4	87297	Heat Control, 120 Volt
5	38389	Knob, Heat Control
6	46823	Bottom Plate, Body
7	47155	Rubber Feet (4)
8	46838	Control Label
9	46826	Welded Cabinet
10	46827	Kettle Stand
11	46831	1500 Watt Heat Element, 120 Volt
12	46832	Spacer
13	46837	Front Plate
Parts Not Shown		
14	46830	Bottom Plate, Heat Well
15	46839	Front Graphics
16	12380	Thumb Screws
17	46840	Shipping Carton

ELETRICAL DIAGRAM

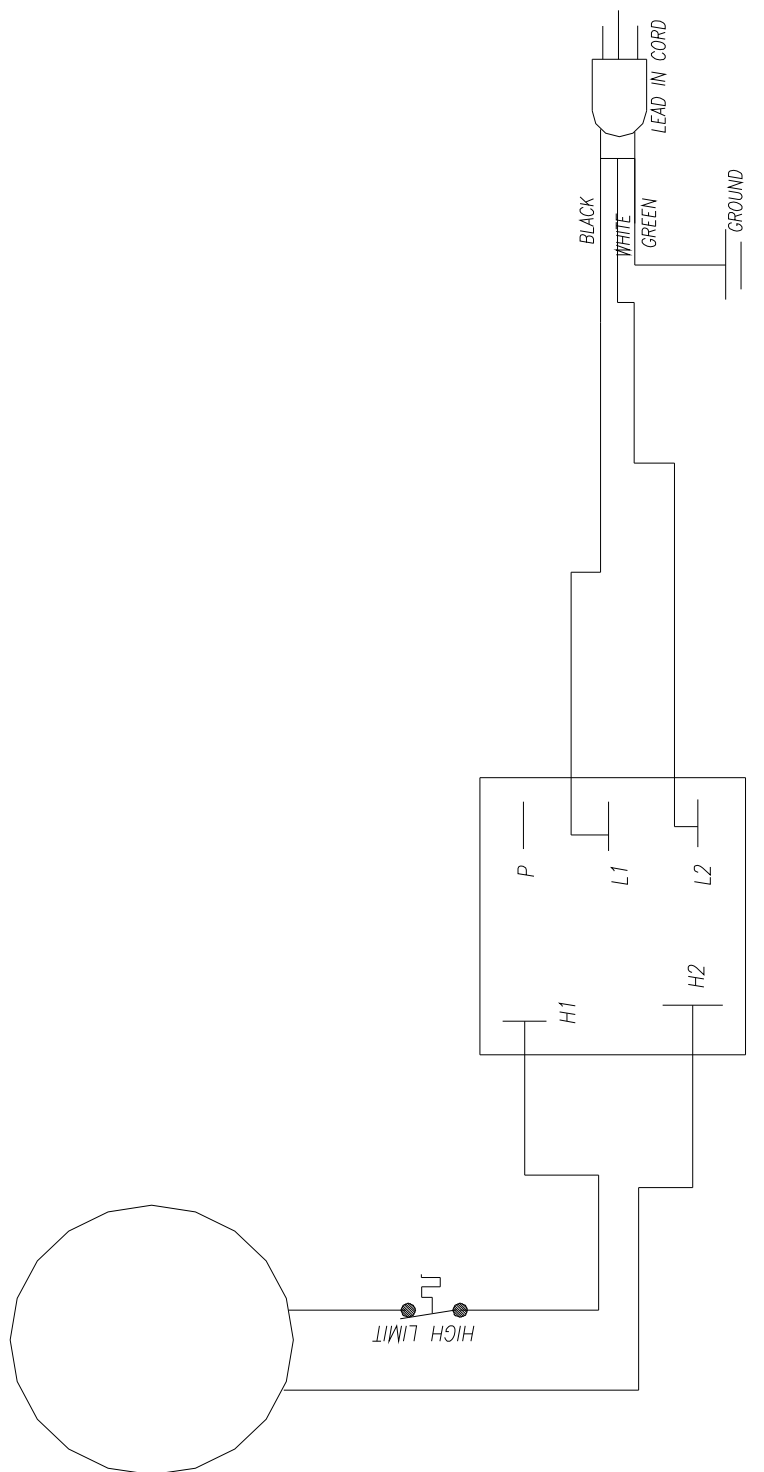

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA