

Cheese Cup Warmer

Instruction Manual

Model No. 5330, 5330FN, 5330EX



 **GOLD MEDAL®**

FUNFOOD EQUIPMENT AND SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.
	⚠ WARNING Always wear safety glasses when servicing this equipment.
	⚠ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.
	⚠ CAUTION This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.
	⚠ CAUTION This machine is NOT to be operated by minors. A minor is defined by any person under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

GENERAL INSTRUCTIONS

INSPECTION OF SHIPMENT

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

SETUP

 
Remove all packing material and tape before starting operation.

ELECTRICAL REQUIREMENTS

The following power supply must be provided:

Model No. 5330, 5330FN: 120 VAC, 60 Hz. 15A protected circuit.

Model No. 5330EX: 230 VAC, 50 Hz. 15A protected circuit.

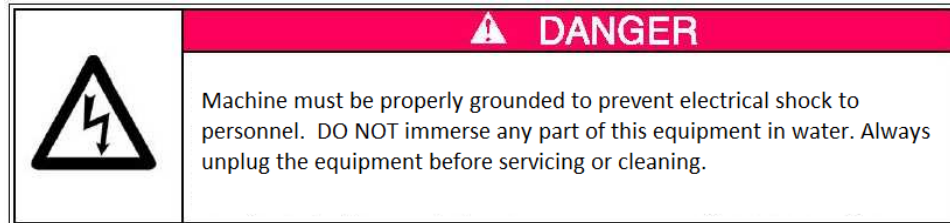

Your electrician must furnish sufficient current for proper machine operation. We recommend this warmer be on a dedicated and circuit protected line. Failure to wire properly will void the warranty and can result in damage to the electrical components.

It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety reasons and the warmers performance may be sacrificed.

 
BEFORE YOU PLUG IN YOUR MACHINE

1. Make sure that the wall outlet can accept the (3) prong grounded plug on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a (3) prong grounded to a (2) prong un-grounded adapter.

INSTALLATION INSTRUCTIONS

INSTALLATION

1. Install Graphics (Model No. 5330FN or Part No. 37003)
2. Remove white cable tie from unit and position the racks in correct position.
NOTE: Keep black cable ties in place. Top and middle racks are positioned under rack mount bolts on the rack supports.
3. Plug power cord into outlet.
4. Turn on power switch located on the rear of the unit.
5. Pre-heat the unit for approximately one hour. The “I” setting is for low warmth and the “II” setting is for high warmth. “O” represents the off position (See below).

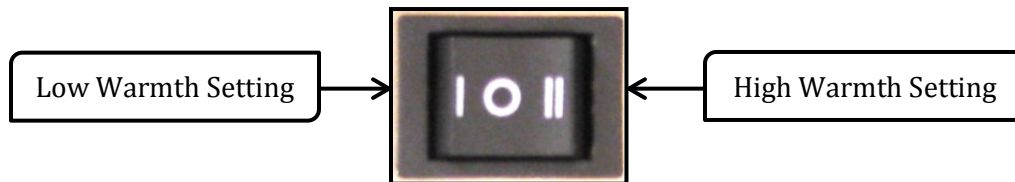

6. Dispensing temperature for cheese cups is between 125°F and 140°F.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

1. For warming cheese cups, use only the “II” high warmer setting.
2. Pretzel warming can be done using the “I” high or “II” low settings for desired warmth.
3. Other foods may also be warmed using this machine.

 
NOTE: This unit is only for the warming of prepackaged food products. Do not dispense volatile foods.

CARE AND CLEANING

CLEANING GUIDELINES

The plastic exterior of the *Cheese Cup Warmer* is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots.

1. Turn power switch to the off position.
2. Disconnect the unit from power source.
3. Confirm the unit is cool and unplugged.
4. Wipe down exterior surface of unit.
5. Wipe down interior areas of the unit.

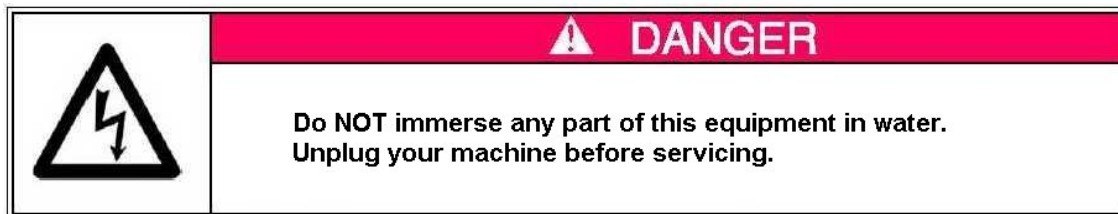

CLEANING AIR INTAKE

Gold Medal® Product's recommends that the air intake is cleaned on a weekly basis.

1. Disconnect Unit from Power supply
2. Use a vacuum cleaner or a damp cloth to clean air intake.
3. Position unit for normal operation and reconnect to power source.

MAINTENANCE INSTRUCTIONS

	 DANGER Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.
	 WARNING Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.
	 CAUTION THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include your model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

 
Parts Department
Gold Medal® Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or place orders at:


(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com




HOUSING BREAKDOWN

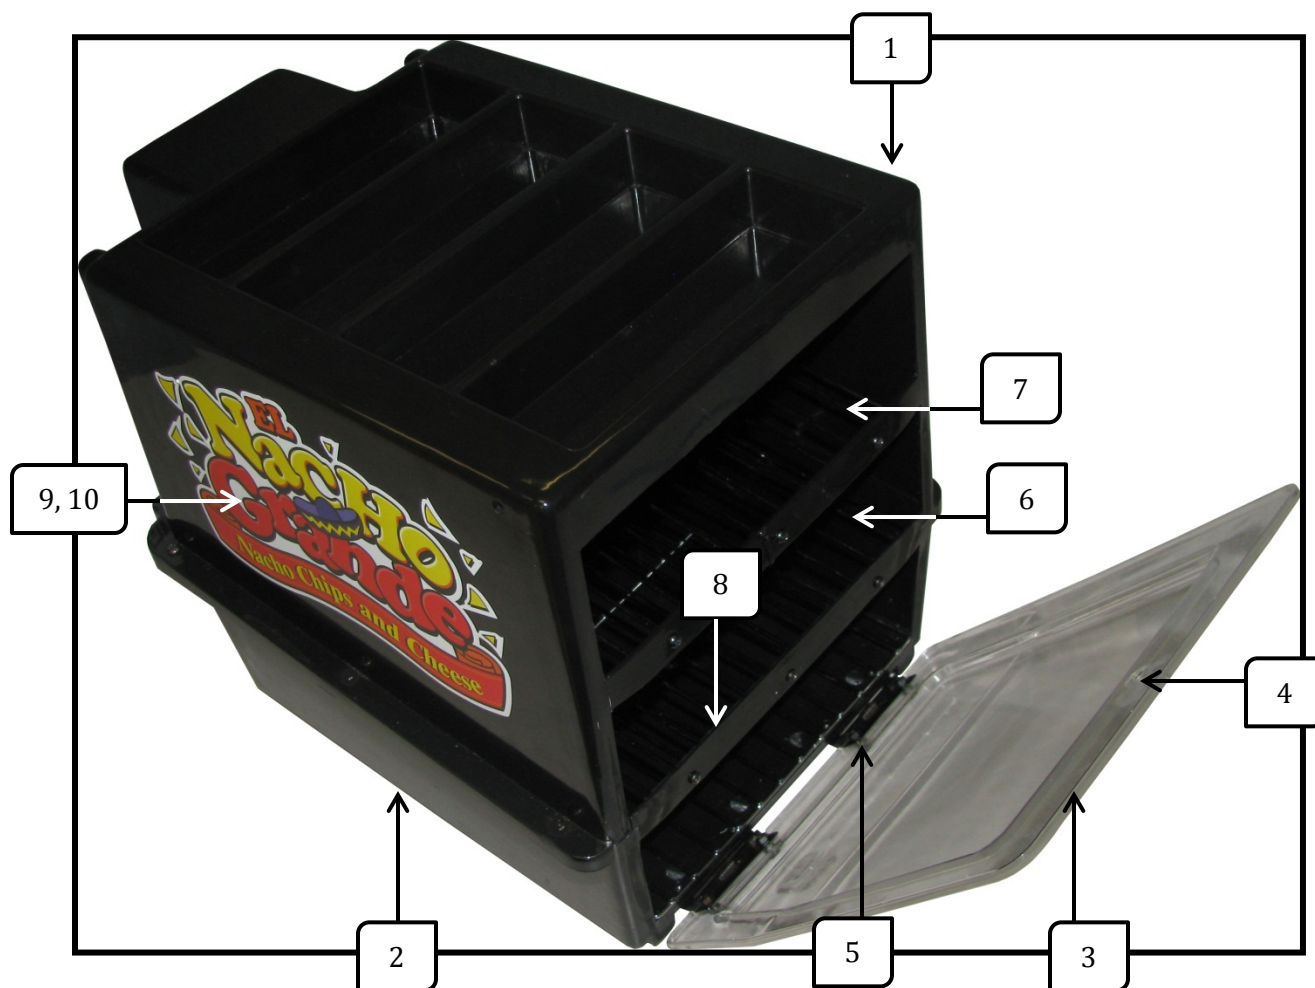

Number	Part No.	Description	Quantity
1	36071	Housing Upper	1
2	36070	Housing Base	1
3	36079	Door Clear	1
4	47110	Knob Dump Handle	1
5	36069	Hinge W/Spring And HWD	2
6	36018	Rack Middle Shelf	1
7	36072	Rack	2
8	36077	Rack Holder And MTG HWD	2
9	37001	Decal Nacho Cheese Cup	2
10	67811 (5330-FN)	Decal Meister Bake (Not Shown)	2
11	36112	10A Switch	1
12	76026	Strain Relief	1
13	22038 (5330-FN)	Lead-In Cord 15A Plug	1
14	42386 (5330EX)	IEC Power Cord	1
15	42373 (5330EX)	IEC Snap In Receptical	1

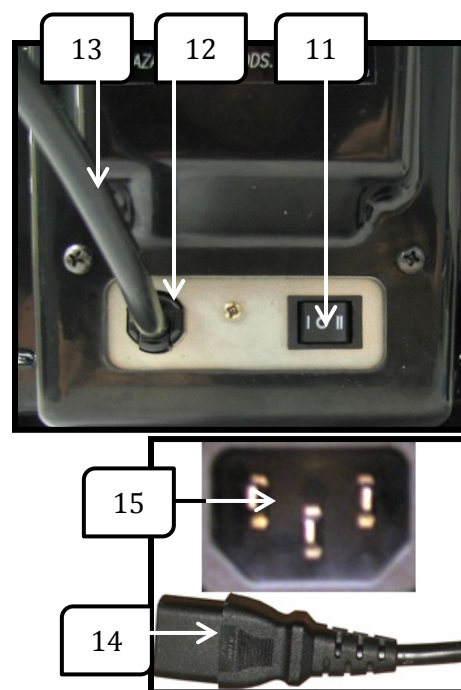 


ELECTRICAL ENCLOSURE BREAKDOWN

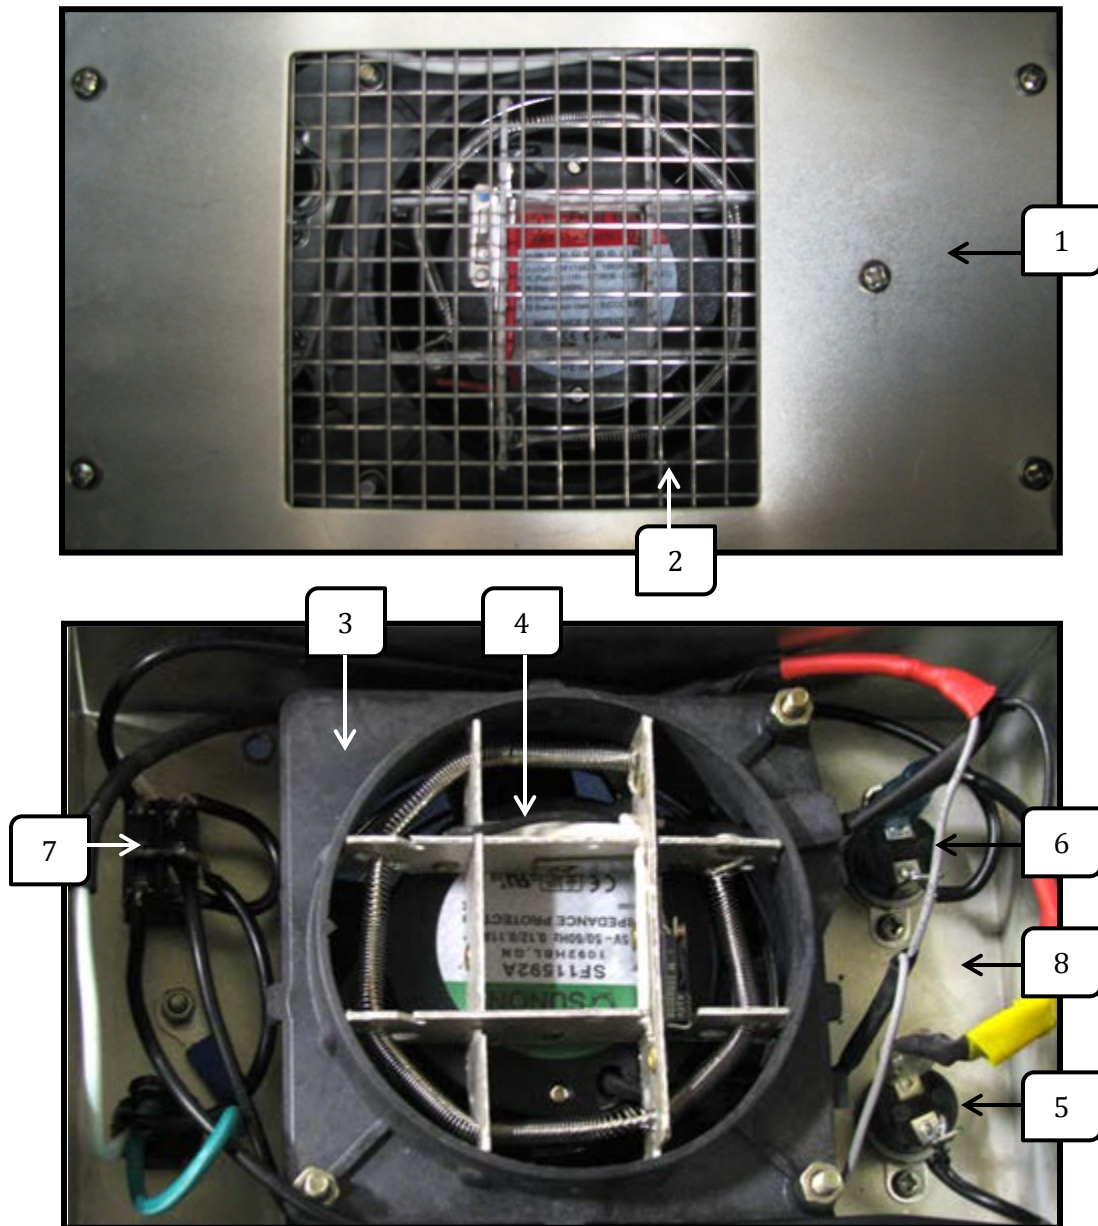 

Number	Part No.	Description	Quantity
1	36074	Electrical Box Cover	1
2	12739	Fan Gard	1
3	36064 (5330-FN)	Heater Assembly 120V	1
	36064 (5330EX)	Export Heater Assembly 240V	1
4	36075 (5330-FN)	Fan Blower 120V	1
	36075 (5330EX)	Fan Blower 230V	1
5	36078	140°F Thermostat	1
6	36111	120°F Thermostat	1
7	36112	10A Switch	1
8	36073	Box Electrical Enclosure	1

Wiring Diagram

 
Model No. 5330, 5330FN

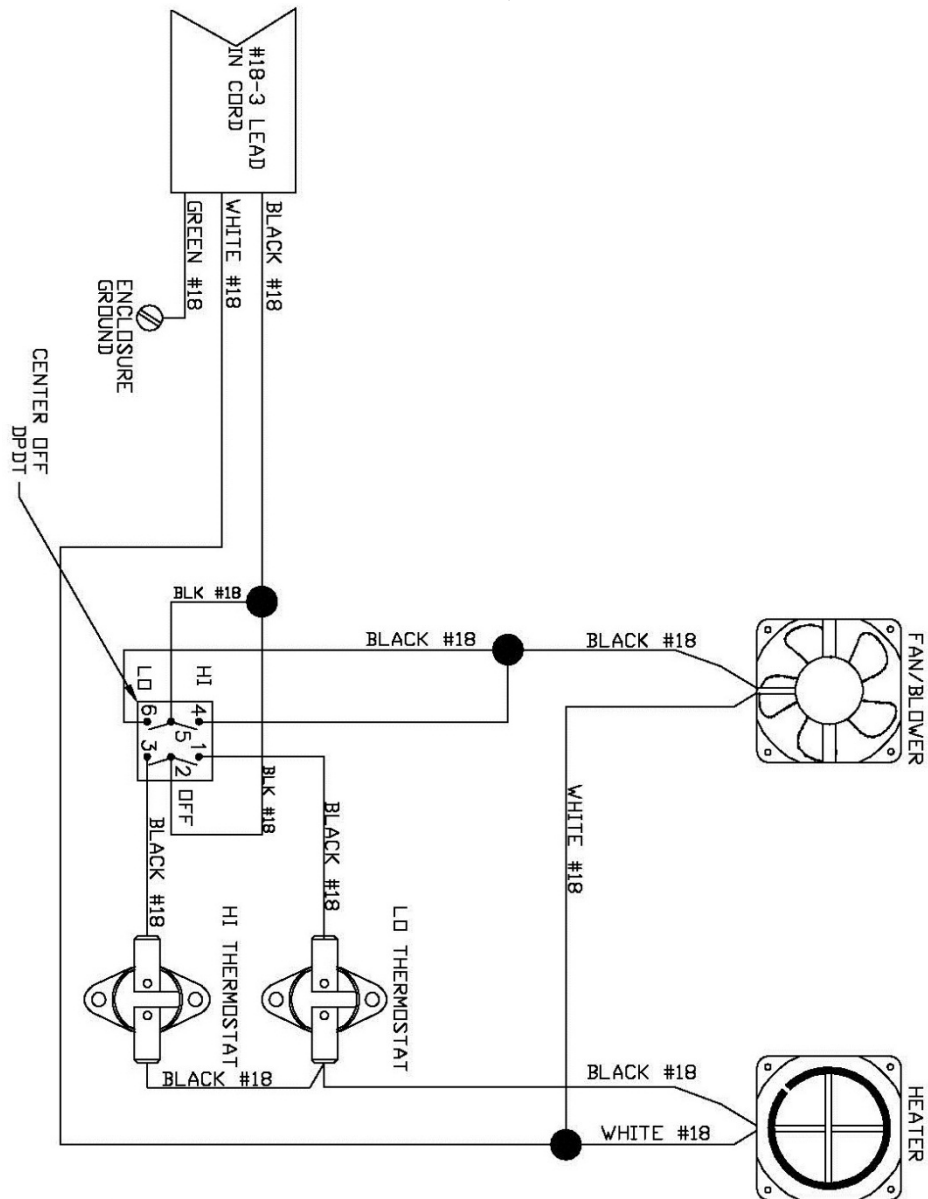

ALL WIRE INSULATION MUST BE RATED AT
LEAST 105°C UNLESS OTHERWISE SPECIFIED.

Wiring Diagram

 Model No. 5330EX

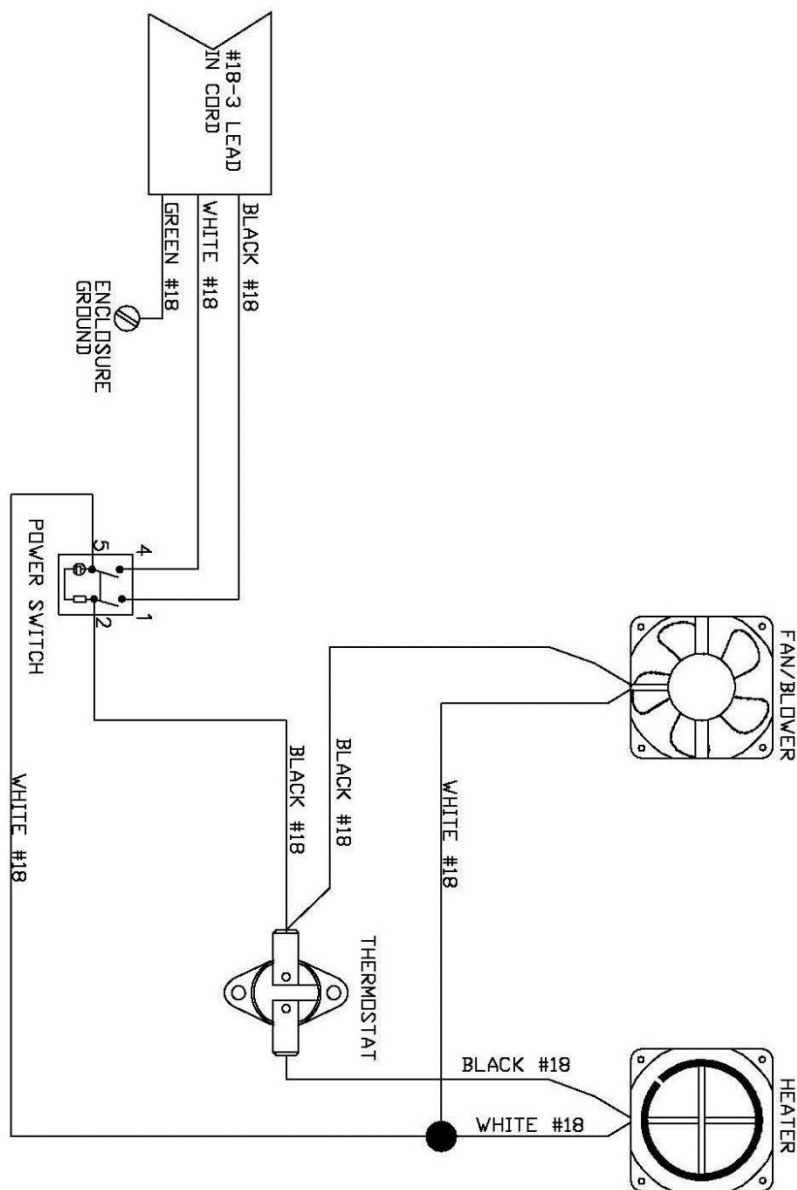

ALL WIRE INSULATION MUST BE RATED AT
LEAST 105°C UNLESS OTHERWISE SPECIFIED.

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA