 


HOLDING CABINETS

Instruction Manual Model #5550 AND #5551

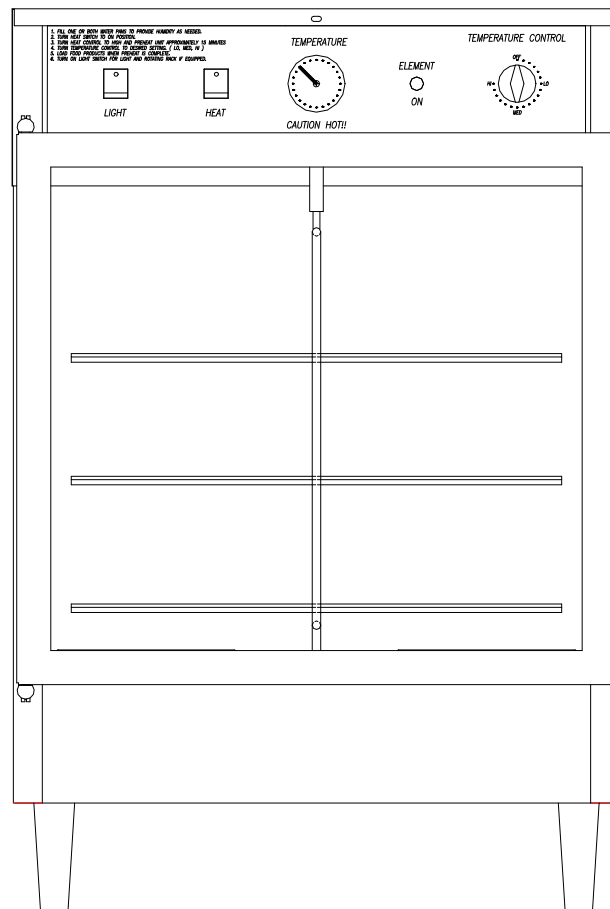

SAFETY PRECAUTIONS

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	⚠ WARNING NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.
	⚠ WARNING ALWAYS wear safety glasses when servicing this equipment.
	⚠ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	⚠ CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	⚠ CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

Improvements are always being made to Gold Medal Products equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical service department at 1-800-543-0862 for any questions about machine operations, replacement parts, or any service questions.

FORWARD

This manual covers the all models #5550 and #5551 product holding cabinets. You can be very proud of your 5550 or 5551 Holding Cabinet. In addition to being an attractive "eye catcher", it contains various engineering innovations which make it the leader in the industry. The exterior of the machine is designed and built-up to present an attractive appearance for many years.

INSTALLATION



CHECKING SHIPMENT

Unpack the shipping crate and check thoroughly for any damage which may have occurred in transit. Any claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

Voltage for your warmer is 120 Volt, 60 Cycle. The Holding Cabinets will draw 1020 Watts. Your electrician must furnish sufficient current for the proper operation of your machine. We recommend that this machine be fused on a line by itself. The switches and controls which operate the warmer are located on the top front of the machine.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

LIGHT SWITCH

Flipping this switch to the "ON" position energizes the light and rotisserie motor.

Note: The rotisserie will only function with the door closed

HEAT SWITCH

Flipping this switch to the "ON" position energizes the heat element.

Note: The is heat element is controlled by the temperature control.

HEAT CONTROL

The machine comes with a variable heat control. The control is graduated from OFF to HIGH. The proper setting of this control will depend on the temperature of the items being placed inside and how many times the door is opened.

EASY STEPS FOR USING UNIT

1. Fill one or both pans to provide humidity as needed
2. Turn heat switch to on position
3. Turn heat control to high and preheat unit approximately 1 hour.
4. Turn temperature control to 170 DEG. F to maintain 150 DEG. F product temperature.
5. Load food products when preheat is complete. If loading pizza, place in cabinet straight from cooking oven.
6. Turn on light switch for light and rotating rack if equipped.

CARE AND CLEANING

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.
---	--

The stainless steel body of the Warmer is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. NEVER USE ABRASIVES on the stainless steel body. The glass should always be clean and sparkling. Remember the inside of the glass must be cleaned too.

MAINTENANCE INSTRUCTIONS



CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



DANGER

Do NOT immerse the equipment in water.
Unplug your machine before servicing.

ORDERING SPARE PARTS

***Always speak to a Gold Medal Products Technical Service Advisor before ordering any parts to help ensure accuracy for your product. Include diagrams may not be the latest information.**

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com:
Web Page: www.gmpopcorn.com

PARTS LIST

MODEL #5550

	Model # 5550PR	Model # 5550PZ	Model # 5550FR	
Item No	Part No	Part No	Part No	Description
1	22038	22038	22038	Lead-In Cord *
2	17626	17626	17626	Heat Element
3	40712	40712	~~	Plunger Switch
4	41033	41033	41033	Pilot Light
5	42798	42798	42798	Rocker On/Off Switch
6	50296	50296	~~	Drive Motor
7	42653	~~	~~	Pretzel Rack
	~~	43242	~~	Pizza Rack *
	~~	~~	43417	Flat Rack *
8	42617	42617	42617	Heat Control
9	42619	42619	42619	Thermometer
10	42620	42620	42620	Dome
11	42621	42621	42621	Pan Cover
12	42622	42622	42622	Bottom Pan
13	42625	42625	42625	Wire Cover
14	42628	42628	42628	Hinge
15	42627	42627	42627	Hinge Pin
16	42629	42629	42629	Element Pan Weldment
17	42630	42630	42630	Drive Connector
18	42643	42643	42643	Inner Door Weldment
19	42644	42644	42644	Outer Door Weldment
20	42648	42648	42648	Frame Weldment
21	42654	42654	42654	Bottom Plate
22	67512	67512	67512	Door Magnet *
23	87049	87049	87049	Knob, Heat Control
24	42650	42650	42650	Front and Side Glass
25	42659	42659	42659	Door Glass
26	42626	42626	42626	Door Handle
27	44073	44073	44073	Strain Relief *
28	42616	42616	42616	4" Plastic NSF Legs
29	42660	42659		Side Graphics
30	42651	42651	42651	Side Glass Channel
31	42652	42652	42652	Top Glass Channel
32	42655	42655	42655	Front Label
33	74142	74142	74142	#8-32 X 1/4 Pan HD PH (34)
34	43208	43208	43208	Theromstat
35	42006	42006	42006	Terminal Block

* Not Shown

PARTS LIST

MODEL #5551

Item No	Model # 5551PR	Model # 5551PZ	Model # 5551FR	Description
	Part No	Part No	Part No	
1	22038	22038	22038	Lead-In Cord *
2	17626	17626	17626	Heat Element
3	40712	40712	~~	Plunger Switch
4	41033	41033	41033	Pilot Light
5	42798	42798	42798	Rocker On/Off Switch
6	50296	50296	~~	Drive Motor
7	42779	~~	~~	Preztel Rack
	~~	42780	~~	Pizza Rack *
	~~	~~	43209	Flat Rack *
8	42617	42617	42617	Heat Control
9	42619	42619	42619	Thermometer
10	42763	42763	42763	Dome
11	42621	42621	42621	Pan Cover
12	42764	42764	42764	Bottom Pan
13	42767	42767	42767	Wire Cover
14	42628	42628	42628	Hinge
15	42627	42627	42627	Hinge Pin
16	42768	42768	42768	Element Pan Weldment
17	42630	42630	42630	Drive Connector
18	42774	42774	42774	Inner Door Weldment
19	42775	42775	42775	Outer Door Weldment
20	42776	42776	42776	Frame Weldment
21	42781	42781	42781	Bottom Plate
22	67512	67512	67512	Door Magnet *
23	87049	87049	87049	Knob, Heat Control
24	42778	42778	42778	Side Glass
25	42777	42777	42777	Door Glass
26	42626	42626	42626	Door Handle
27	87163	87163	87163	Strain Relief *
28	47155	47155	47155	Rubber Feet 3/4" High
29	43270	43271		Side Graphics
30	42651	42651	42651	Side Glass Channel
31	42652	42652	42652	Top Glass Channel
32	42782	42782	42782	Front Label
33	74142	74142	74142	#8-32 X 1/4 Pan HD PH (34)
34	43208	43208	43208	Thermostat
35	42006	42006	42006	Terminal Block

* Not Shown

DOUBLE DOOR PARTS LIST

MODEL #5550

Item No	Model # 5550PRD	Model # 5550PZD	Model # 5550FRD	Description
	Part No	Part No	Part No	
1	22038	22038	22038	Lead-In Cord *
2	17626	17626	17626	Heat Element
3	40712	40712	~~	Plunger Switch (2)
4	41033	41033	41033	Pilot Light
5	42798	42798	42798	Rocker On/Off Switch
6	50296	50296	~~	Drive Motor
7	42653	~~	~~	Preztel Rack
	~~	43242	~~	Pizza Rack *
	~~	~~	43417	Flat Rack *
8	42617	42617	42617	Heat Control
9	42619	42619	42619	Thermometer
10	43243	43243	42620	Dome
11	42621	42621	42621	Pan Cover
12	43250	43250	42622	Bottom Pan
13	42625	42625	42625	Wire Cover
14	42628	42628	42628	Hinge (4)
15	42627	42627	42627	Hinge Pin (4)
16	42629	42629	42629	Element Pan Weldment
17	42630	42630	42630	Drive Connector
18	42643	42643	42643	Inner Door Weldment (2)
19	42644	42644	42644	Outer Door Weldment (2)
20	42648	42648	42648	Frame Weldment
21	42654	42654	42654	Bottom Plate
22	67512	67512	67512	Door Magnet *
23	87049	87049	87049	Knob, Heat Control
24	42650	42650	42650	Front and Side Glass (2)
25	42659	42659	42659	Door Glass (2)
26	42626	42626	42626	Door Handle
27	44073	44073	44073	Strain Relief *
28	42616	42616	42616	4" Plastic NSF Legs
29	42660	42659		Side Graphics
30	42651	42651	42651	Side Glass Channel
31	42652	42652	42652	Top Glass Channel
32	42655	42655	42655	Front Label
33	74142	74142	74142	#8-32 X 1/4 Pan HD PH (34)
34	43208	43208	43208	Thermostat
35	42006	42006	42006	Terminal Block

* Not Shown

DOUBLE DOOR PARTS LIST

MODEL #5551

 
	Model # 5551PRD	Model # 5551PZD	Model # 5551FRD	
Item No	Part No	Part No	Part No	Description
1	22038	22038	22038	Lead-In Cord *
2	17626	17626	17626	Heat Element
3	40712	40712	~~	Plunger Switch (2)
4	41033	41033	41033	Pilot Light
5	42798	42798	42798	Rocker On/Off Switch
6	50296	50296	~~	Drive Motor
7	42779	~~	~~	Preztel Rack
	~~	42780	~~	Pizza Rack *
	~~	~~	43209	Flat Rack *
8	42617	42617	42617	Heat Control
9	42619	42619	42619	Thermometer
10	43244	43244	43244	Dome
11	42621	42621	42621	Pan Cover
12	43249	43249	43249	Bottom Pan
13	42767	42767	42767	Wire Cover
14	42628	42628	42628	Hinge (4)
15	42627	42627	42627	Hinge Pin (4)
16	42768	42768	42768	Element Pan Weldment
17	42630	42630	42630	Drive Connector
18	42774	42774	42774	Inner Door Weldment (2)
19	42775	42775	42775	Outer Door Weldment (2)
20	42776	42776	42776	Frame Weldment
21	42781	42781	42781	Bottom Plate
22	67512	67512	67512	Door Magnet (2) *
23	87049	87049	87049	Knob, Heat Control
24	42778	42778	42778	Side Glass (2)
25	42777	42777	42777	Door Glass (2)
26	42626	42626	42626	Door Handle
27	87163	87163	87163	Strain Relief *
28	47155	47155	47155	Rubber Feet 3/4" High
29	43270	43271		Side Graphics
30	42651	42651	42651	Side Glass Channel
31	42652	42652	42652	Top Glass Channel
32	42782	42782	42782	Front Label
33	74142	74142	74142	#8-32 X 1/4 Pan HD PH (34)
34	43208	43208	43208	Thermostat
35	42006	42006	42006	Terminal Block

* Not Shown


CABINET ASSEMBLY



BOTTOM INSIDE ASSEMBLY

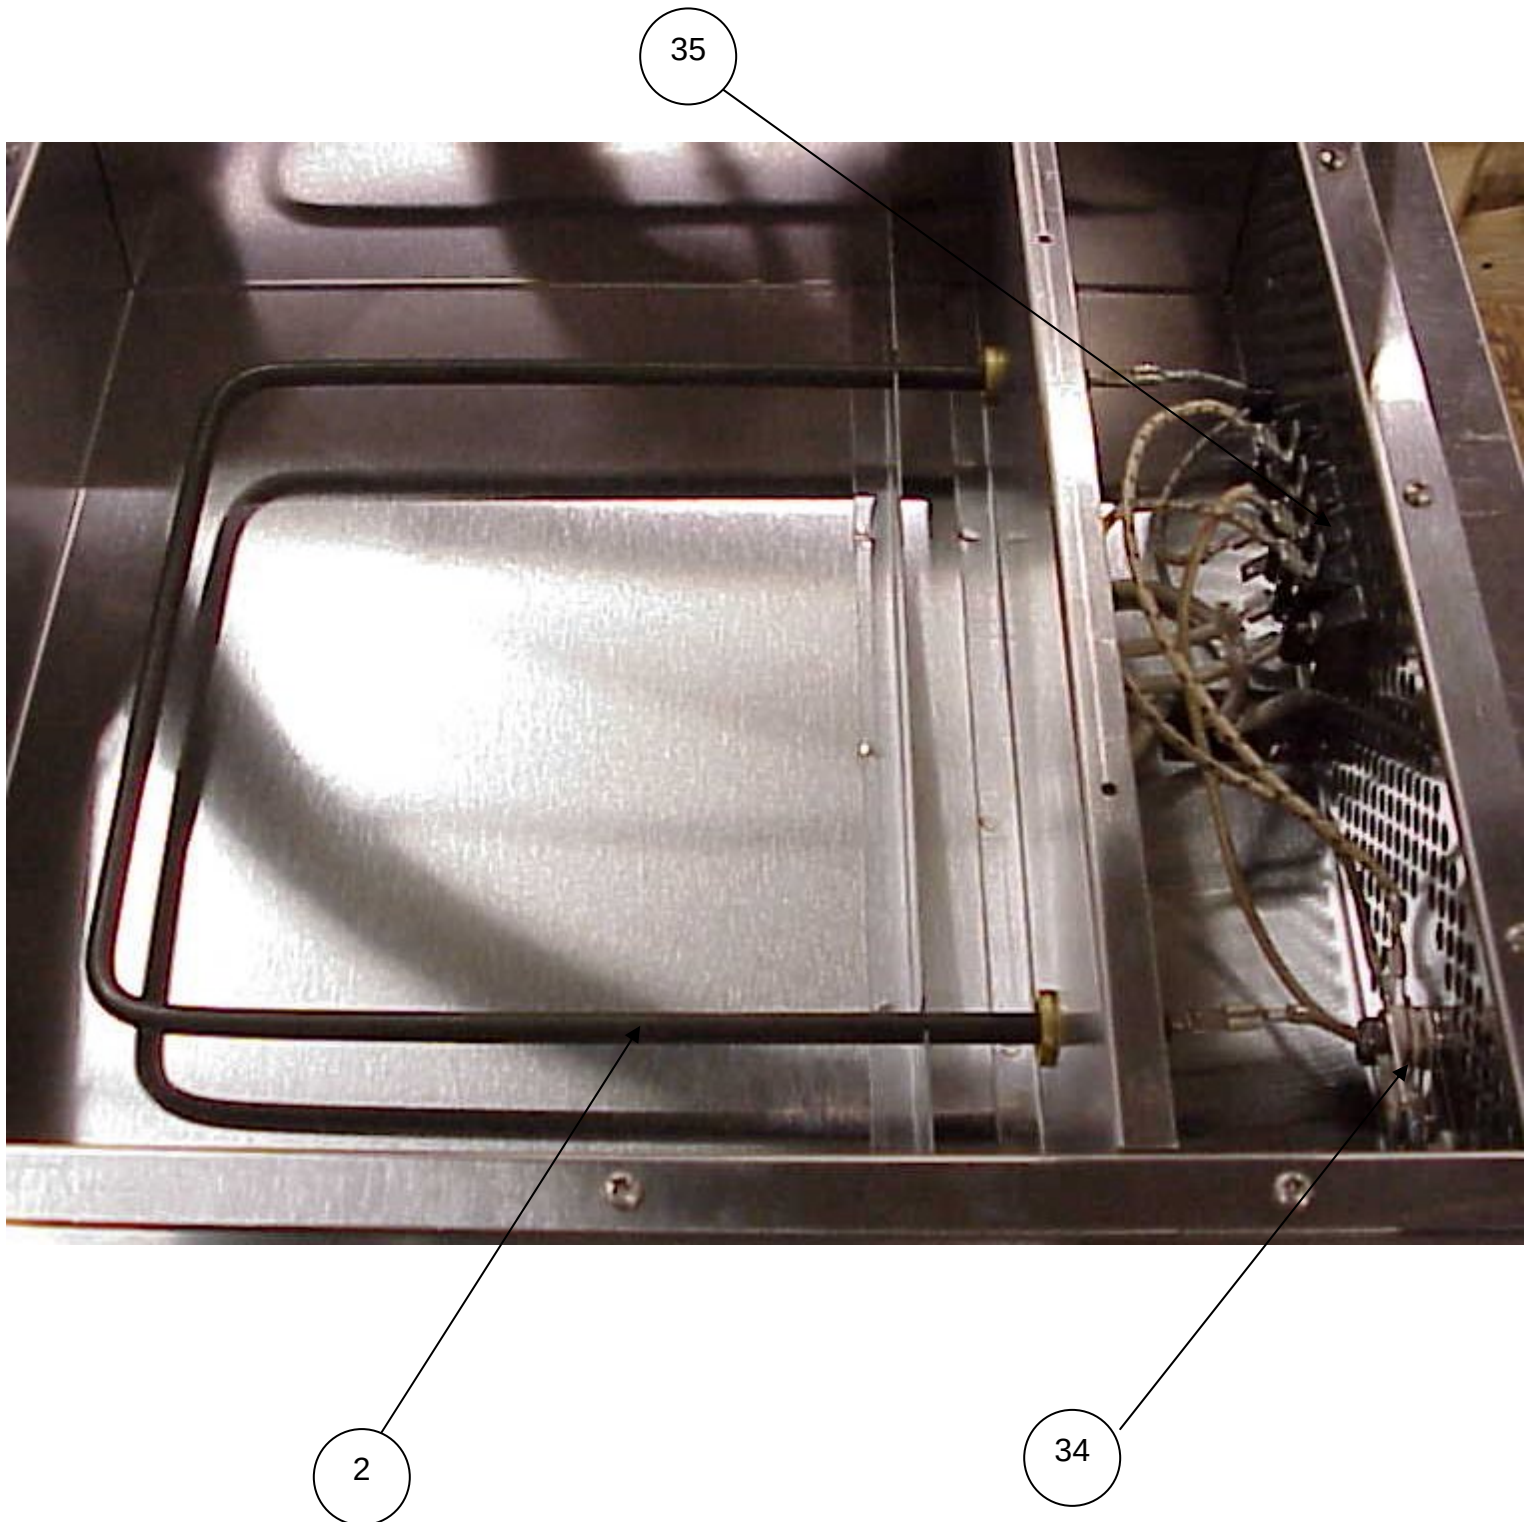


TOP INSIDE ASSEMBLY

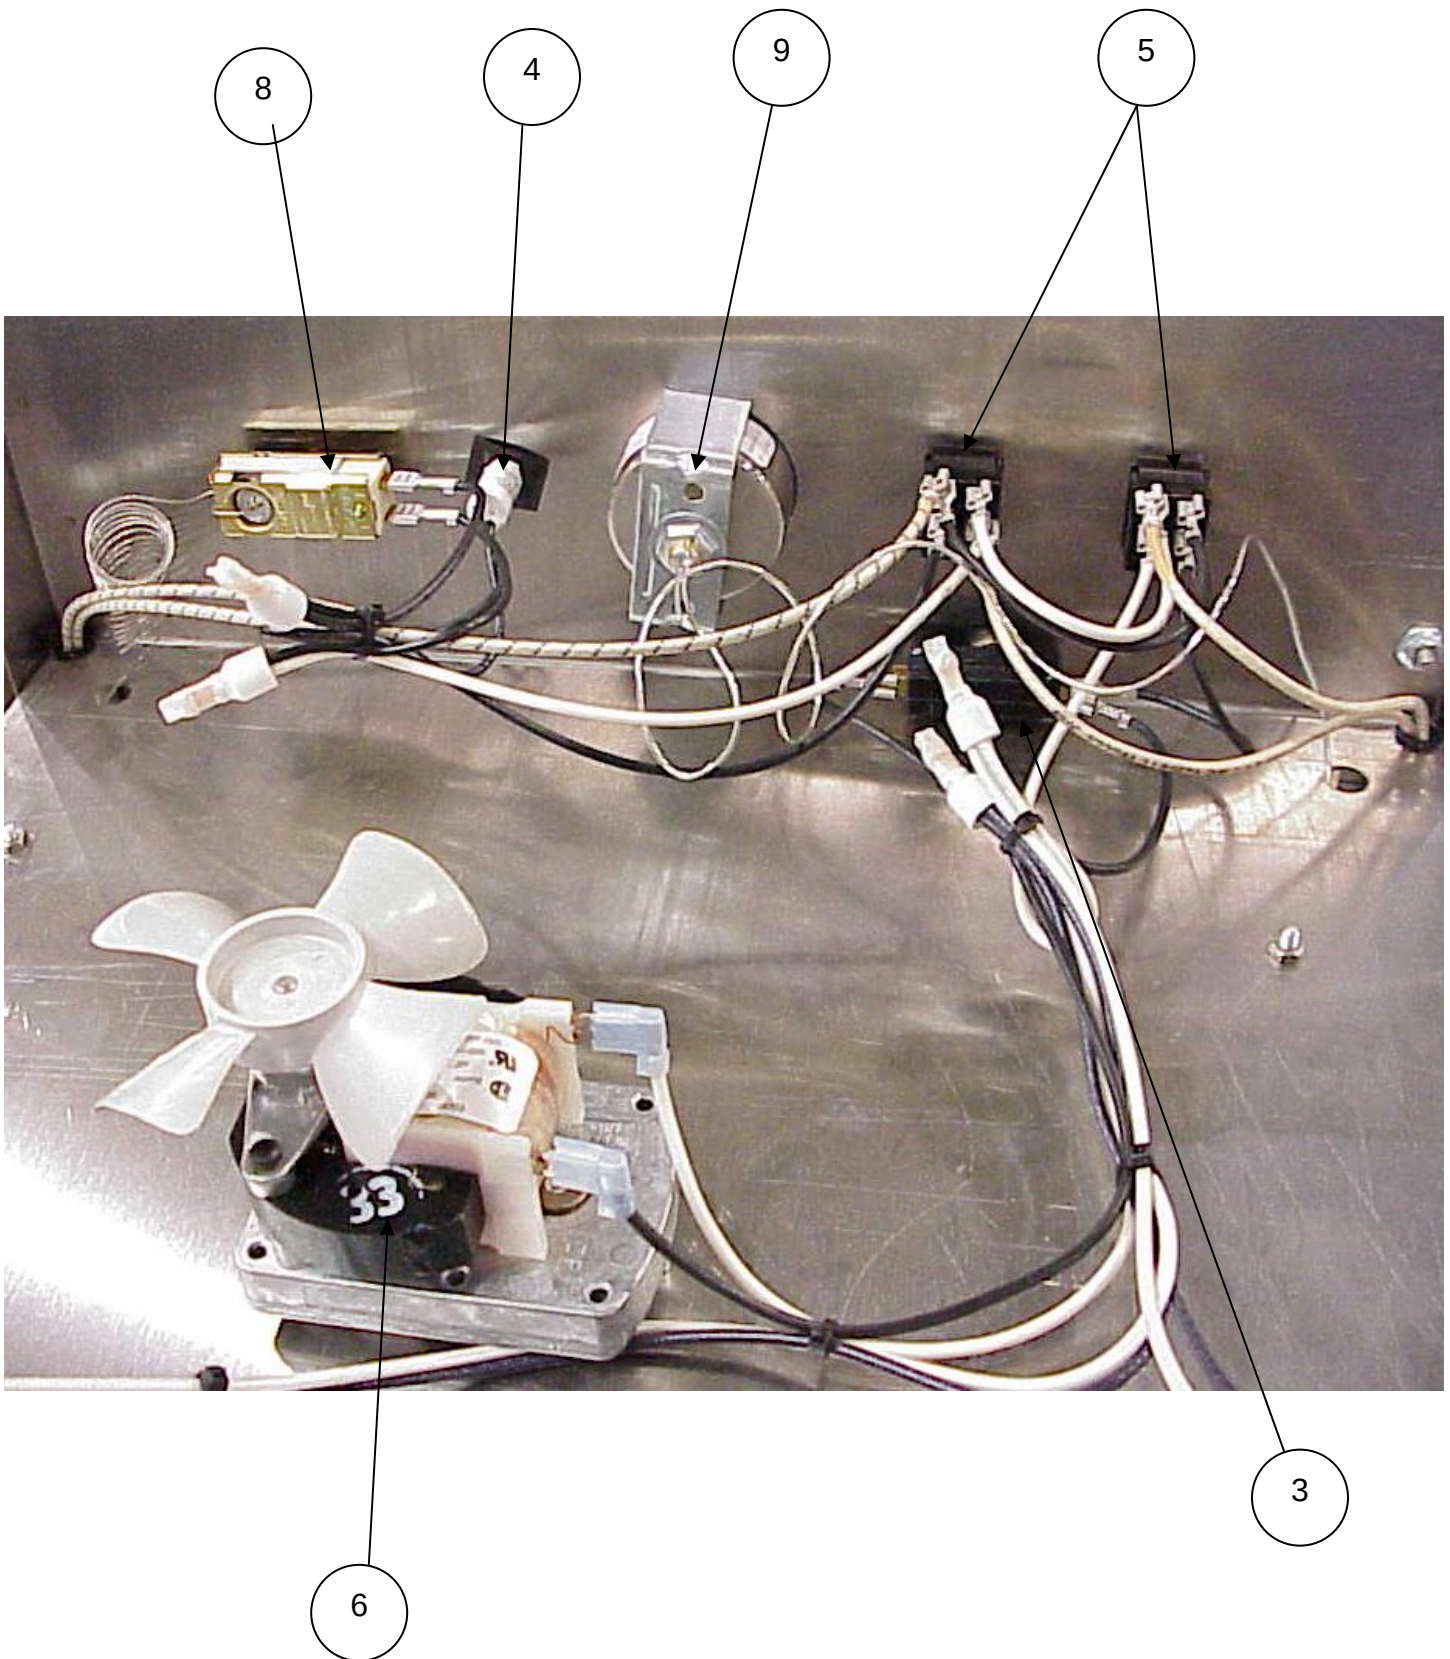 


ELECTRICAL SCHEMATIC

 UPPER CONTROL CABINET WIRING IS #16 AWG CSA LISTED, 600VOLT – 105C U.L. RECOGNIZED.
LOWER CONTROL CABINET WIRING IS #16AWG CSA LISTED, 450C UL RECONGIZED.

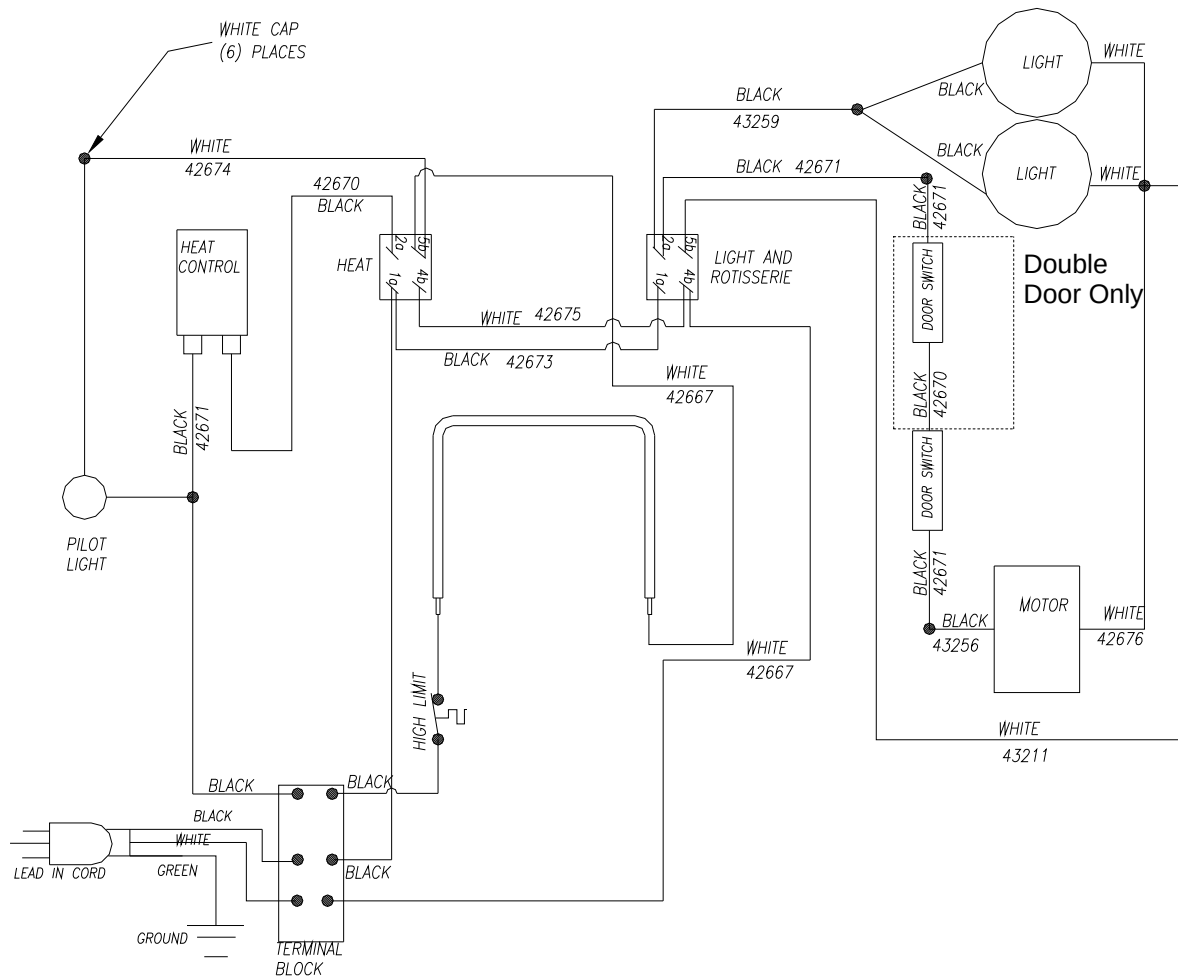

ELECTRICAL SCHEMATIC

 UPPER CONTROL CABINET WIRING IS #16 AWG CSA LISTED, 600VOLT – 105C U.L. RECOGNIZED.
 LOWER CONTROL CABINET WIRING IS #16AWG CSA LISTED, 450C UL RECONGIZED.

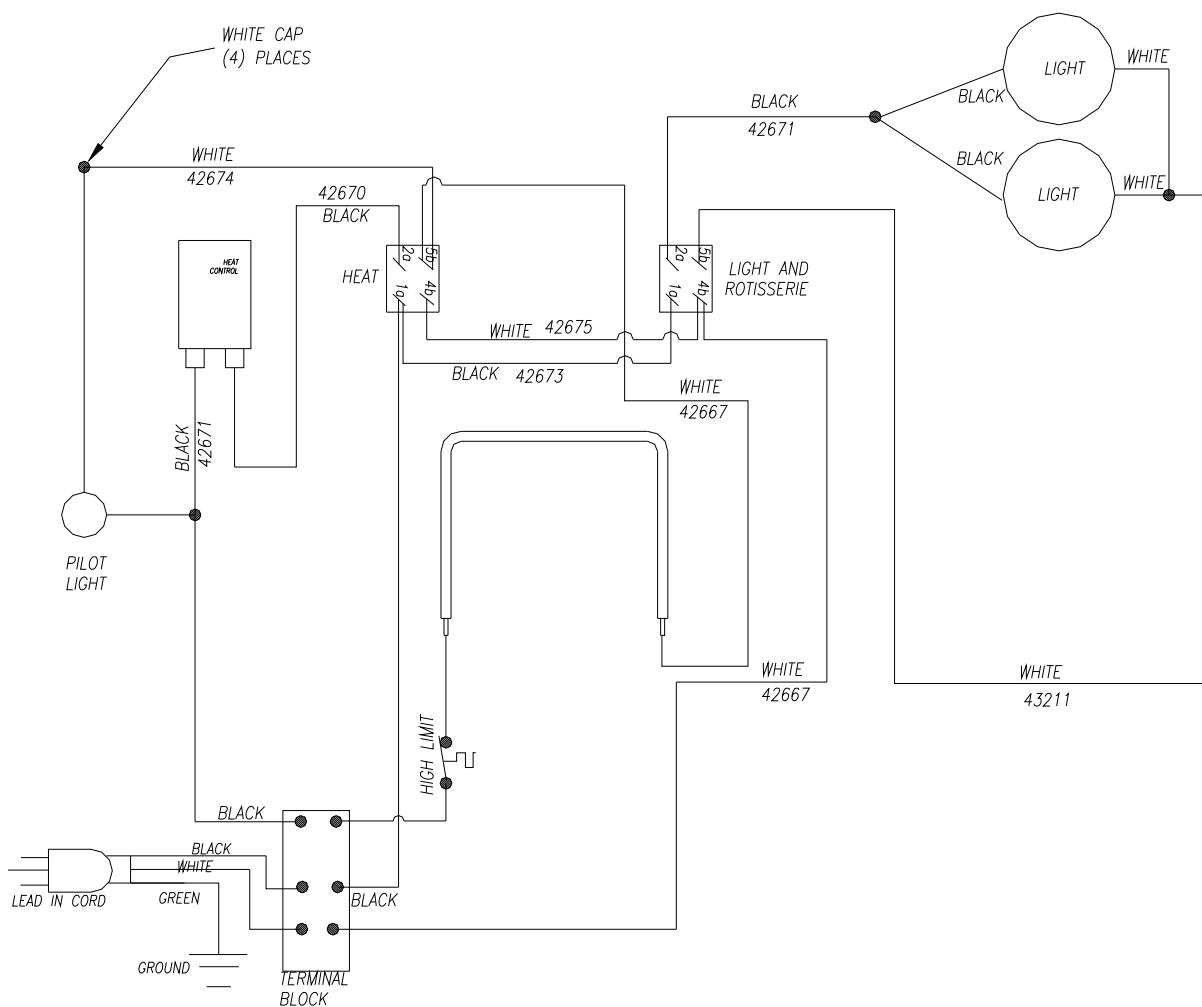

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.