

Cheese Display Case

Instruction Manual

Models #5582 & #5583



 **GOLD MEDAL®**
FUNFOOD EQUIPMENT & SUPPLIES

CINCINNATI, OH 45241-4087 USA

SAFETY PRECAUTIONS

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	⚠ WARNING NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.
	⚠ WARNING ALWAYS wear safety glasses when servicing this equipment.
	⚠ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	⚠ CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	⚠ CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

Improvements are always being made to Gold Medal Products equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical service department at 1-800-543-0862 for any questions about machine operations, replacement parts, or any service questions.

Installation Instructions

Inspection of Shipment:

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company. Gold Medal Products is not responsible for damage that occurs in transit.

Setup:

 
Your new Cheese Display Case is assembled and tested at the factory. Remove all packing material and tape before starting operation.

Electrical Requirements:

The following power supply must be provided:

5582: 120v, 60Hz, 528W, 4.4 amps

5583: 120v, 60Hz, 603W, 5.03 amps

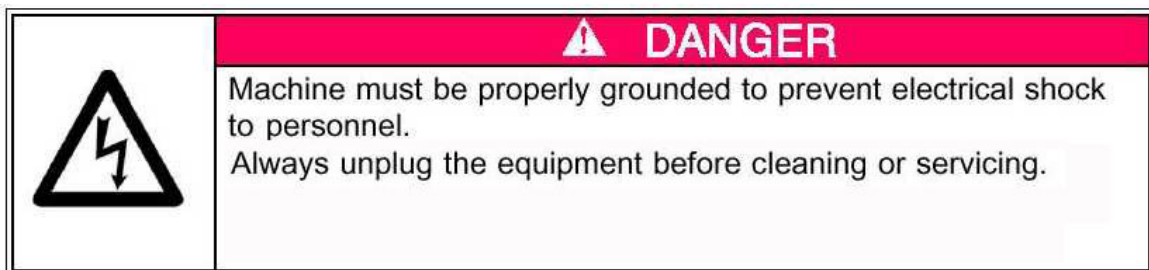

Your electrician must furnish sufficient power for proper machine operation. We recommend this Display Case be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine.

It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

 
Before You Plug In Machine:

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a grounded to un-grounded receptacle adapter.

Operating Instructions


Controls and Their Functions:

The lighted rocker switch controls the element, blower fan and light bulbs. The fan circulates air over the thermostat controlled element which keeps the cheese portion packs warm inside the cabinet.

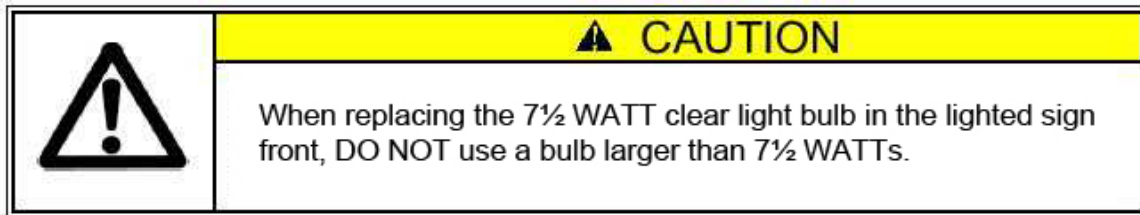

Care and Cleaning:

 The stainless steel cabinet can be kept clean by using a warm, damp cloth to remove all dirt and grease spots. The acrylic doors should also be kept clean. DO NOT use ammonia based cleaners. Clean the inside and outside of the acrylic doors with a soft cloth and a non-abrasive cleaner.

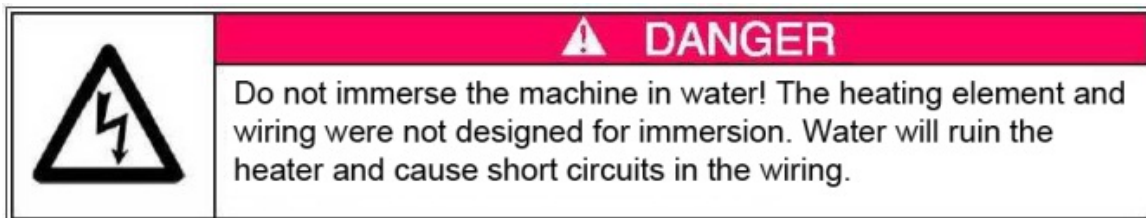

MAINTENANCE INSTRUCTIONS

	 DANGER Do NOT immerse the equipment in water. Unplug your machine before servicing.
	 WARNING Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.
	 CAUTION THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ORDERING SPARE PARTS

*** Always speak to a Gold Medal Products Technical Service Advisor before ordering any parts to help ensure accuracy for your product. Included diagrams may not be the latest information.**

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

 
Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com

Cabinet Assembly


NOTE: FAN TO BE MOUNTED AS SHOWN

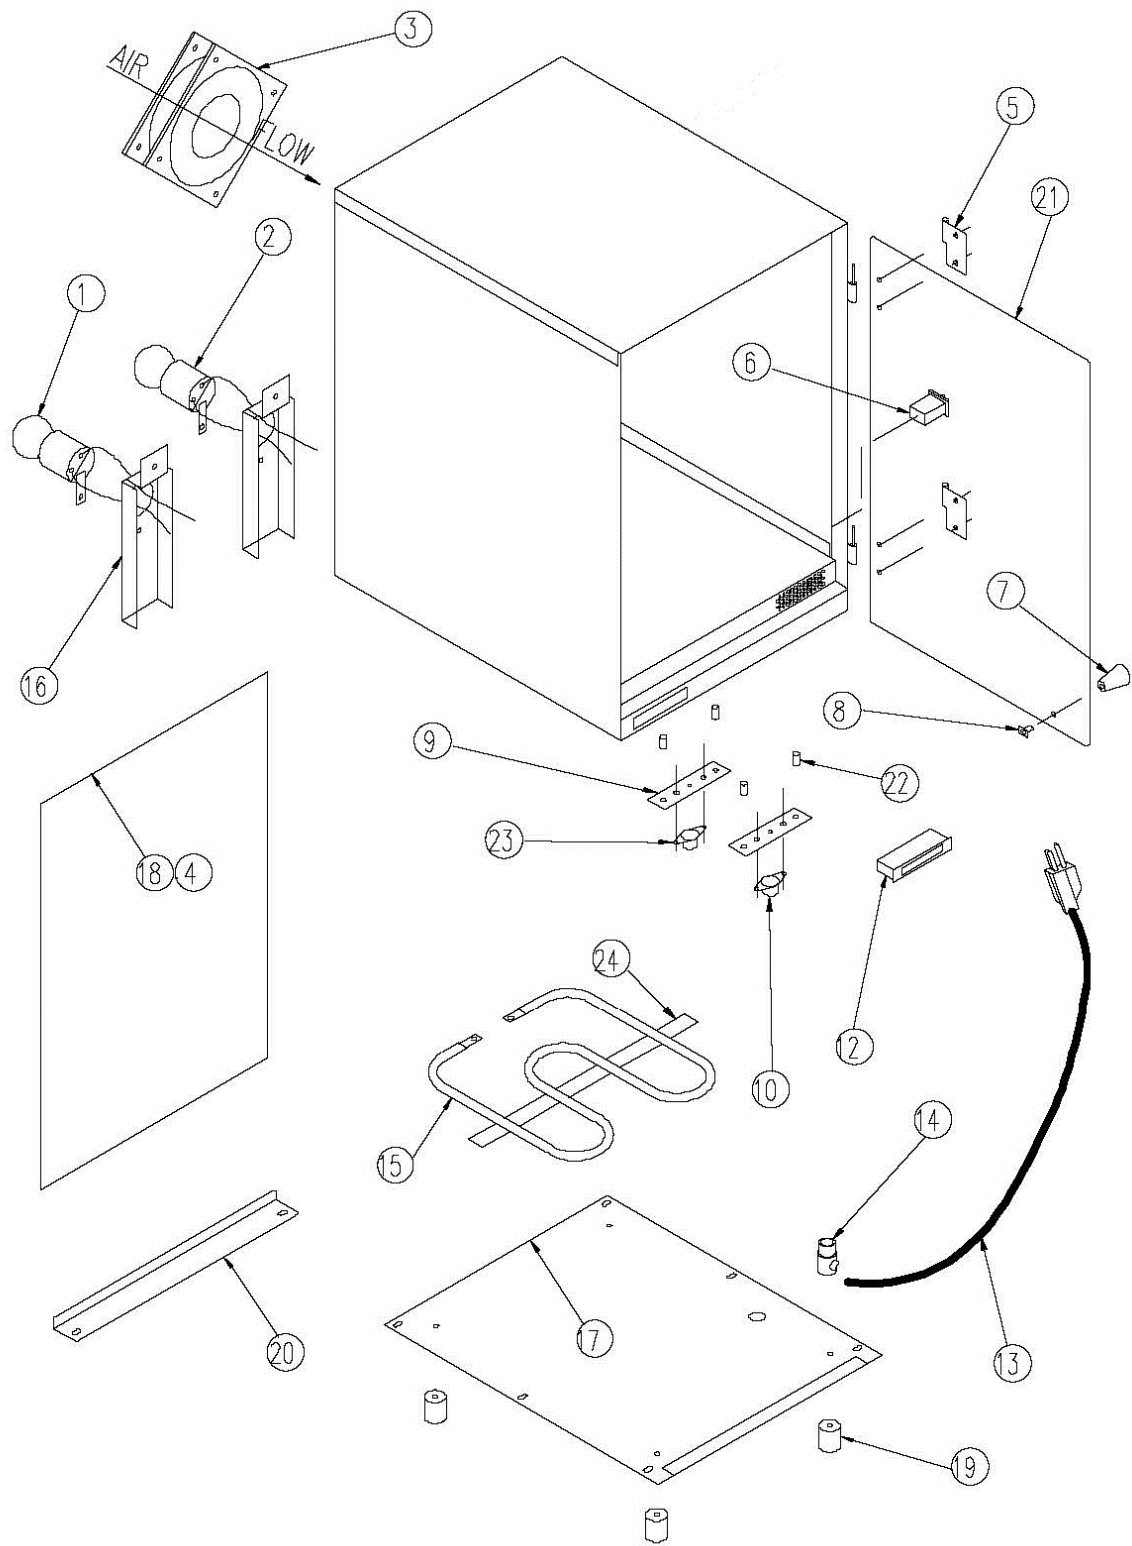

Parts List – Cabinet Assembly

Item	Part No.	Description
1	47422	Light Bulb, Clear 7½ Watt (x2)
2	75040	Incandescent Lampholder (x2)
3	48018	Exhaust Blower
	47199	Blower Plug & Cord - Not Shown
4	38503	Nacho Cheese Sign (5582)
	38504	Nacho Cheese Sign (5583)
5	38448L	Hinge, Left Side (x2)
6	42532	Switch, DPST Rocker
7	47120	Knob
8	75267	Tee Bolt
9	38451	Heat Sink Plate (x2)
10	38533	Thermostat, 145°F
11	47236	Snap Bushing - Not Shown
12	47561	Magnetic Catch
13	22038	Lead-In Cord, 15 amp Plug
14	87194	Strain Relief
15	38534	Heat Element, Tubular 120V 400W
16	38473	Cover, Light Wires (x2) (5582)
	38474	Cover, Light Wires (x2) (5583)
17	38439	Bottom Plate, Cabinet (5582)
	38466	Bottom Plate, Cabinet (5583)
18	38447	Acrylic Panel (x2) (5582)
	38470	Acrylic Panel (x2) (5583)
19	47328	Glide (x4)
20	38440	Retainer, Display Sign (5582)
	38467	Retainer, Display Sign (5583)
21	38428	Door 1/8 Acrylic (5582)
	38455	Door 1/8 Acrylic (5583)
22	47264	Spacer, Thermostat Mount (x4)
23	79058	Thermostat, High Limit
24	38536	Clamp, Tubular Element
25	38429	Rack Assembly - Not Shown (5582)
	38456	Rack Assembly - Not Shown (5583)

 Electrical Schematic – 5582 & 5583

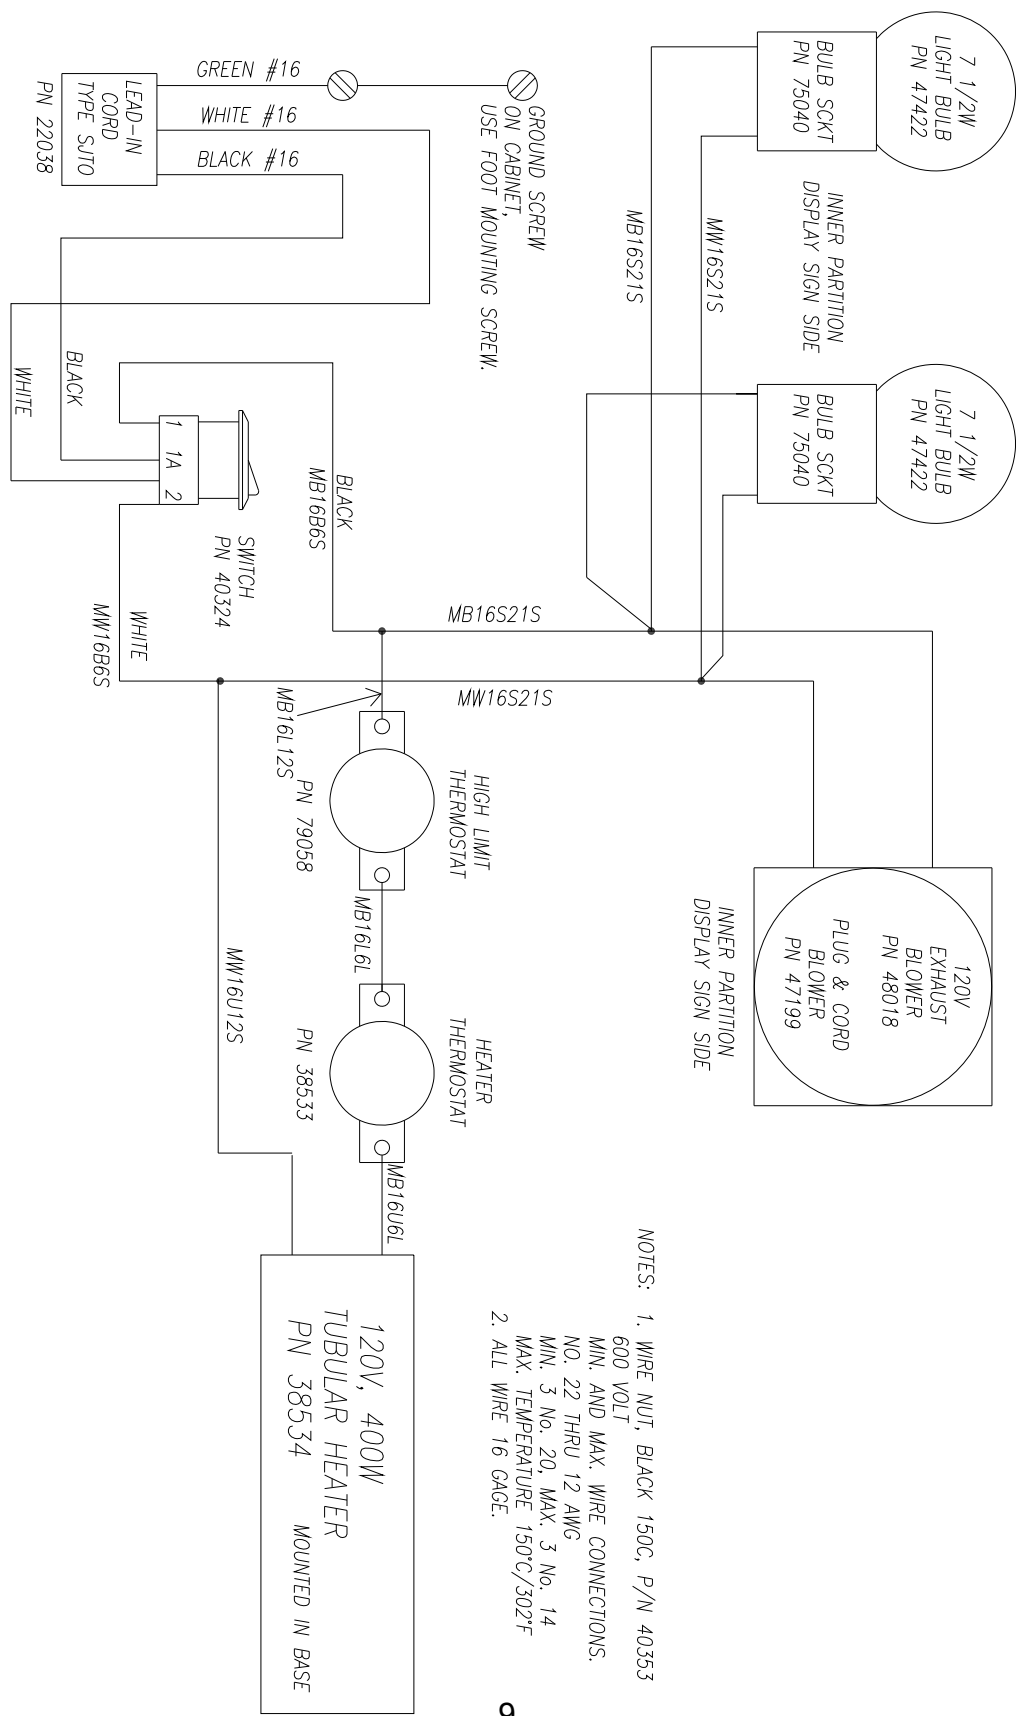

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.