 


JOLT

Instruction Manual

Model #7816

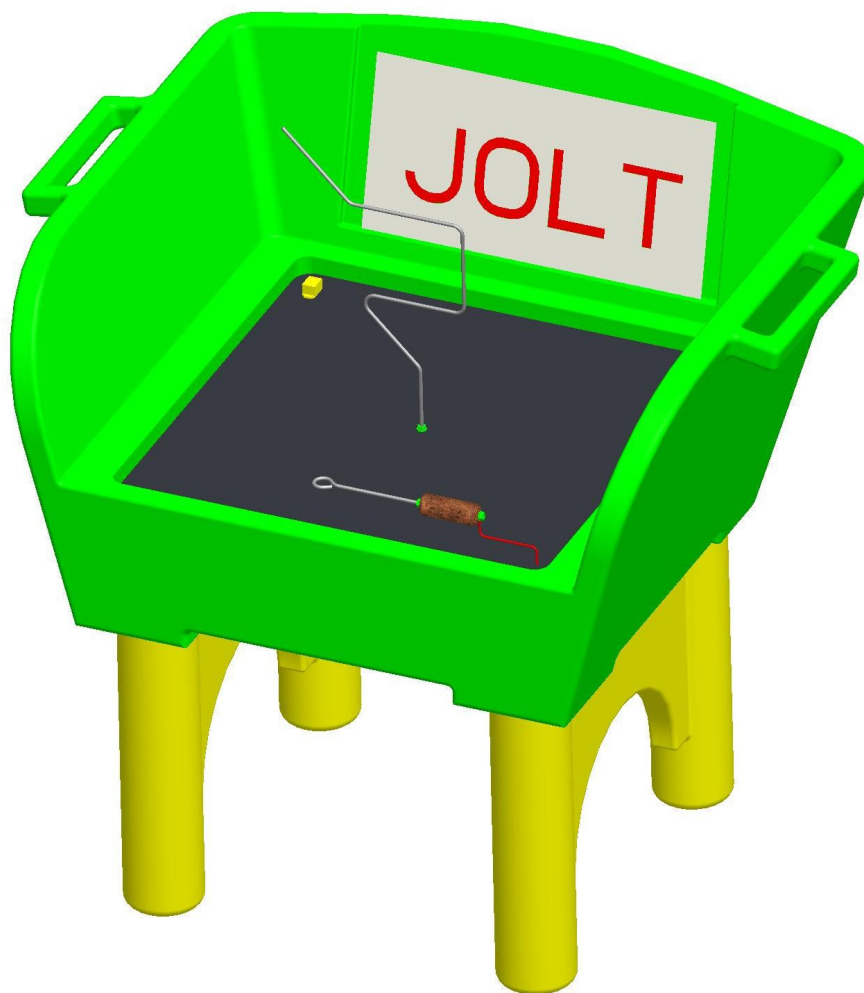

 **GOLD MEDAL®**
FUNFOOD EQUIPMENT & SUPPLIES
Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS



DANGER

Pump must be properly grounded to prevent electrical shock. Connect pump to a receptacle with a GFCI (Ground Fault Circuit Interrupter).
Always unplug the pump before servicing



WARNING

**Drowning Hazard, always supervise children.
Do NOT allow children to operate.**



WARNING

**To avoid injury, do not sit or climb on games.
Do NOT use this game as a table.**



WARNING

**Do NOT drop the pump. If the pump has been
dropped or damaged, do NOT use.**



CAUTION

**This machine is NOT to be operated by minors. Minors are classified
as anyone under the age of 18.**

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

 
INSTALLATION INSTRUCTIONS

CHECKING SHIPMENT


The JOLT game is shipped in two corrugated cartons. One carton will include the base and the legs. The other carton will include the insert, decal, and game pieces. Unpack all cartons and check thoroughly for any damage, which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

ASSEMBLY

Step 1. Assemble legs to the JOLT base by inserting the tapered ends of the leg into the tapered holes on the underside of the game base.

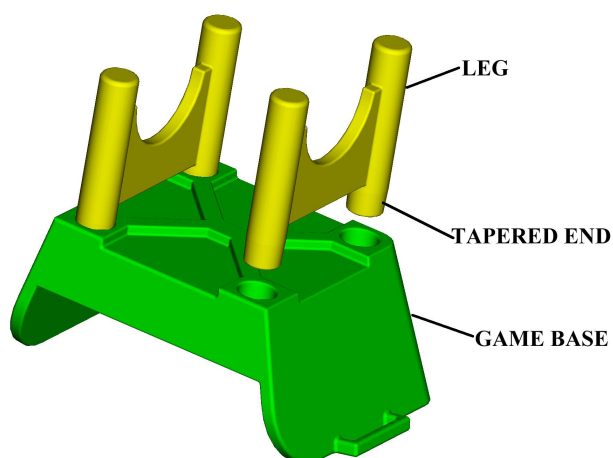


 Step 2. Attach the wire maze to the insert. Insert the threaded end into the hole in the middle of the insert. On the underside of the insert, attach the flange nut. Tighten the nut securely against the bottom of the insert.

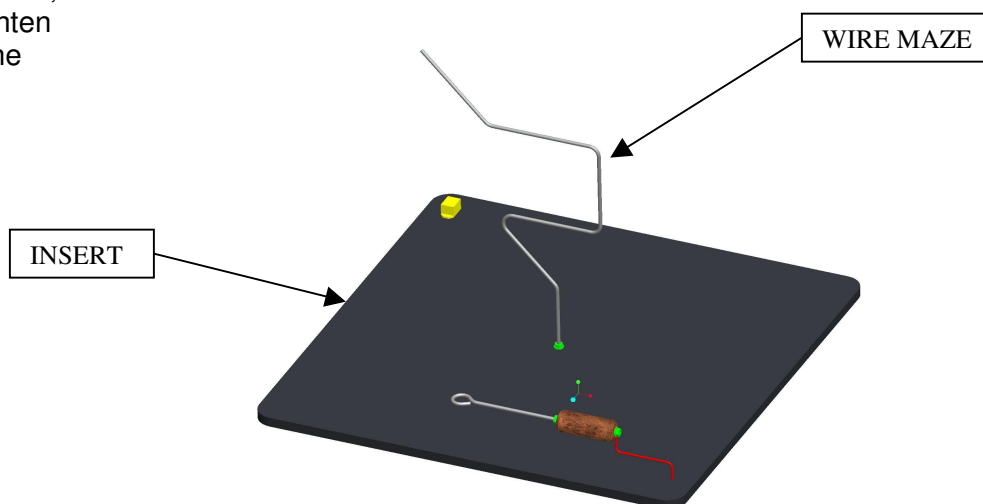


ASSEMBLY (cont.)

 Step 3. Place assembled insert into base. Plug wall transformer into insert and then into wall outlet.

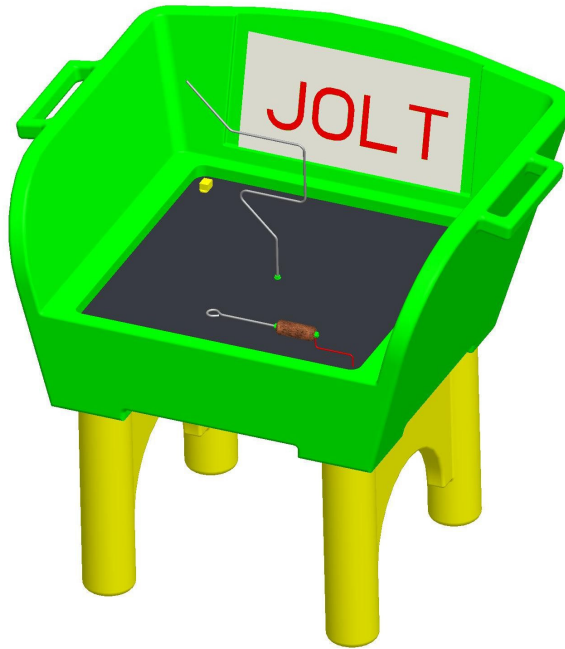

APPLY GAME DECAL

 1. The decal has a magnetic backing.
2. Place magnetic side of decal onto metal plate on back surface of game base.

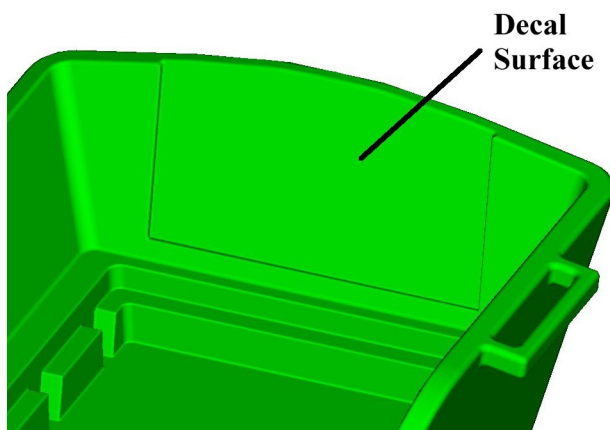

OPERATING INSTRUCTIONS

1. The player holds the wood-handled wand.
2. Player moves the round end of the wand over the end of the wire maze. They must follow the wire maze to the bottom without touching it and sounding the buzzer. If they succeed, they win.
3. To make the game more challenging, offer them double or nothing if they can go back to the top without touching.

CARE AND CLEANING

As required, soap and water may be used to clean the game base, legs and inserts. Wipe dry with a clean dry cloth.

ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include you model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com

PARTS LIST

1	52111	Legs (Yellow Only)
2	7750	Base (Red)
3	7752	Base (Green)
4	7751	Base (Blue)
5	7753	Base (Yellow)
6	52102	Wall Transformer
7	52303	Wire Maze
8	52304	Handle Wire
9	52305	Insert - Jolt
10	52306	Buzzer - 12VDC
11	52307	Magnetic Sign - Jolt
12	52323	Handle Drilled
13	42441	#10-32 Flanged Lock Nut
14	52109	Power Jack Assembly

SPECIFICATIONS

Game Base with Legs attached:

 
Height: 35 inches

Width: 41-1/4 inches

Depth: 29-1/2 inches

Inserts: 23 inches X 23 inches

ELECTRICAL SCHEMATIC

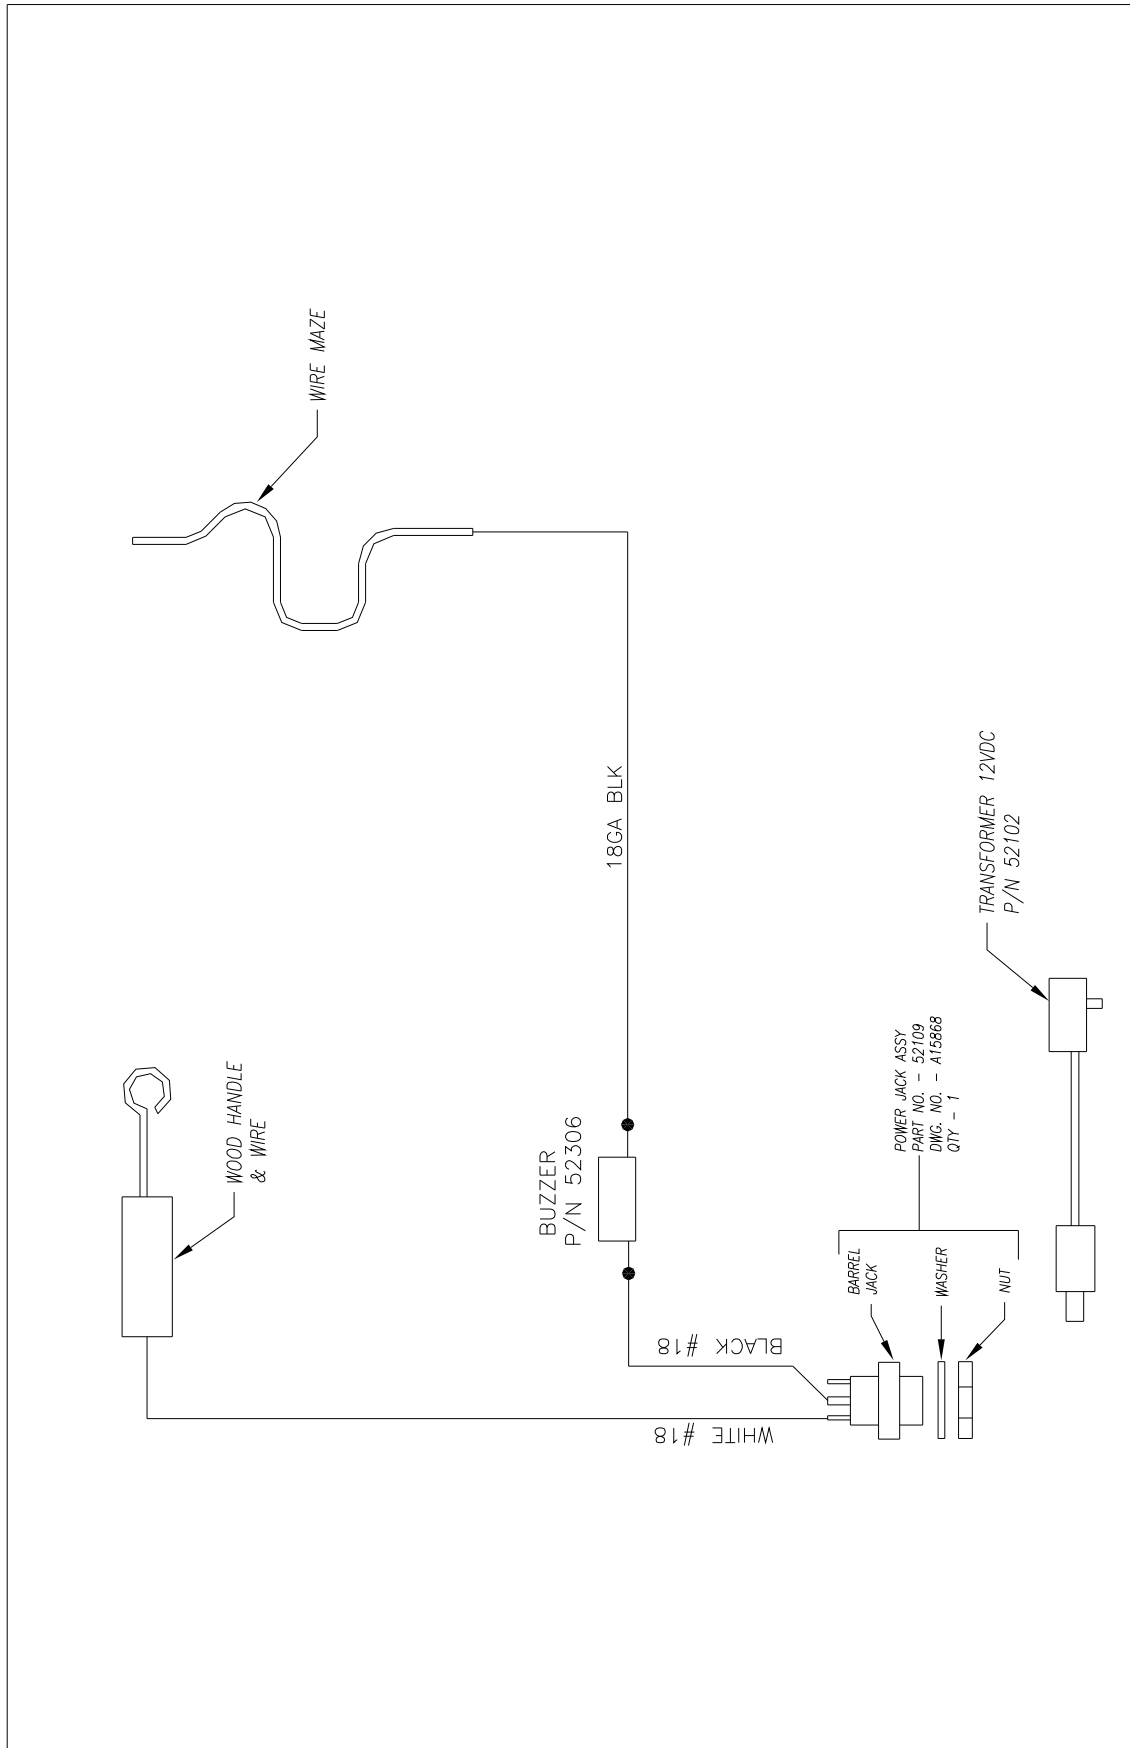

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA