



Instruction Manual

Pretzel & Bun Warmer

Model No. 8020



GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



SAFETY PRECAUTIONS

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. 008GEND1012
	⚠ WARNING To avoid burns, do NOT touch heated surfaces. Do NOT place or leave objects in contact with heated surfaces. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)</i> 009GHW1012
	⚠ WARNING ALWAYS wear safety glasses when servicing this equipment. 010GENW1012
	⚠ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 011GENW1012
	⚠ CAUTION Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012GENC1012
	⚠ CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18. 007GENC1012

NOTE: Improvements are always being made to Gold Medal Products' equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions.



INSTALLATION INSTRUCTIONS

Checking Shipment

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

Setup

Remove all packing material and tape before starting operation.

Electrical Requirements

8020: 120V, 1200W, 60Hz

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.

Your electrician must furnish sufficient power for proper machine operation. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter.
5. Install the unit in a level position.



OPERATING INSTRUCTIONS

Controls and Their Functions



Power Control



Temperature Control

Operating Instructions

1. Press the rocker switch to turn the machine on.
2. Turn the heat control knob to "HI" and allow the warmer to pre-heat for 20-30 minutes.
3. Place up to 32 pretzels in the drawer, or remove the dividers and place buns in the drawer.
DO NOT use volatile food products.
4. Allow the product to heat for approximately 20 minutes.
5. Finally, adjust the heat control for desired warmth before serving.

Cleaning Instructions

1. Allow the machine to cool and then wipe the outside down with a damp soapy cloth. The stainless steel body of the Steamer can be kept clean with cleaner designed for stainless steel and a clean cloth. We recommend Gold Medal Products Company's authentic Watchdog Stainless Steel Polish (Part No. 2088.)
2. Remove all interior components.
3. Wash all interior parts as necessary with soap and water.
4. Clean bottom portion of unit with damp cloth and dry.
DO NOT use abrasive cleaners on the stainless steel body.



⚠ DANGER

Machine must be properly grounded to prevent electrical shock to personnel.
DO NOT immerse in water.
Always unplug the equipment before cleaning or servicing.

Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.



MAINTENANCE INSTRUCTION

	⚠ DANGER Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury or death. Read the installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.
	⚠ DANGER Do Not immerse the equipment in water. Unplug your machine before servicing.
	⚠ WARNING Adequate eye protection must be used when servicing this equipment to prevent eye injury.
	⚠ CAUTION THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862

(513) 769-7676

Fax: (800) 542-1496

 
(513) 769-8500

E-mail: info@gmpopcorn.com

Web Page: www.gmpopcorn.com




Cabinet Exterior

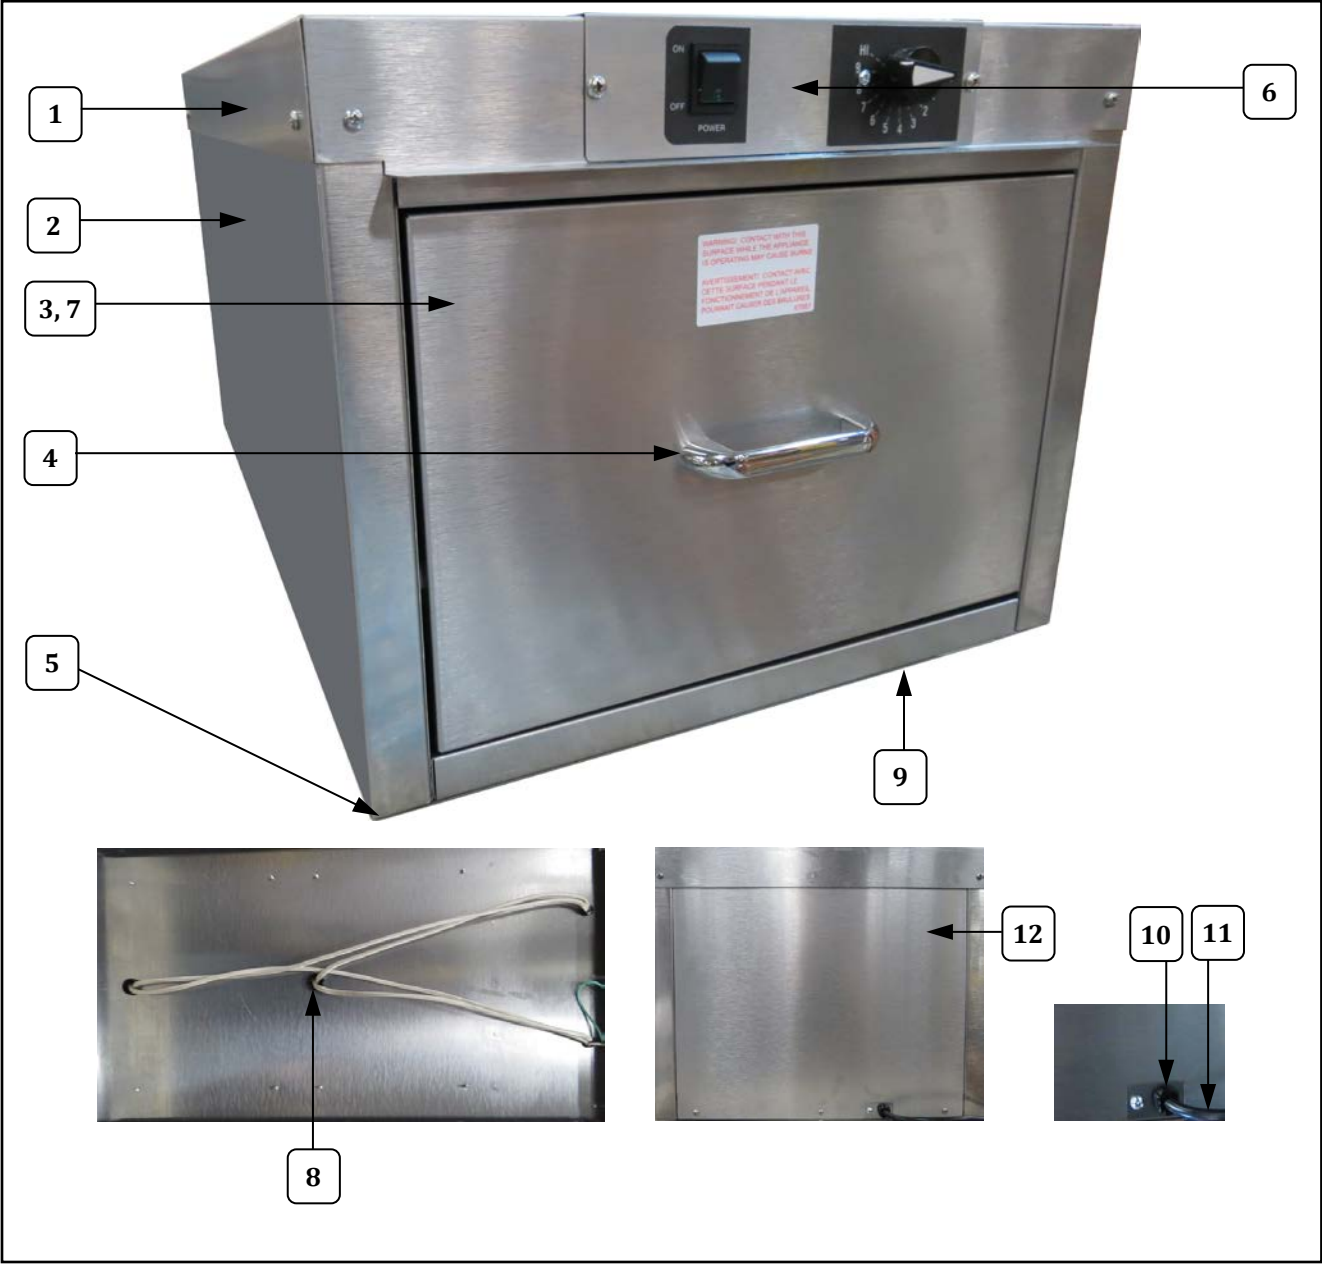

Item	Part Description	Qty.	Part No.
			8020
1	DOME WELDMENT	1	17595
2	SIDE PANEL	2	17580
3	DRAWER FRONT	1	17582
4	DRAWER HANDLE	1	87420
5	RUBBER FEET (Not Shown)	4	47155
6	CONTROL PANEL	1	17597
7	DRAWER REAR (Behind/Inside Drawer Front)	1	17584
8	BUSHING SNAP	6	47236
9	COVER PLATE (Not Shown)	1	17575
10	STRAIN RELIEF	1	87163
11	LEAD IN CORD 15A PLUG	1	22038
12	REAR PANEL	1	17598



 
Cabinet Interior

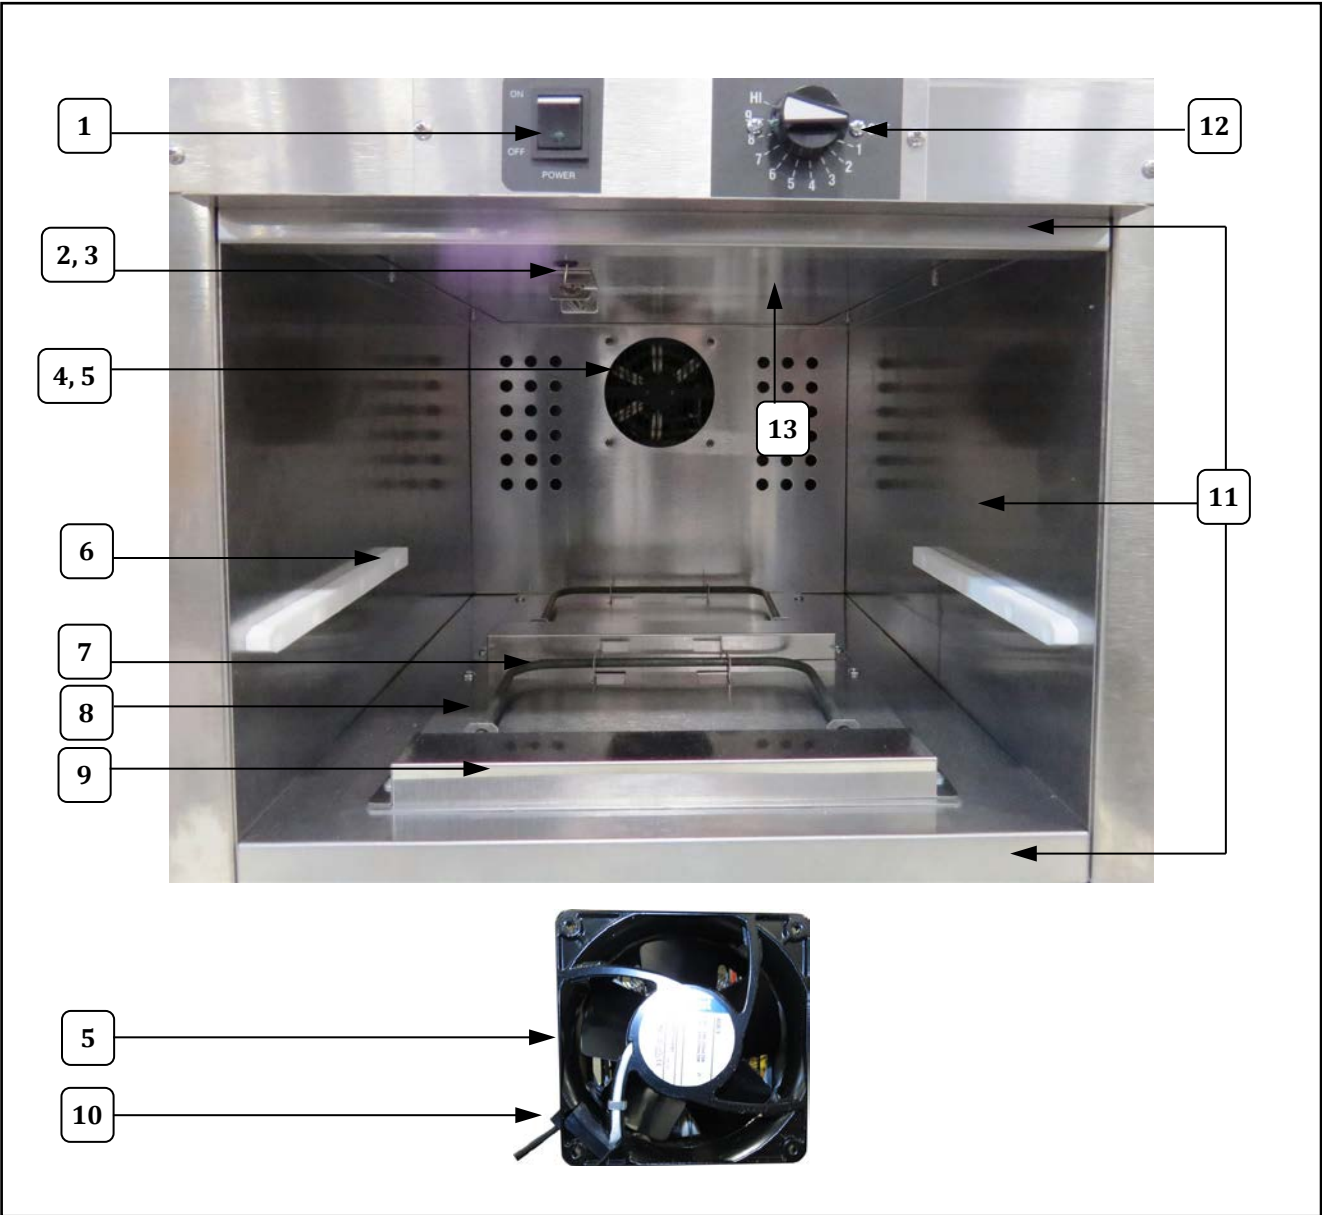

Item	Part Description	Qty.	Part No.
			8020
1	LIGHTED ROCKER SWITCH	1	42798
2	BULB HOLDER	1	17591
3	HEAT CONTROL	1	87429
4	600W HEAT ELEMENT	1	74264
5	AXIAL FAN	1	40721
6	SLIDE	2	17705
7	120V 300W HEAT ELEMENT	2	87428
8	ELEMENT HOLDER	2	17581
9	ELEMENT COVER	2	17590
10	BLOWER PLUG AND CORD	1	47199
11	CHAMBER WELDMENT	1	17579
12	KNOB CONTROL	1	38389
13	COVER PLATE	1	17653



 
Drawer Interior

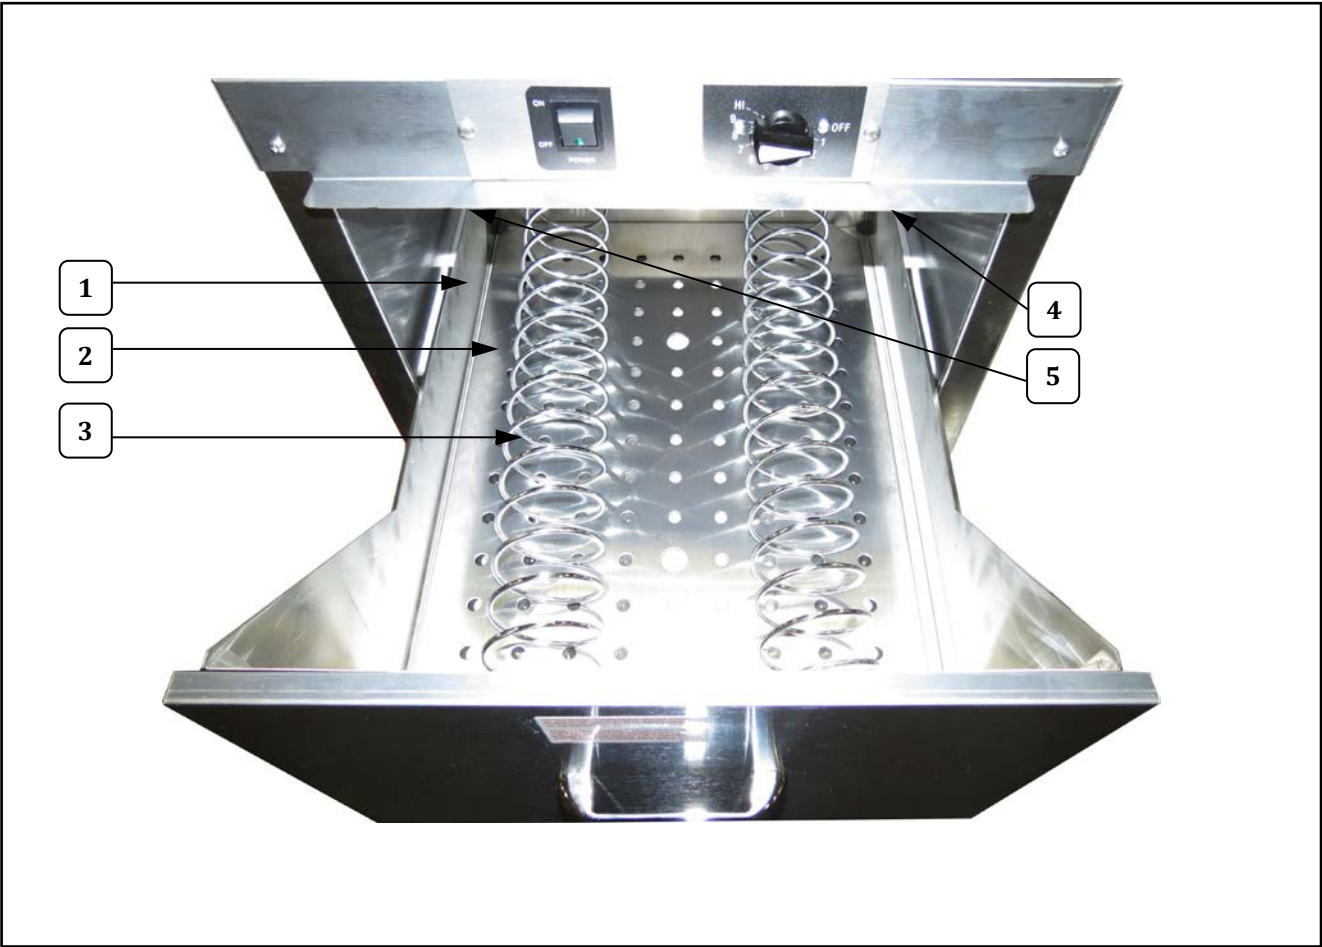

Item	Part Description	Qty.	Part No.
			8020
1	DRAWER WELDMENT	1	17587
2	FALSE BOTTOM	1	17860
3	PRETZEL DIVIDERS	2	17654
4	DRAWER STOP	1	17721
5	DRAWER STOP	1	17722



 Wiring Diagram

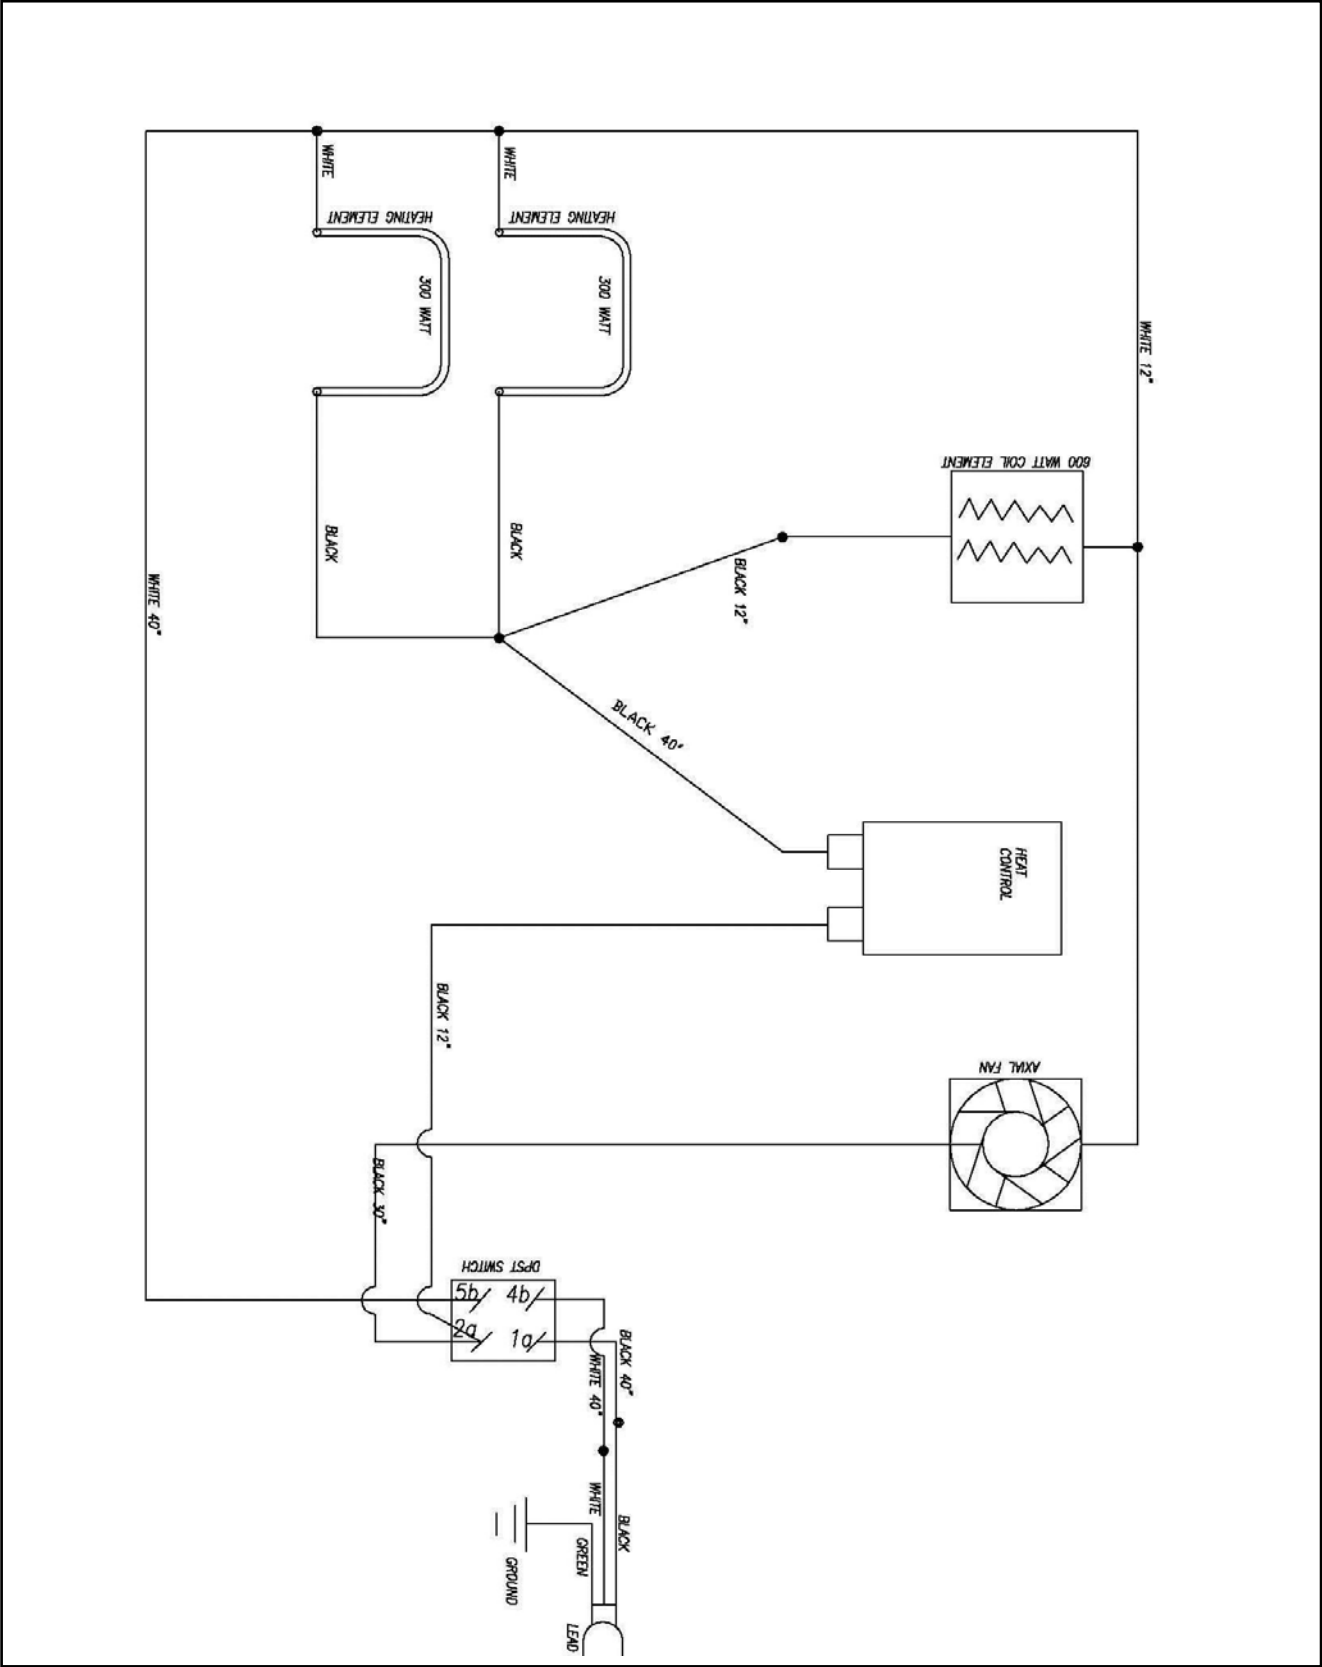



WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: (800) 543-0862

(513) 769-7676

Fax: (800) 542-1496

(513) 769-8500