

BIG WES - CHARCOAL GRILL

Operating Manual

Models: 8098 & 8099



Model # 8098



Model # 8099



Cincinnati, OH 45241-4807 USA

Operating Instructions

Assembly:

1. Unbox grill, being careful to remove all packing materials.
2. Firmly screw legs into couplings on the bottom of the grill.

Set-up and Operation:

1. **The Big Wes grill is for outdoor use only.**
2. Place grill on a level surface and lock the casters in place.
3. Clear area of all combustible material.
4. Remove grill top and line firebox with aluminum foil.
5. Place 40-50 pounds of charcoal in three even piles in firebox.
6. Light charcoal according to manufacturers directions.
7. When charcoal is hot, spread it evenly in the firebox.
8. Before placing grill top on firebox spray grill top with vegetable oil to prevent food from sticking.
9. 10-15 pounds of charcoal may be added every hour as needed.
10. Use a spray bottle of water to help control flare-ups.

Care and Cleaning:

1. Remove grill top from firebox immediately after cooking. (This prevents baked on grease and aids in clean up.) **Caution: firebox and grill top will be hot!**
2. Allow charcoal to cool naturally. When cool, dispose of foil and charcoal in an approved manner.
3. **Never pour water on hot charcoal, this will damage the firebox.**
4. When grill top is cool, clean with non-metallic scrubber. **Do not use a wire brush on grate, this will damage finish.**
5. Clean cool firebox with soap and water, and allow to completely dry before storing.

Replacement Parts:

89976	Firebox (legs not included)
89983	Leg
89980	Caster
89981	Locking Caster
89975	Grill Top for 8098
89970	Grill Top for 8099
89973	Grill Top Support for 8099

Gold Medal Products Co.

10700 Medallion Drive

Cincinnati, Ohio 45241-4807

phone: 513-769-7676 • 800-543-0862 • fax: 513-769-8500

www.gmpopcorn.com • e-mail: info@gmpopcorn.com

SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496