
Blendtec EZ 600 Diagram and Parts List

EZ 600 MOTOR BASE ASSEMBLY					
	Diagram number	Item number	Quantity	Per series	Product name
	1	10-008	1	1	Ring, Tolerance, 8mm Bearing, Waffle Spacer / Ring, Toleranc
	2	10-011-C05G	2	1	Screw, STML, SST, CR, #6-20 x 5/8in, PHP / Screw, STML, SST,
	3	10-020-F06RT	1	1	Nut, Steel, ZP, UNF, 1/4-28, Nylon Insert, RH, Thin / Nut, S
	4	10-022-01F01N	1	1	Washer, Type A, #12, ZP, Narrow, Flat / Washer, Type A, #12,
	5	10-025-01	1	1	Switch, Power, Rocker, O-I, Single Pole, 16A-125V, 10A-250V
	7	10-029-14	1	1	Wire, Jumper, 16 AWG, Green w/Yellow Stripe, 8.0in L, 1/4in
	9	10-029-16	1	1	Wire, Jumper, 16 AWG, Blue, 5in L, 1/4in Female Tab x 1/4in
	10	10-029-17	1	1	Wire, Jumper, 16 AWG, Brown, 10.0in L, 1/4in Flag Female Tab
	11	10-030-03	2	1	Brush, 120V/240V / Brush, 120V/240V
	12	10-031-06	1	1	Connector, Closed End, LG Bell / Connector, Closed End, LG B
	13	10-044-03	1	1	Retainer, Wire, Plastic, Adhesive Mount / Retainer, Wire, Pl
	14	10-067-03	1	1	Spring, Wave, Overlap, Single Turn, OD .875, ID .62, Hght .1
	15	10-110-06	1	1	Cable Tie, Nylon 6/6, 0.100in W x 8in L / Cable Tie, Nylon 6
	16	10-201-03	1	1	Cup, Rubber, Bearing / Cup, Rubber, Bearing
	17	10-231-05	1	1	Ground Lead, 10in L with 1/4in Tab Connector / Ground Lead,
	18	10-245-01	2	1	Screw, Custom, SST, CR, 8-18 x 3-1/8in, PHP, Type 25, Blk /
	19	10-271	1	1	Grounding Wire w/Ferrite / Grounding Wire w/Ferrite
	20	15-443-15	1	1	Electronic Assembly with Firmware, ES3, Three size w/code se
	21	20-202-62	1	1	Overlay, touchpad, Switch, SML, 4 button / Overlay, touchpad
	22	20-214	1	1	Spacer, Fan / Spacer, Fan
	23	20-217-01	1	1	Sling Ring, Large I.D. / Sling Ring, Large I.D.
	24	20-228-02	1	1	Fan Blade, Uneven, LH, 7 Blade / Fan Blade, Uneven, LH, 7 Bl
120V	27	20-302	1		Armature Assembly, 1-1/2in Stack, 120V, Ametek / Armature As
240V		20-310	1	1	Armature Assembly, 1-1/2in Stack, 240V / Armature Assembly,
120V	28	20-303	1		Field Assembly, Blender, 1-1/2in Stack, 120V / Field Assembl
240V		20-311	1	1	Field Assembly, 1-1/2in Stack, 240V / Field Assembly, 1-1/2i
	29	20-315-01	1	1	Magnetic Pickup Assembly, Q-Series, Board Connector / Magnet
	31	21-201-03	1	1	Cover, ES3, Blk / Cover, ES3, Blk
	32	21-211	1	1	Baffle, Square, ES3 / Baffle, Square, ES3
	33	21-301	1	1	Base Plate Assembly, ES3, with Feet / Base Plate Assembly, E
	34	21-803-07	1	1	Label, Display, EZ 600 / Label, Display, EZ 600
	35	28-005	1	1	Bracket, Motor, Fan End / Bracket, Motor, Fan End, Stealth
	36	28-027-01	1	1	Bracket, Shroud, Motor, For Magnetic Pickup Assembly / Brack
Cords					
AU cord		20-324-35	1	1	ASSEMBLY, POWER CORD, ES3/CTB2, AU, BLACK, GTSA, 3G, 1.00mm2
KR cord		20-324-36	1		ASSEMBLY, POWER CORD, ES3/CTB2, KOREAN, BLACK, SCHUKO, H05VV
UK cord		20-324-43	1		ASSEMBLY, POWER CORD, ES3/CTB2, UK, BLACK, HO5VV-F, 3G, 1.00
China cord	30	20-324-45	1		ASSEMBLY, POWER CORD, ES3/CTB2, CHINA, BLACK, HO5VV-F, 3G, 1
EU cord		20-324-46	1		ASSEMBLY, POWER CORD, ES3/CTB2, EU, SCHUKO, BLACK, OIL, H05R
TW cord		20-324-24	1		ASSEMBLY, POWER CORD, ES3/CTB2, TAIWAN, BLACK, HO5VV-F, 3G,
US cord		20-324-23	1		ASSEMBLY, POWER CORD, ES3/CTB2, USA, BLACK, NEMA 5-15P

Diagram

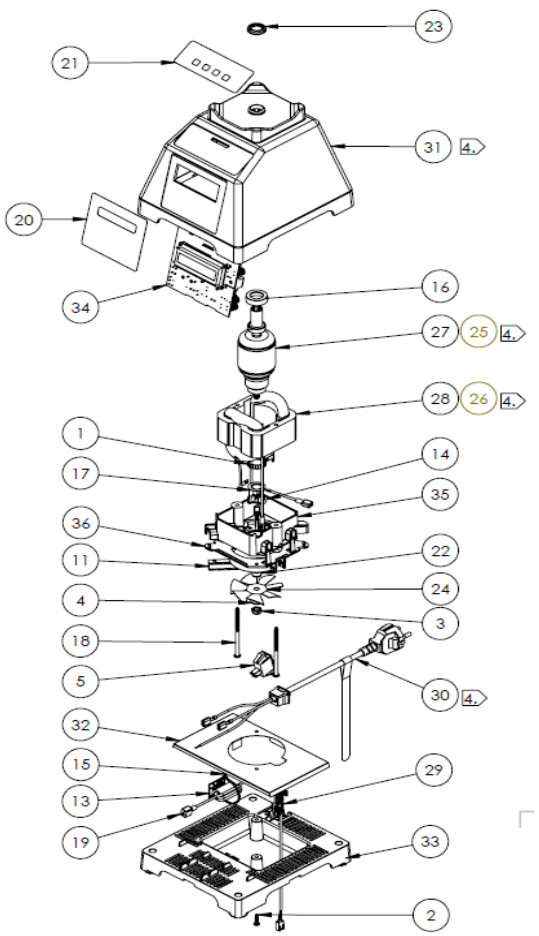

Error Code Definitions	
Code	Definition
E-01	Over Temperature
E-02	Overload
E-03	No Temp Sensor
E-04	No Zero Crossing
E-05	Reset Error