



Instruction Manual

Condiment Warmers

Model No. 2191, 2191EX, 2195, 2195EX, 2196, 2200,
2200EX, 2201, 2201EX, 2205, 2205EX



GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



SAFETY PRECAUTIONS

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. 008GEND1012
	⚠ WARNING To avoid burns, do NOT touch heated surfaces. Do NOT place or leave objects in contact with heated surfaces. (Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.) 009GHW1012
	⚠ WARNING ALWAYS wear safety glasses when servicing this equipment. 010GENW1012
	⚠ WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 011GENW1012
	⚠ CAUTION Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012GENC1012
	⚠ CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18. 007GENC1012

NOTE: Improvements are always being made to Gold Medal Products' equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions.



INSTALLATION INSTRUCTIONS

Inspection of Shipment

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

Setup

Remove all packing material and tape before starting operation. This warmer is designed to use a standard No. 10 tin that your product came in as the insert Bowl. An optional stainless steel insert bowl is available, Gold Medal Part No. 2194.

Electrical Requirements

2191, 2196, 2195, 2205: 120V, 320W, 60Hz

2200, 2201: 120V, 340W, 60Hz

2191EX: 230V, 330W, 50Hz

2195EX, 2205EX: 230V, 320W, 50Hz

2201EX, 2200EX: 230V, 340W, 50Hz

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.


Your electrician must furnish sufficient power for proper machine operation. We recommend this warmer be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

Before You Plug In Machine

1. Make sure that the wall outlet can accept the (3) prong grounded plug on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a (3) prong grounded to a (2) prong un-grounded adapter.

OPERATING INSTRUCTIONS

Controls and Their Functions

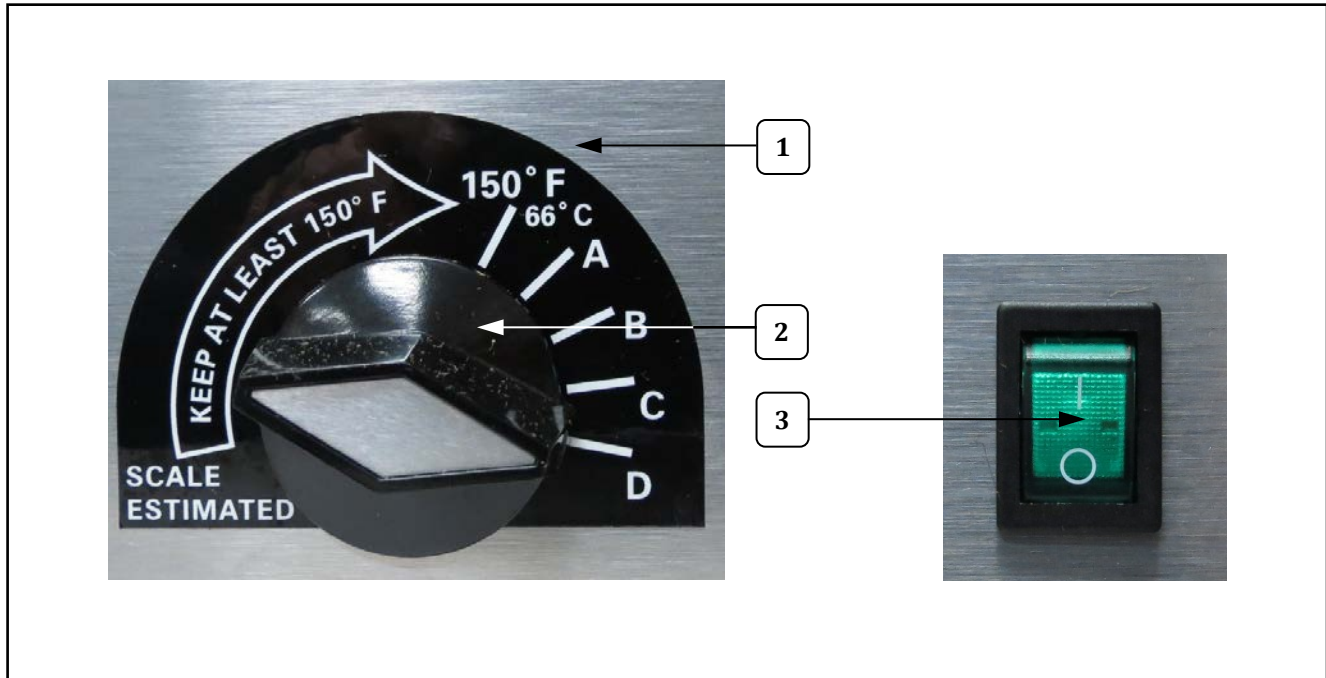

Item	Part No.	Part Description	Qty.
1	38303	TEMPERATURE SCALE	Display heat settings for the heat control knob
2	87049	KNOB HEAT CONTROL	Controls the heat of the warmer
3	42532	ROCKER SWITCH	Turns power on/off to the warmer

Operating Instructions

1. Place bowl spring and/or bowl platform in water tank.
2. Fill water tank to the top of the bowl spring with hot water.
3. Place No. 10 Tin or insert bowl into the unit.
(Bowl spring should be centered under the container).
NOTE: On pump model, contents must be preheated before inserting. The pump will not function if contents are too thick.
4. Place lock ring or pump over container, press down and turn until it locks into unit.
5. Turn the power switch "On."
6. Turn heat control to the extreme hot position for quick buildup of heat; after contents are heated, turn the heat control back to desired position.



CARE AND CLEANING

1. Unplug the machine and clean it after use.
2. Do not leave water in the pans overnight.
3. Clean the stainless steel covers with stainless steel cleaner. Gold Medal Products Company's Watchdog Stainless Steel Polish (P/N 2088) is recommended.
4. Make sure to clean all of the pans in order to sanitize them before each use.
5. Clean the outside of the unit with a soft cloth, soap and hot water.

	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. Always unplug the equipment before cleaning or servicing.
---	--

Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.



MAINTENANCE INSTRUCTIONS

	⚠ DANGER Do NOT immerse the equipment in water. Unplug your machine before servicing.
	⚠ WARNING Adequate eye protection must be used when servicing this equipment to prevent eye injury.
	⚠ CAUTION THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862

(513) 769-7676

Fax: (800) 542-1496

(513) 769-8500

E-mail: info@gmpopcorn.com

Web Page: www.gmpopcorn.com




Cabinet Exterior



Cabinet Exterior – Parts List


Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

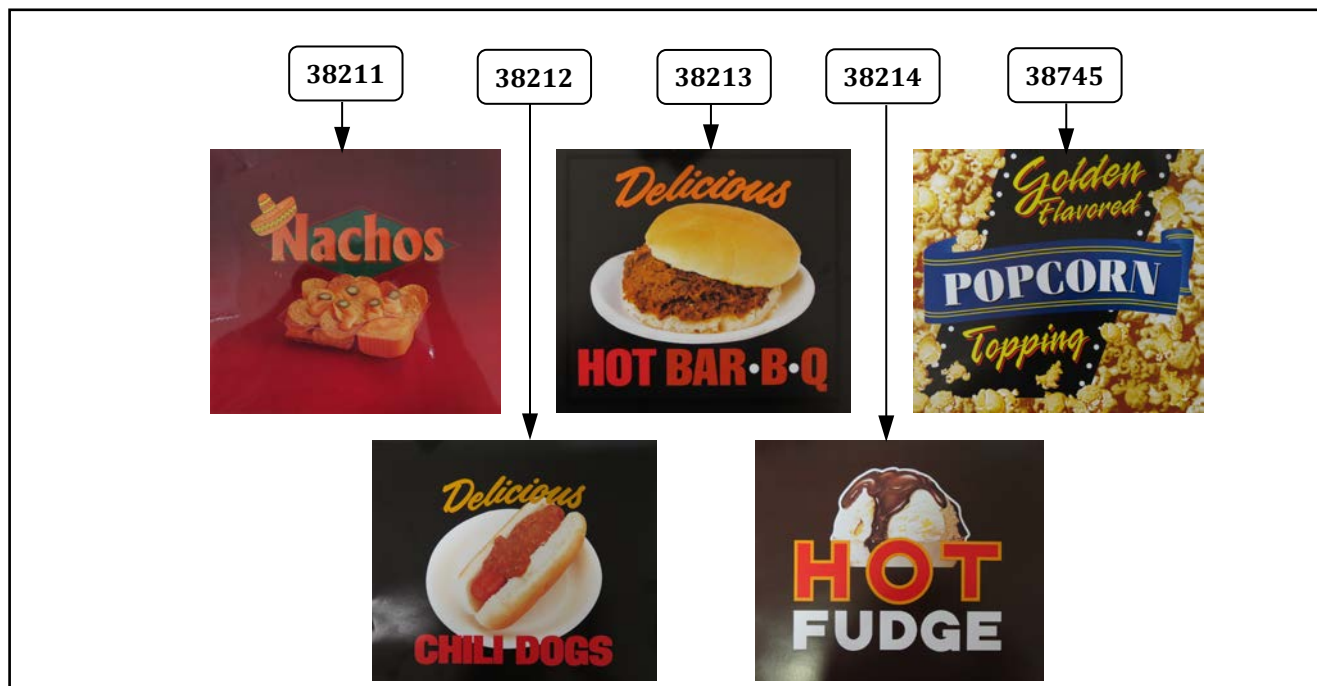



Cabinet Interior

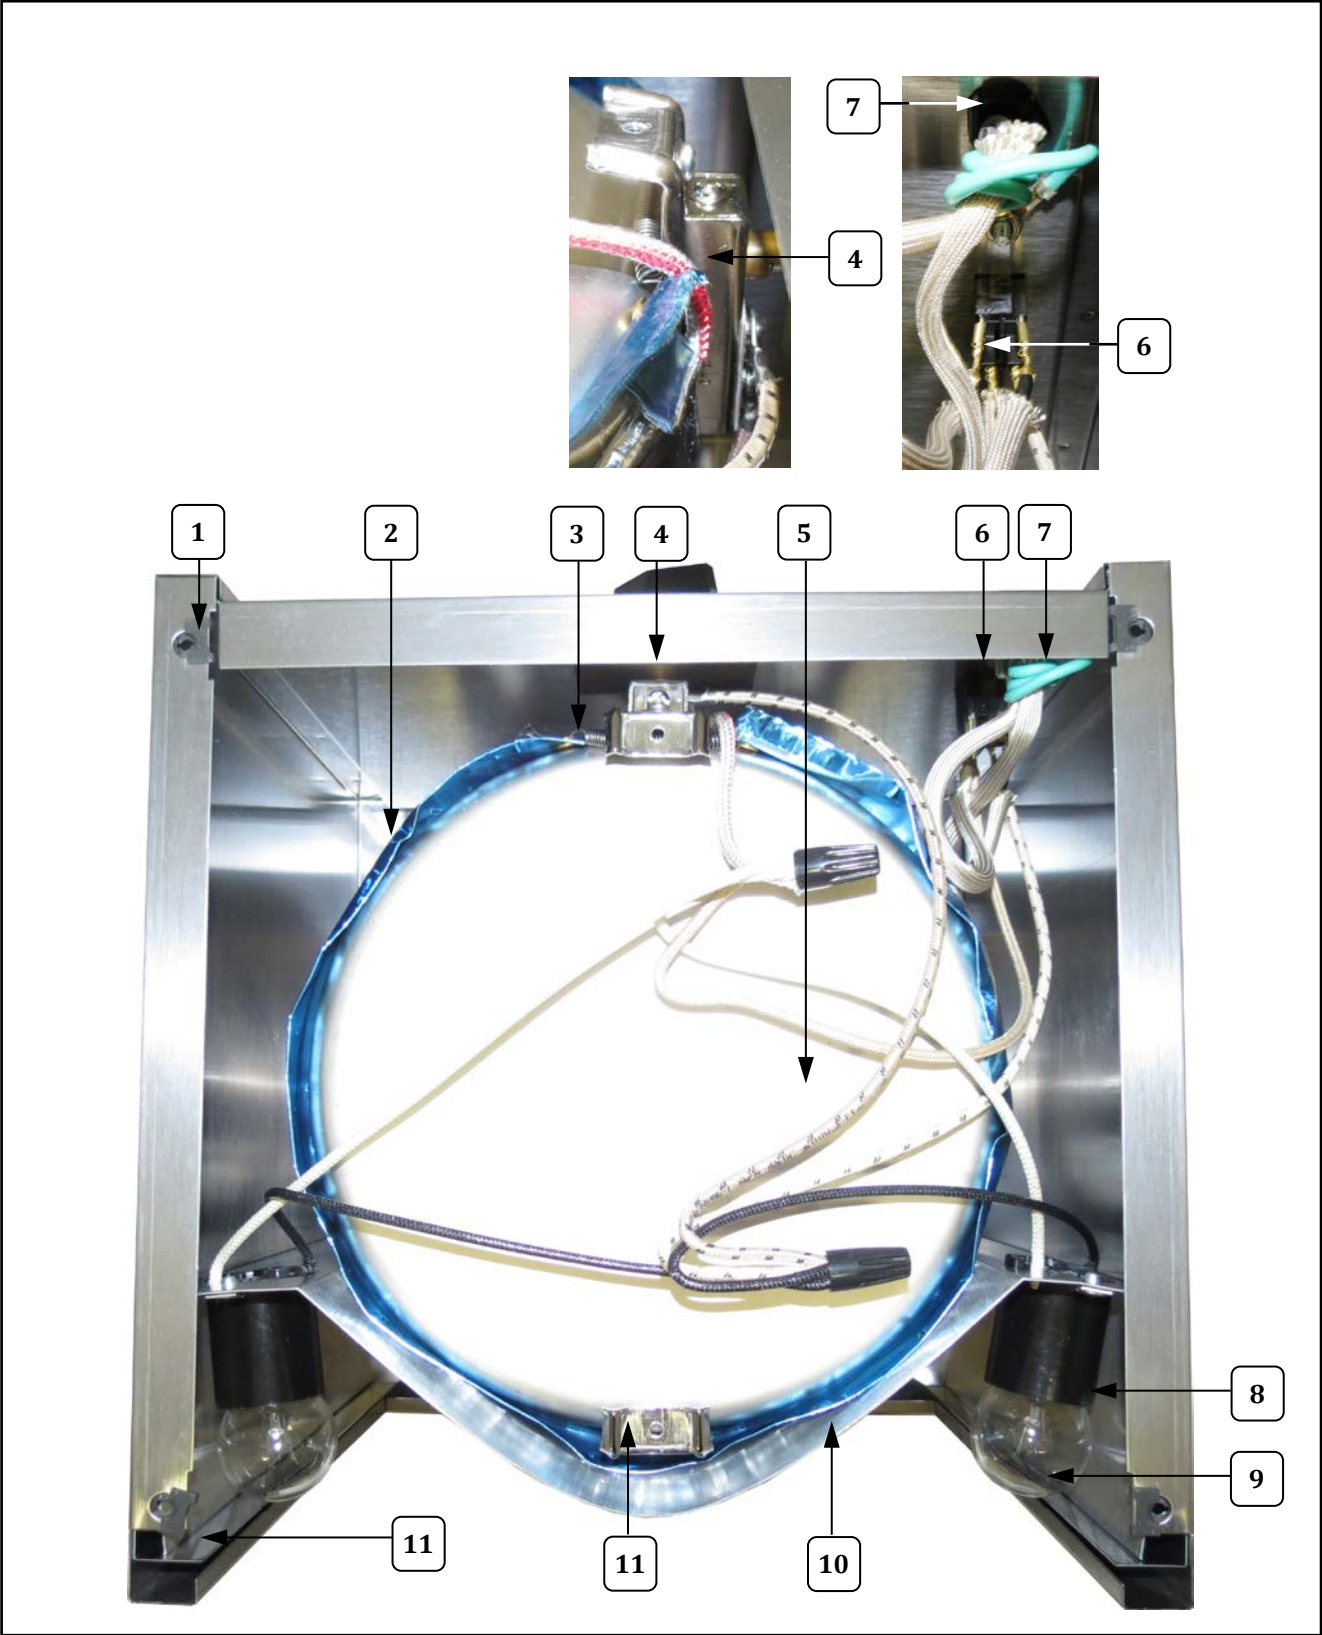



Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



Pump and Dipper






Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1	NOB		38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



WIRING DIAGRAM

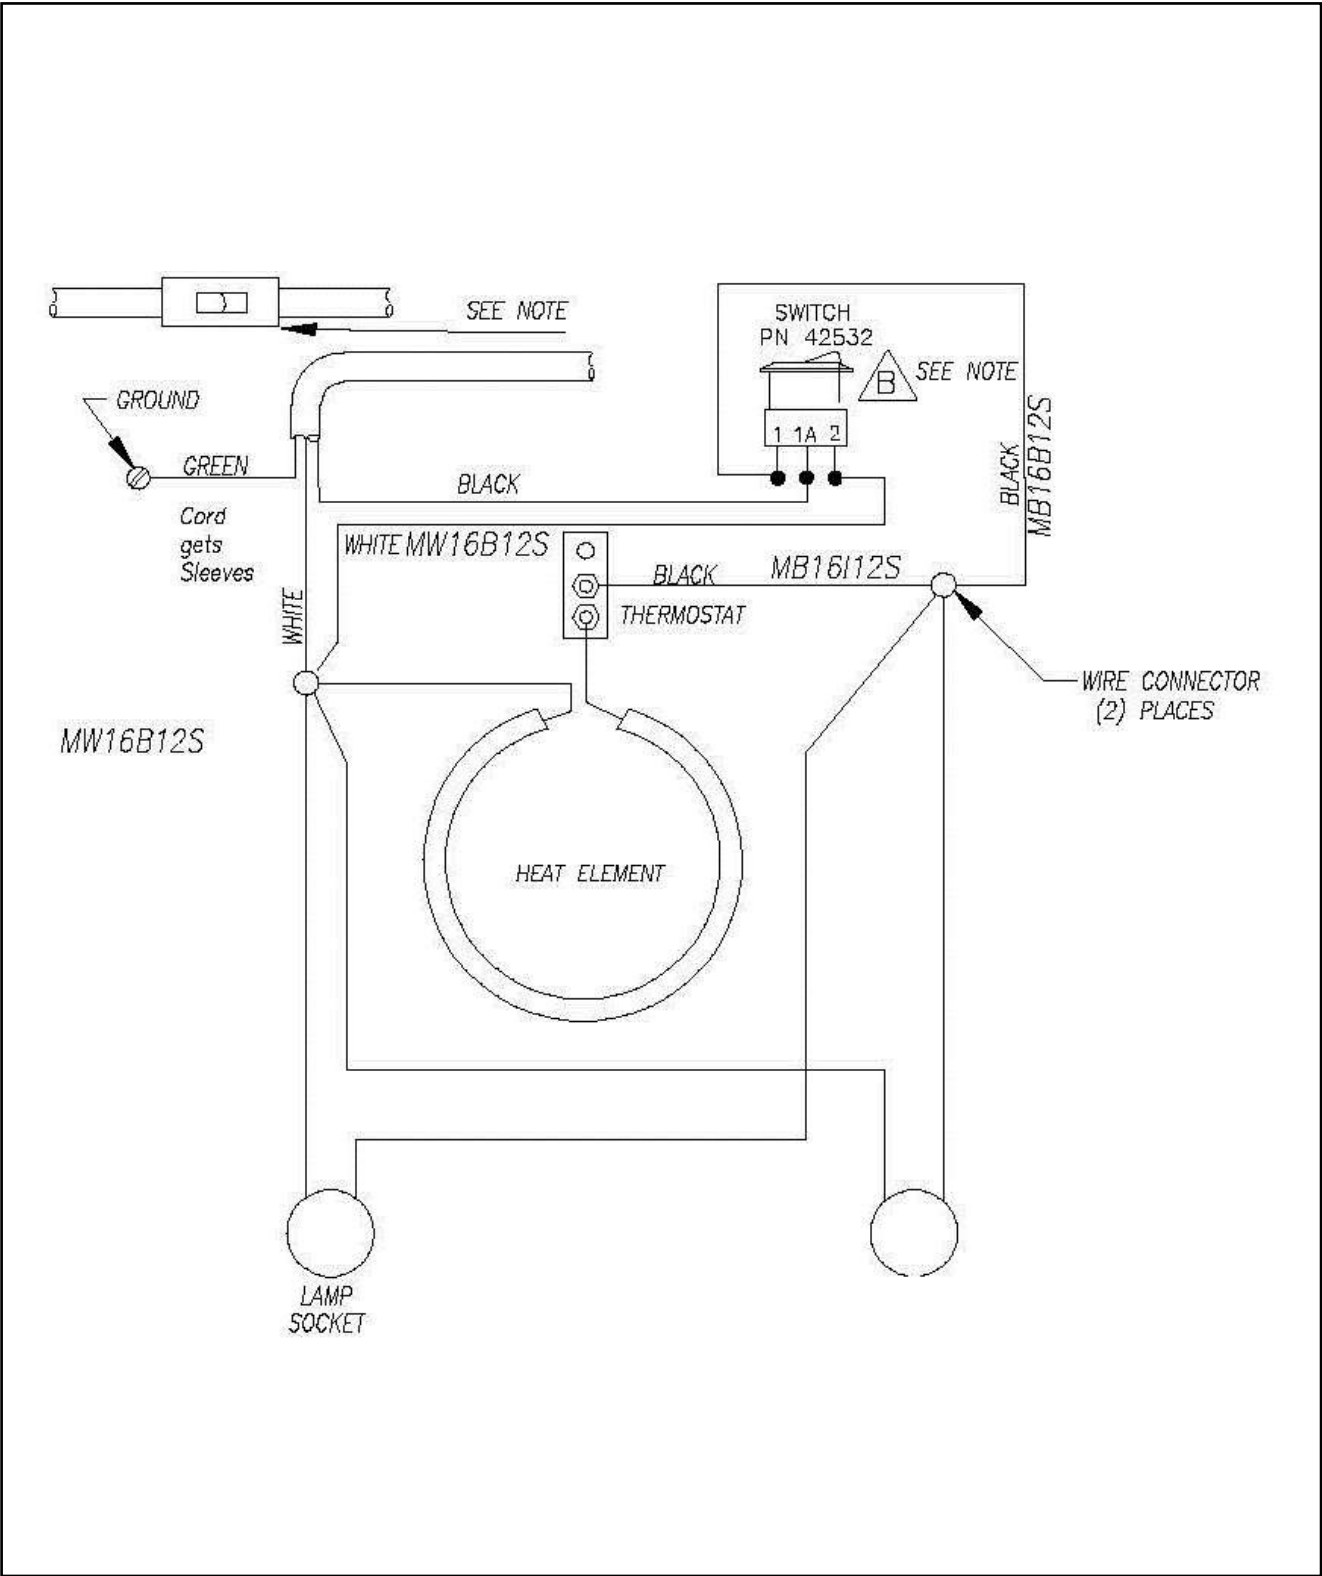



WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: (800) 543-0862

(513) 769-7676

Fax: (800) 542-1496

(513) 769-8500