

Heated Portion Pack Display Case

Part No. 74701
Revised June 1996

Instruction Manual
Model #5580BV4 and Model #5587




 **GOLD MEDAL**®

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

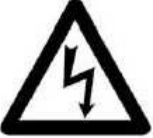	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION

Your new WARMER is shipped completely assembled, ready to operate. **NOTE:** This model is for portion pack cheese and prepackaged potentially non-hazardous food only.

After removing the corrugated carton from the machine, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company.

Remove all cardboard packing and tape from the machine. Wipe all exposed surfaces with a damp cloth to remove fingerprints, smears etc. which may have occurred during unpacking and handling.

ELECTRICAL REQUIREMENTS

Standard voltage for the warmer is 120 Volt, 60 cycle, single phase A.C. current. The switch to turn the unit ON / OFF is located under the door.

CARE AND CLEANING

The aluminum frame of the warmer is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. NEVER USE ABRASIVES on the aluminum framework. The glass should always be clean and sparkling. Remember the inside of the glass must be cleaned too. Empty out all product and remove shelves periodically, and clean inside of the machine. A damp cloth will usually pick up any debris.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

BULB REPLACEMENT

Remove screws over lighted sign out through the top. Pull the lamp from the socket.

GLASS REPLACEMENT

We do not ship glass, obtain from local glass shop or hardware store. Always purchase double strength type glass. Size is :

FRONT: 10 ¹⁵/₁₆" x 16 ¹/₂" x ¹/₈"

SIDE: 13 ⁵/₈" x 16 ¹/₂" x ¹/₈"

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net


CABINET ASSEMBLY – EXPLODED VIEW

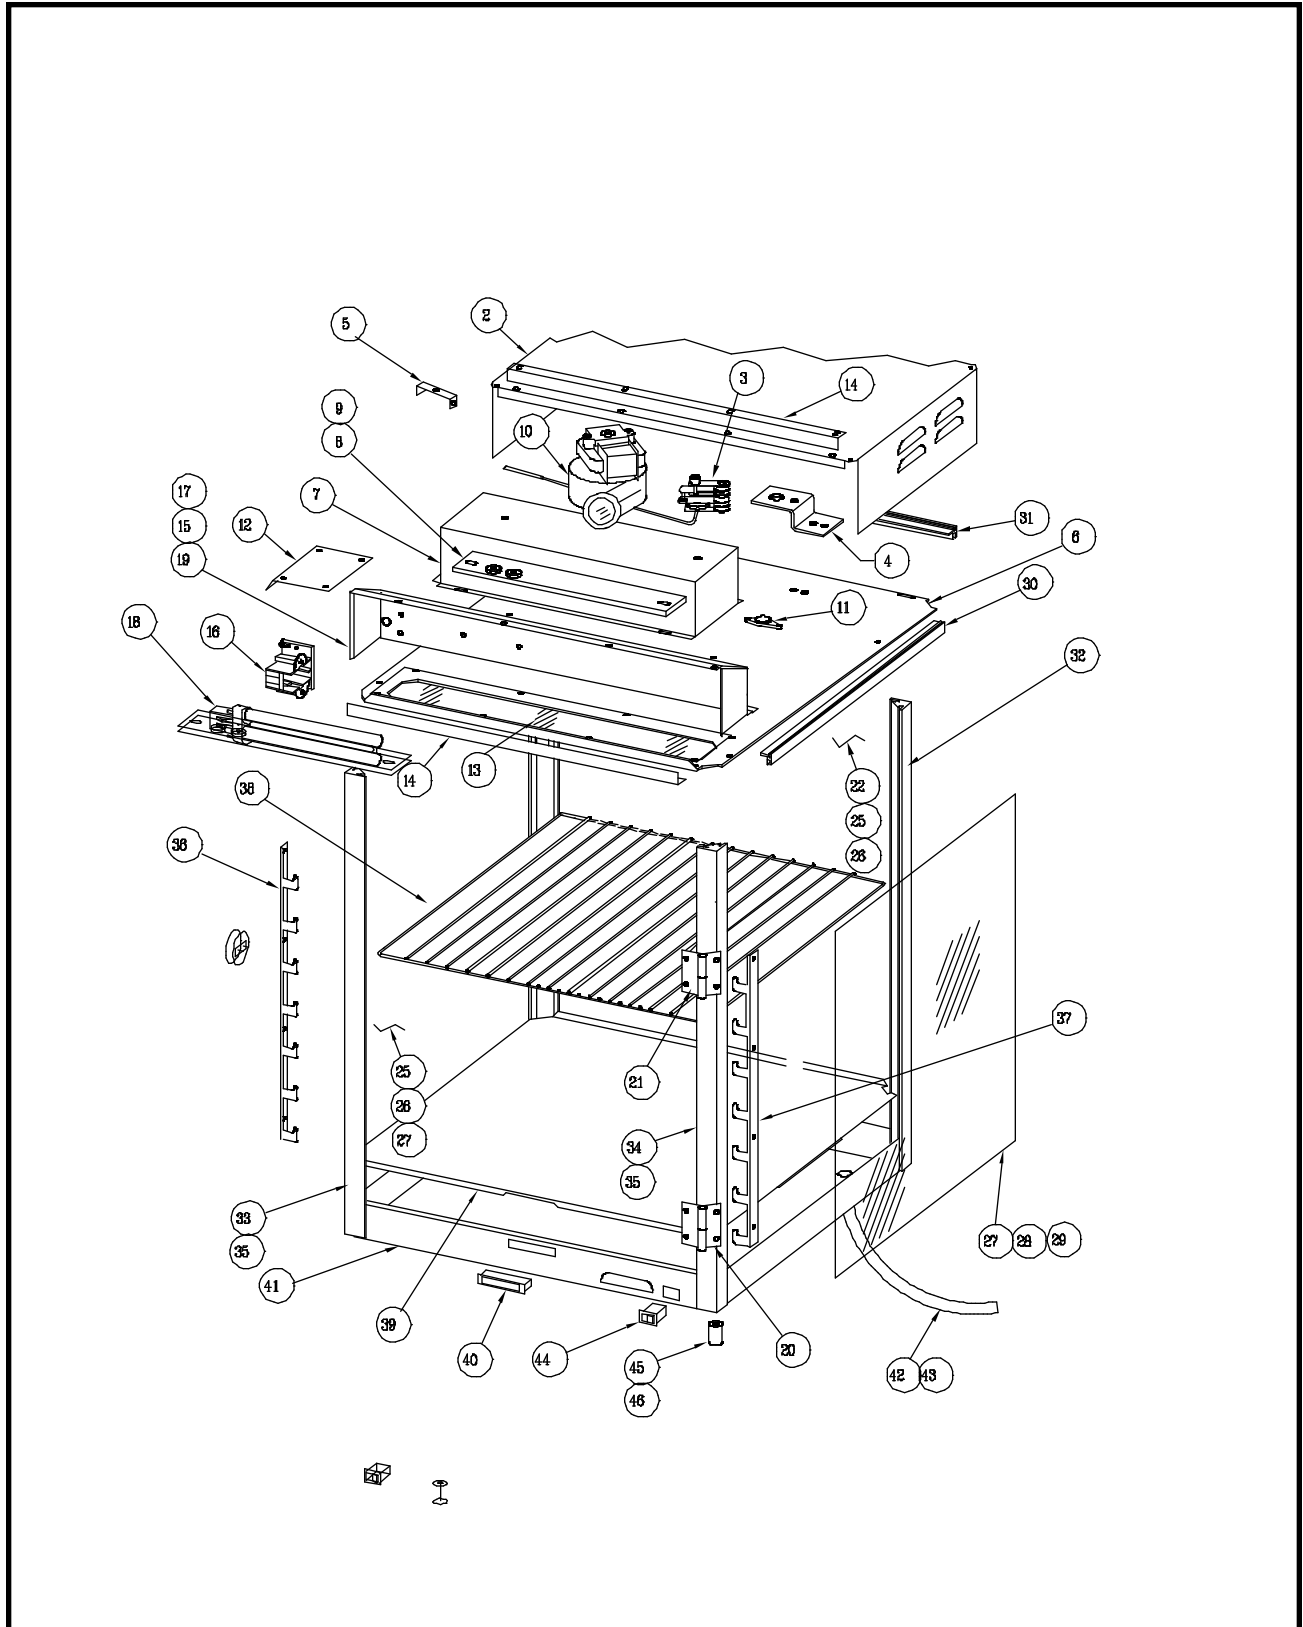

PARTS LIST – CABINET EXPLODED VIEW

Item No.	Model #5580BV4	Model #5587	Description
	Part No.	Part No.	
1	74704	74704	Cabinet Assembly
2	74703	74703	Top Cover
3	74747	74747	Bulb Thermostat
4	74667	74667	Thermostat Mount Bracket
5	40838	40838	Sensor Bracket
6	74705	74705	Motor Plate
7	74710	74710	Blower Box
8	74720	74720	Heat Element, 120V, 475 Watt
9	74737	74737	Blower Motor
10	74748	74748	Hi Limit, Thermostat
11	74775	74775	Air Guide
12	74708	74708	Light Tube Cover
13	74711	74711	Light Deflector
14	74709	74709	Sign Frame Angle
15	74713	74721	Sign
16	74726	74726	Light Socket
17	74725	74725	Ballast, 120V, 60 Hz
18	74727	74727	Lamp
19	74711	74711	Light Deflector
20	41350	41350	Male Hinge, Right
21	74168	74168	Female Hinge, Right
22	74715	74715	Front Glass Panel
23	74716	74716	Side Glass Panel
24	74717	74717	Glass Extrusion, 13 $\frac{5}{8}$ "
25	74718	74718	Glass Extrusion, 15 $\frac{5}{8}$ "
26	74719	74719	Glass Extrusion, 10 $\frac{7}{8}$ "
27	74714	74714	Door
28	47120	47120	Knob
29	75267	75267	Tee Bolt
30	74706	74706	Glass Channel, Side
31	74707	74707	Glass Channel, Front
32	76368	76368	Front, Corner Post
33	74729	74729	Left Rear, Corner Post
34	76370	76370	Right Rear, Corner Post
35	74167	74167	Corner Post, Filler
36	74730	74730	Shelf Support, Left Hand
37	74731	74731	Shelf Support, Right Hand
38	74712	74712	Rack
39	74722	74722	Drip Pan Assembly
40	47561	47561	Door Magnet
41	74724	74724	Bottom Cover
42	22038	22038	Lead-In Cord, 15 Amp.
43	87163	87163	Strain Relief
44	40324	40324	Switch SPST Rocker
45	49123	49123	Crutch Tip
46	47328	47328	Glide

ELECTRICAL SCHEMATIC

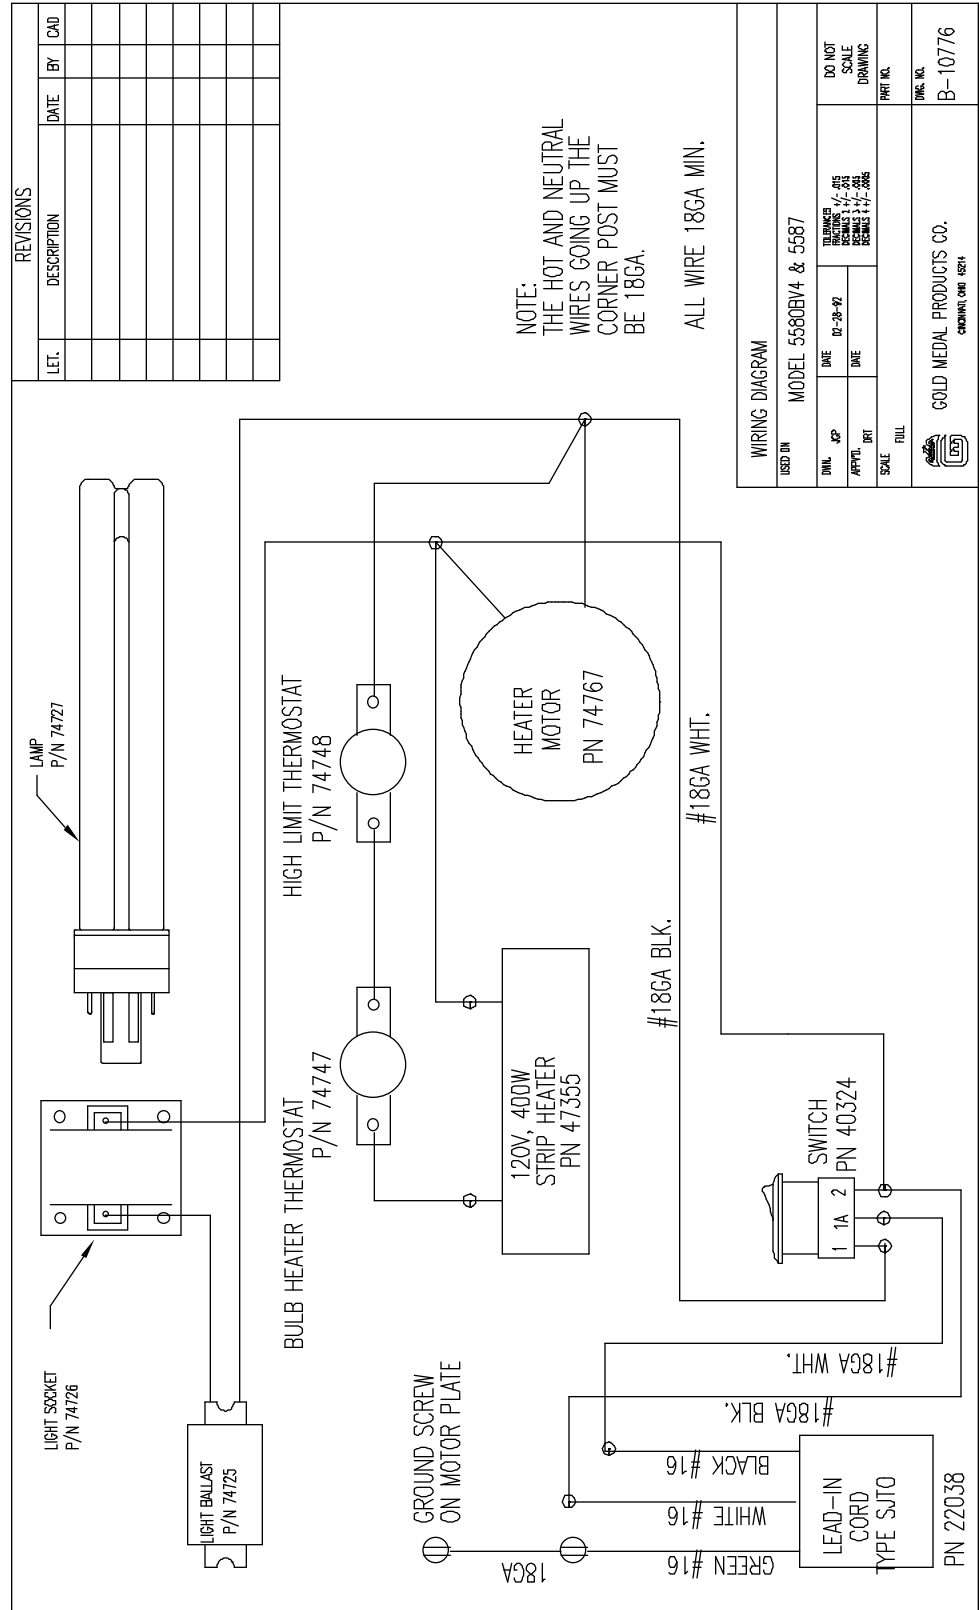

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA